


The Harman Kardon Model AVR20MKII AUDIO AND VIDEO RECEIVER

Technical Manual

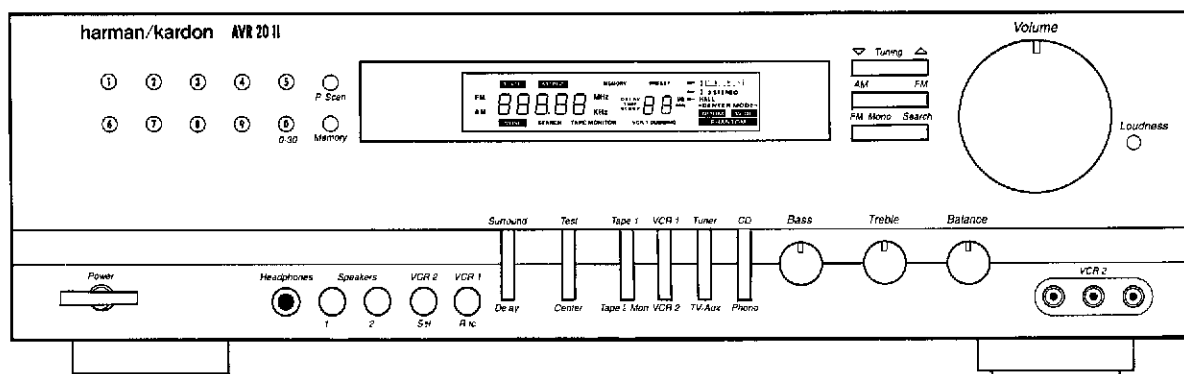

■ CONTENTS ■

SPECIFICATIONS	2	GENERAL UNIT	21
LEAKAGE TEST	4	PRINTED CIRCUIT BOARDS	22
BLOCK DIAGRAM	5	ELECTRICAL PARTS LIST	23
CONTROLS AND FUNCTIONS	6	IC FUNCTIONAL BLOCK DIAGRAM	28
DISASSEMBLY PROCEDURES	7	WIRING DIAGRAM	33
CIRCUIT DESCRIPTION	9	SCHEMATIC DIAGRAMS (I)	34
ALIGNMENT PROCEDURES	14	SCHEMATIC DIAGRAMS (II)	35
TROUBLESHOOTING	17	SCHEMATIC DIAGRAMS (III)	36
GENERAL UNIT PARTS LIST	20	SCHEMATIC DIAGRAMS (IV)	37

harman/kardon

Parts and Service Office
80 Crossways Park West, Woodbury, N.Y. 11797
1112-AVR20MKII G9604 1200 Printed in Korea

SPECIFICATIONS

FRONT AMP SECTION

	Nominal	Limit
RMS Output Power		
(STERE MODE), Input: CD	≥ 65 W	≥ 63 W
THD: 0.09%, 8 ohms		
Both Channel Driven (40 Hz - 10 kHz)		
(SURROUND MODE)	≥ 55 W	≥ 50 W
THD: 0.09%, 8 ohms, 1 kHz		
THD (40 Hz - 10 kHz) at 63 W, 8 ohms, Input: CD		
40 kHz	≤ 0.06%	≤ 0.09%
1 kHz	≤ 0.06%	≤ 0.09%
10 kHz	≤ 0.06%	≤ 0.09%
IM Distortion at 63 W, 8 ohms, Input: CD		
60:7000 Hz = 4:1	≤ 0.2%	≤ 0.3%
Input Sensitivity		
PHONO (MM)	2.5 mV	2.5 ± 0.4 mV
CD, AUX, VCR	150 mV	150 ± 30 mV
S/N Ratio Input Shorted at Volume Max. (WTD IHF-A)		
PHONO	≥ 74 dB	≥ 70 dB
CD, TAPE1,2	≥ 92 dB	≥ 90 dB
TV, VCR1,2	≥ 82 dB	≥ 80 dB
Phono Overload at 1 kHz, THD: 0.5%		
Phono Input → Tape Output	≥ 140 mV	≥ 130 mV
Phono Equalization (RIAA 30 Hz - 15 kHz)		
Tape Monitor Output	RIAA	RIAA ± 1.5 dB
Tone Control		
Bass: 100 Hz	+10 dB	+10 ± 2.0 dB
	-10 dB	-10 ± 2.0 dB
Treble: 10 kHz	+10 dB	+10 ± 2.0 dB
	-10 dB	-10 ± 2.0 dB
Loudness Contour at -40 dB		
100 Hz	+6 dB	+6 ± 2.0 dB
10 kHz	+3 dB	+3 ± 2.0 dB
Frequency Response (CD/AUX)		
20 Hz, 20 kHz	± 0.5 dB	± 1 dB
Channel Crosstalk Input Shorted		
1 kHz	≥ 60 dB	≥ 50 dB
10 kHz	≥ 50 dB	≥ 40 dB

CENTER AMP SECTION

	Nominal	Limit
RMS Output Power		
THD (0.3%, 8 ohms, 1 kHz)		
Only Center Channel Driven	≥ 55 W	≥ 50 W
S/N Ratio (Input Level: 350 mV)		
Input Shorted, IHF-A WTD	≥ 67 dB	≥ 65 dB
Frequency Response at -3 dB		
Normal	100 Hz - 20 kHz	150 Hz - 15 kHz
Wide	20 Hz - 20 kHz	50 Hz - 15 kHz

REAR AMP SECTION

	Nominal	Limit
RMS Output Power		
THD (0.7%, 8 ohms, 1 kHz)		
Only Rear Channel Driven	≥ 55 W	≥ 50 W
S/N Ratio (Input Shorted, IHF-A WTD)		
Delay: 20 ms, Input Level: 350 mV		
Dolby	≥ 60 dB	≥ 55 dB
Hall	≥ 60 dB	≥ 55 dB
Frequency Response at -3 dB		
8 ohms, Dolby Pro-Logic	80 Hz - 7 kHz	100 Hz - 6 kHz

VIDEO AMP SECTION

	Nominal	Limit
Input Sensitivity/Impedance		
VCR1, VCR2, VDP	1 V _{p-p} /75 Ω	± 1 dB
Output Level/Impedance		
VCR1, REC out, TV Monitor out	1 V _{p-p} /75 Ω	± 1 dB
Frequency Response at -3 dB	DC-10 MHz	5 - 6 MHz
Crosstalk at 1.0 MHz	≥ 45 dB	≥ 40 dB

FM SECTION

	Nominal	Limit
Tuning Cover Range		
USA/Canada: 75 kHz DIV.	87.5 - 107.9 MHz	
Europe: 40 kHz DIV.	87.5 - 108.0 MHz	
Usable Sensitivity (75 ohms Input)		
USA/Canada: 30 dB S/N	≤ 11.2 dbf	≤ 17.2 dbf
Europe: 26 dB S/N		
Image Rejection (at 106 MHz)		
USA/Canada	≥ 45 dB	≥ 35 dB
Europe	≥ 100 dB	≥ 90 dB
IF Rejection (at 90 MHz)	≥ 110 dB	≥ 100 dB
Full Limiting (at -3 dB)	≤ 12.2 dbf	≤ 15.2 dbf
50 dB Quieting Sensitivity (at 98.1 MHz, 100% MOD.)		
IHF Band Pass Filter		
Mono	≤ 17.2 dbf	≤ 23.2 dbf
Stereo: USA/Canada	≤ 40.2 dbf	≤ 43.3 dbf
Europe	≤ 45.3 dbf	≤ 48.3 dbf
Distortion (1 kHz, 100% MOD. at 98.1 MHz)		
IHF Band Pass Filter		
Mono	≤ 0.2%	≤ 0.5%
Stereo	≤ 0.4%	≤ 0.7%
S/N Ratio (1 mV Input, 100% MOD. at 98.1 MHz)		
IHF Band Pass Filter		
Mono	≥ 70 dB	≥ 65 dB
Stereo	≥ 65 dB	≥ 60 dB
Frequency Response (at +1 dB, -3 dB)		
	20 Hz - 15.5 kHz	30 Hz - 15 kHz
AM Rejection Ratio (100 uV - 20 mV Input)		
	≥ 60 dB	≥ 50 dB
Search Level (at 98.1 MHz)	31.2 dbf	31.2 ± 5 dbf
Automatic Stereo Threshold (at 98.1 MHz)		
	31.2 dbf	31.2 ± 5 dbf
Muting Threshold (at 98.1 MHz)	31.2 dbf	31.2 ± 5 dbf
Overload at 98.1 MHz		
(100% MOD. 100 mV RF Input)	≤ 0.2%	≤ 0.5%
Suprious Response (at 98.1 MHz)		
Antenna Input 3 uV	≥ 70 dB	≥ 60 dB
Capture Ratio at 40/60 dbf	≤ 2 dB	≤ 2.5 dB
Alternative Channel Selectivity (at 98.1 MHz ± 400 kHz)	≥ 65 dB	≥ 55 dB
Stereo Separation (at 98.1 MHz, 100% MOD., 1 mV Input)		
IHF Band Pass Filter		
100 Hz	≥ 40 dB	≥ 35 dB
1 kHz	≥ 45 dB	≥ 40 dB
10 kHz	≥ 35 dB	≥ 30 dB
Output Voltage (at 100% MOD., 1 kHz Input)		
Mono	500 mV	500 ± 150 mV
Stereo	450 mV	450 ± 150 mV

AM SECTION

	Nominal	Limit
Tuning Cover Range		
USA/Canada: 10 kHz Step	520 - 1710 kHz	
Europe: 9 kHz Step	522 - 11611 kHz	
Usable Sensitivity (400 Hz, 30% MOD., S/N 20 dB)		
	≤ 500 uV/m	≤ 1000 uV/m
Image Rejection (at 1400 kHz)	≥ 35 dB	≥ 30 dB
IF Rejection (at 600 kHz)	≥ 60 dB	≥ 50 dB
AGC Figure of Merit (From 100 mV/m at 1000 kHz)	≥ 50 dB	≥ 45 dB
Distortion (400 Hz, 30% MOD. 5 mV/m Input)	≤ 0.8%	≤ 1.5%
IF Bandwidth (6 dB Down, 350 uV/m)	6 kHz	4 - 11 kHz
Audio Response (5 mV/m Input 1 kHz 0 dB, 1000 kHz)		
at -6 dB	80 Hz - 2.3 kHz	100 Hz - 2 kHz
Selectivity (at 350 uV/m)		
± 10 kHz	≥ 35 dB	≥ 25 dB
S/N Ratio (1000 kHz, With Antenna Input 5 mV/m)	≥ 45 dB	≥ 40 dB

RF Overload (400 Hz 80% MOD, 100 mV/m Input)	$\leq 5\%$	$\leq 10\%$
Search Level (at 1000 kHz)	800 μ V	800 μ V \pm 6 dB
Output Voltage (400 Hz 30% MOD., 5 mV/m Input)	165 mV	165 \pm 40 mV
Whistle	$\leq 10\%$	$\leq 15\%$

○ GENERAL

Power Consumption;	
USA/Canada	180 W
Europe	500 W
Power Supplies;	
USA/Canada	AC 120 V, 60 Hz
Europe	AC 230 V, 50 Hz
Dimensions (W \times H \times D);	
inches	17 ^{3/8} \times 6 ^{1/8} \times 16 ^{1/2}
mm	440 \times 155 \times 420
Weight (lbs/kgs)	26.9/12.2

These specifications are service target specs.

Specifications and components are subject to change without notice.

Overall performance will be maintained or improved.


LEAKAGE TEST

Before returning the unit to the user, perform the following safety checks:


1. Inspect all lead dress to make certain that leads are not pinched or that hardware is not lodged between the chassis and other metallic parts in the unit.
2. Be sure that any protective devices such as nonmetallic control knobs, insulating fishpapers, cabinet backs, adjustment and compartment covers or shields, isolation resistor-capacity networks, mechanical insulators, etc. Which were removed for servicing are properly reinstalled.
3. Be sure that no shock hazard exists; check for leakage current using Simpson Model 229 Leakage Tester, standard equipment item No. 21641, RCA Model WT540A or use alternate method as follows: Plug the power cord directly into a 230-volt AC receptacle (do not use an Isolation Transformer for this test).



Using two clip leads, connect a 1500 Ohm, 10-watt resistor paralleled by a $0.15\mu\text{F}$ capacitor, in series with all exposed metal cabinet parts and a known earth ground, such as a water pipe or conduit. Use a VTVM or VOM with 1000 Ohms per volt, or higher sensitivity to measure the AC voltage drop across the resistor. (See Diagram.) Move the resistor connection to each exposed metal part having a return path to the chassis (antenna, metal cabinet, screw heads, knobs and control shafts, escutcheon, etc.) and measure the AC voltage drop across the resistor. (This test should be performed with the power switch in both the On and Off positions.)

A reading of 0.35 volt RMS or more is excessive and indicates a potential shock hazard which must be corrected before returning the unit to the owner.

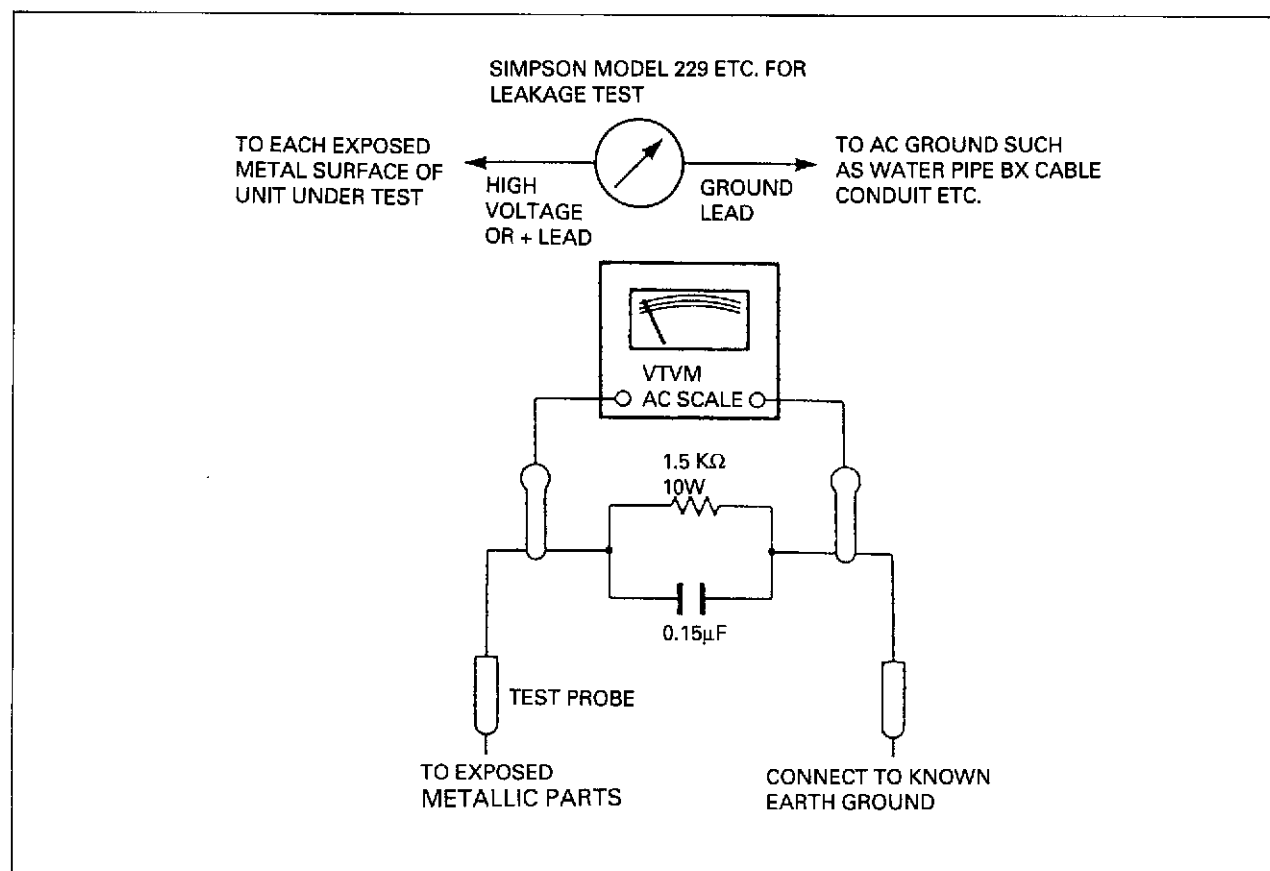


BLOCK DIAGRAM

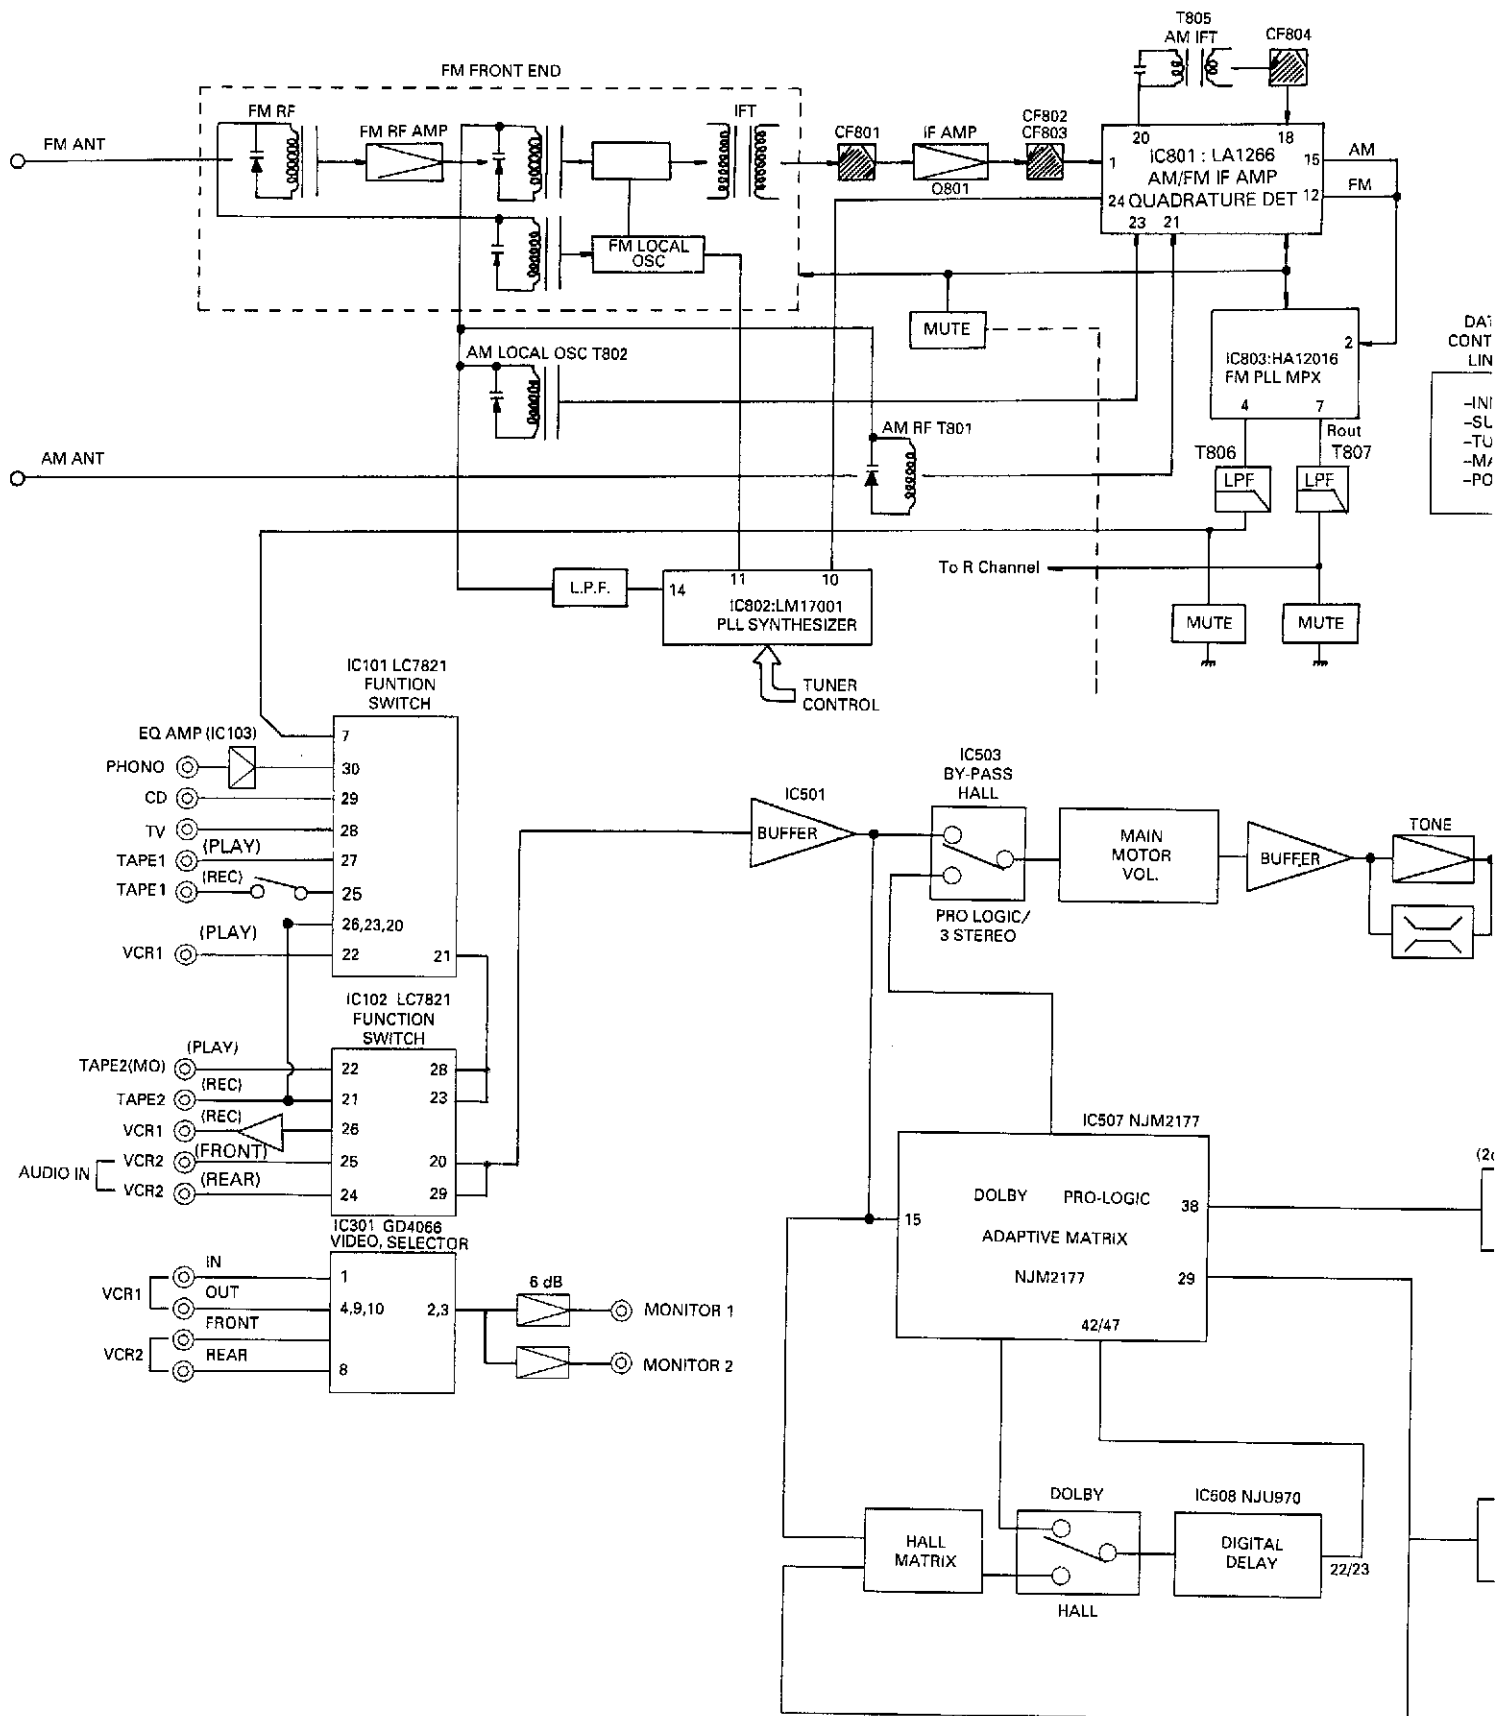

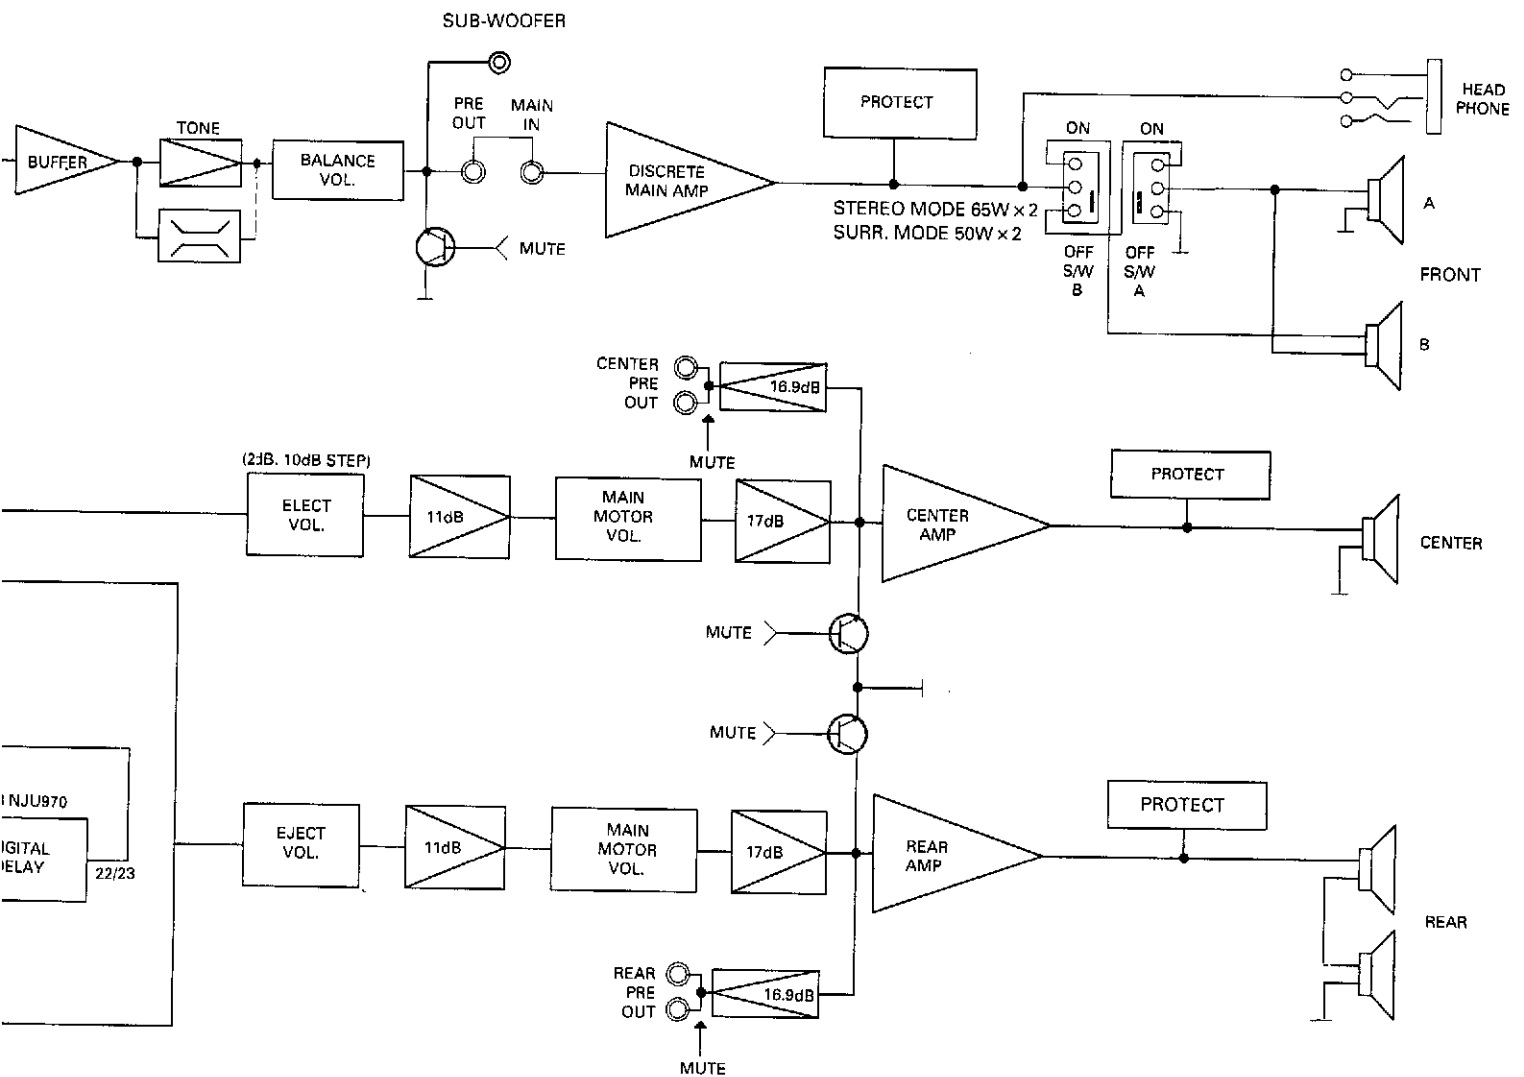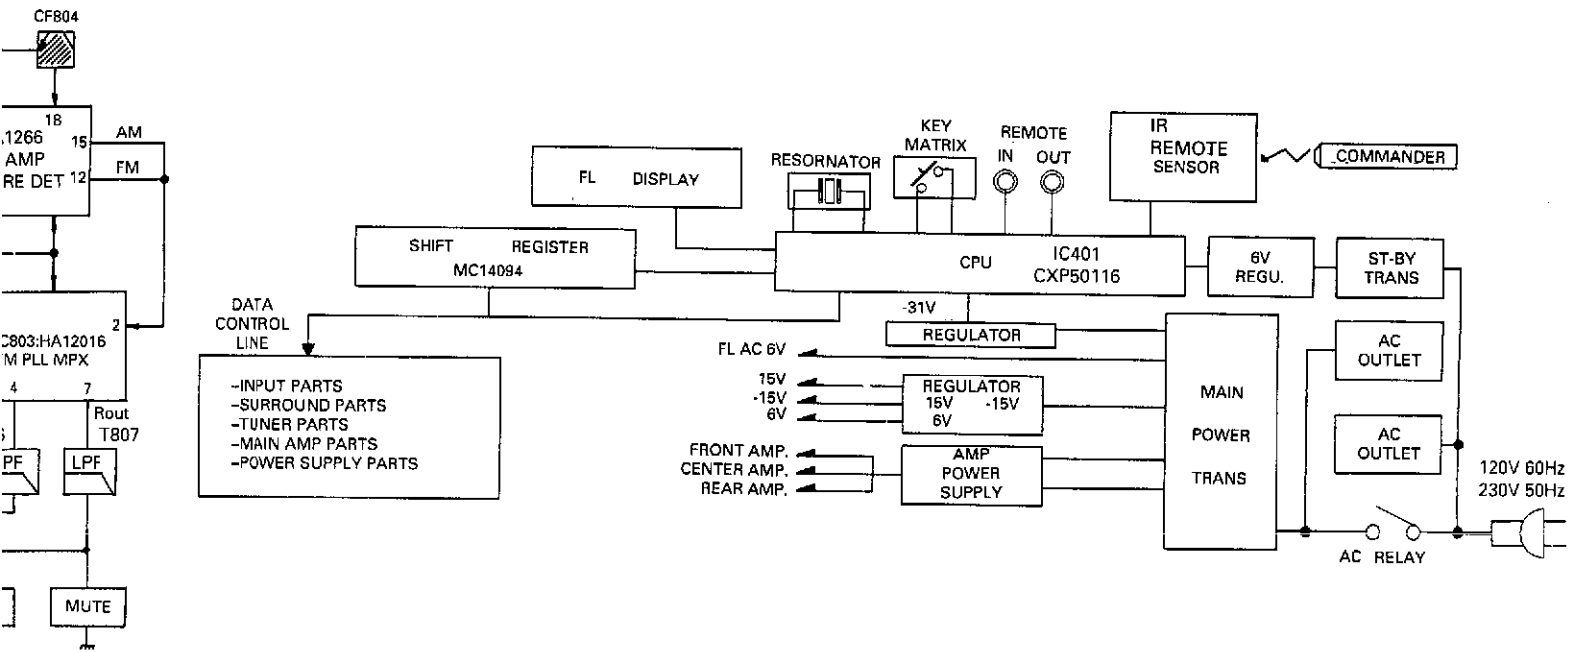

CONTROLS AND FUNCTIONS

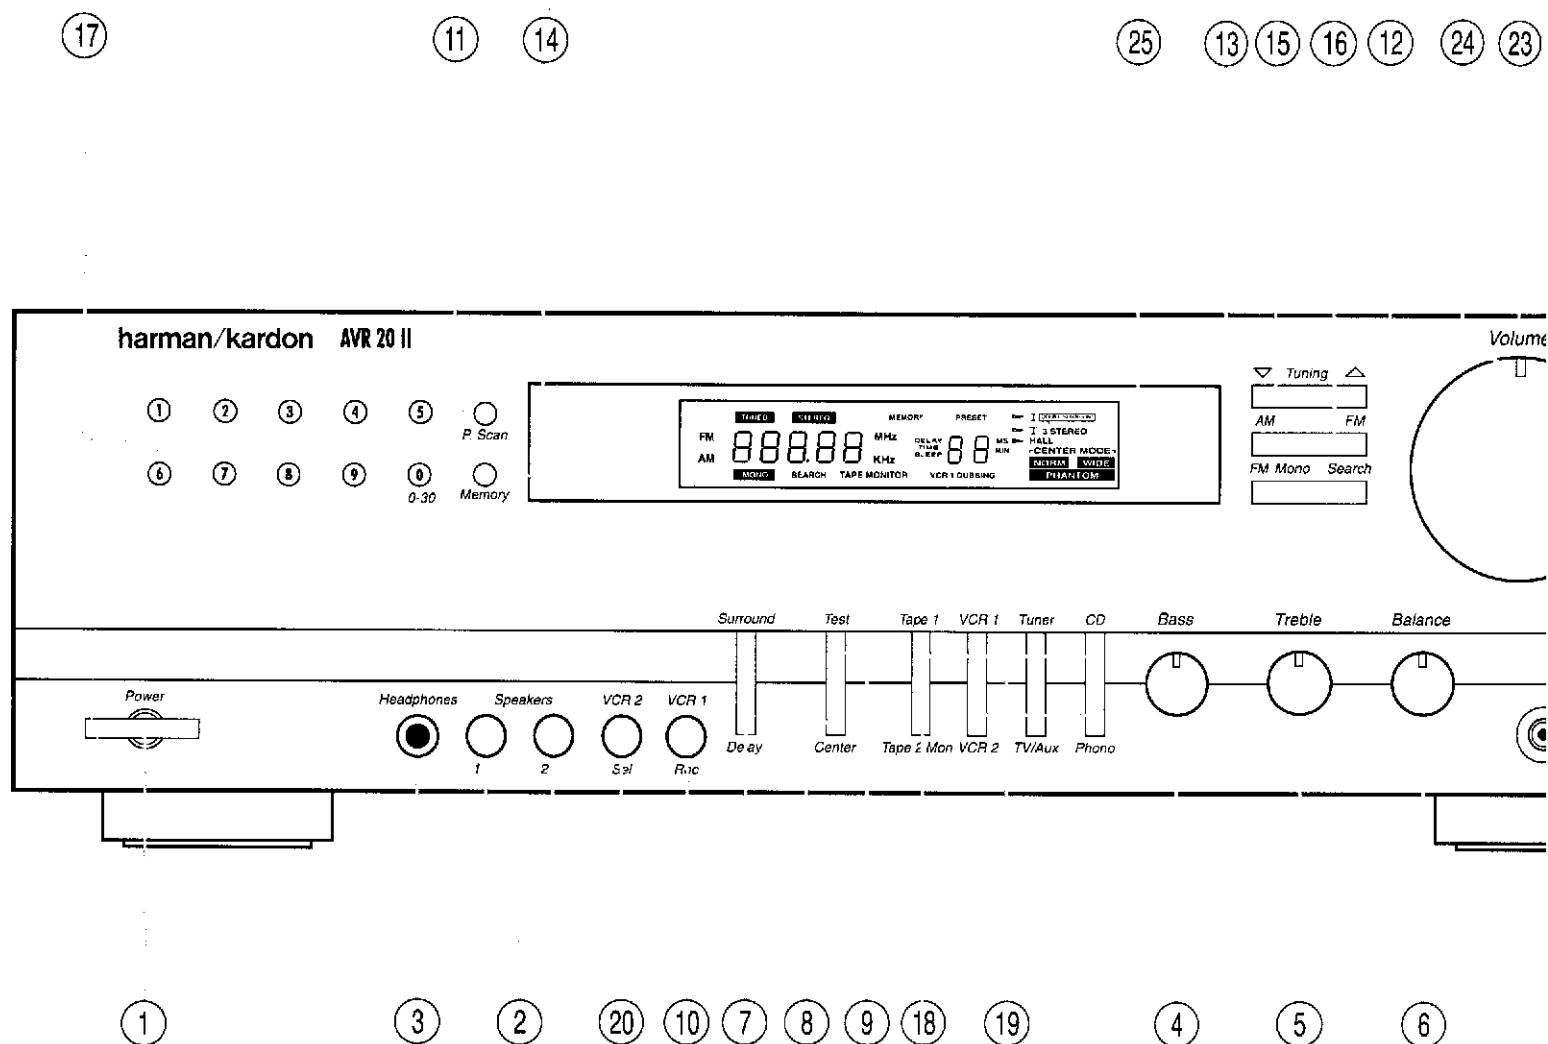**1. POWER BUTTON**

Press this button to turn the power on. Press again to turn the power off. It can also be used as a system power button, if you connect the other components to the switched outlets.

NOTE: In POWER OFF state, the POWER Indicator will light up orange and power is partially supplied to the infrared remote control receiver and the memory circuitry.

2. 1/2 SPEAKER SWITCHES

These switches allow you to select various combinations of speakers as follows:

- To drive 1 pair of speakers, push only the speaker 1 switch in.
- To drive a second pair of speakers, push only the speaker 2 switch in.
- To drive both pairs of speakers, push both 1 and 2 switches in.

- To use headphones for private listening or monitoring, leave both 1 and 2 switches pushed out.

NOTE: If both speaker switches are pushed in and only one set of speakers is connected to the receiver, no sound will be heard.

3. HEADPHONE JACK

Stereo headphones can be plugged into this jack for private listening. Headphone impedance should be between 8 and 2K ohms. Best results between 200 and 400 ohms.

4. BASS CONTROL

Modifies the low-frequency sound of the left and right channels as much as ± 10 dB. Set this control at a suitable position for your taste and room acoustics.

5. TREBLE CONTROL

Modifies the high-frequency sound of the left and right channels as much as ± 10 dB. Set this control at a suitable position for your taste and room acoustics.

6. BALANCE CONTROL

This control is used for balancing the relative sound volume of the left and right channel speakers. Clockwise rotation reduces the volume from the left speaker, counterclockwise rotation reduces the volume from the right speaker.

7. SURROUND-OFF MODE SELECTOR

Press this switch to select normal stereo mode.

8. DELAY TIME

Adjusts time delay rear channels, open surround mode is button on page 16

Adjusts the surround steps. For Dolby standard.


→ 16ms → 18 ms →

9. PRO LOGIC

Press this button f

10. 3 CHANNEL

The 3 channel mo when rear speake to provide a cente

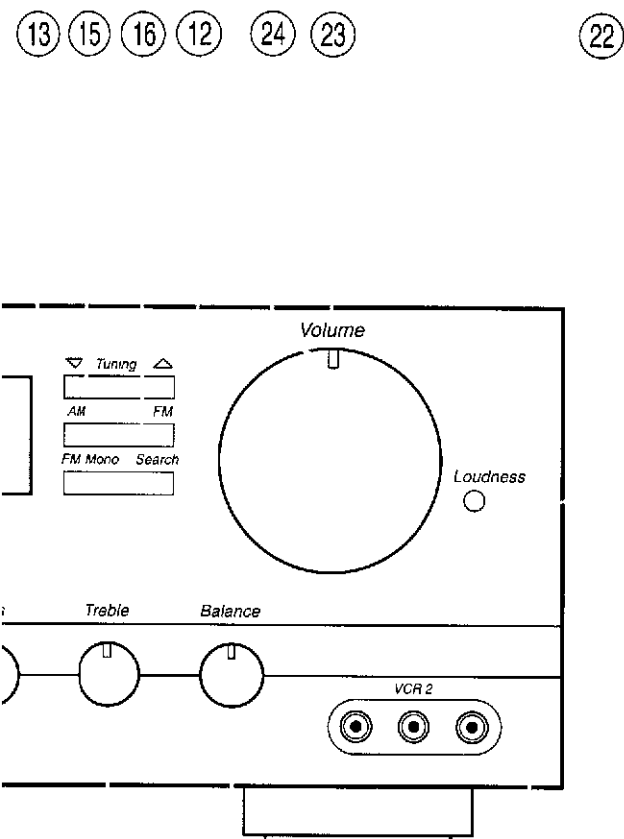

8. DELAY TIME

Adjusts time delay between front and rear channels, operates only when the surround mode is on. (see Delay Time button on page 16).

Adjusts the surround delay time in steps. For Dolby Surround 20ms is standard.

→ 16ms → 18 ms → → 28 ms → 30 ms

9. PRO LOGIC MODE

Press this button for Pro-Logic mode.

10. 3 CHANNEL MODE

The 3 channel mode can be used when rear speakers are not being used to provide a center (dialog) channel.

11. STADIUM/THEATER MODE

Switches for selecting desired surround mode; Stadium or Theater. See Surround Sound Effects on page 13.

12. CENTER MODE SELECTOR

This button operates only in DOLBY PRO-LOGIC and DOLBY 3 STEREO mode. The mode changes as below, when the button is pressed in succession.

DOLBY PRO-LOGIC MODE

→ NORM → WIDE → PHANTOM

DOLBY 3 STEREO MODE

→ NORM → WIDE

The display window shows each mode.

NORM: Select this mode if you use a small center speaker. The bass sound of the center channel is reproduced from the front speakers, because the small speaker cannot produce enough bass.

WIDE: Select this mode if you use a medium-to-large center speaker. The bass sound is reproduced from the center speaker.

PHANTOM: Select this mode if you don't use a center speaker. The center speaker's sound is reproduced from the front speakers.

13. TEST TONE BUTTON

This button operates only in DOLBY PRO-LOGIC and DOLBY 3 STEREO mode. When the button is pressed, 2 seconds of test tone is generated in all channels (Left, Center, Right, and Rear) in succession. The display window shows TEST Left, Center, Right, and Rear in succession (in DOLBY PRO-LOGIC mode) or Left Center or Right (in DOLBY 3 STEREO mode) in succession. Use this button to test speaker connections.

14. SOURCE/DIRECT BUTTON

This feature bypasses the tone control circuitry, resulting in flatter frequency response and wider bandwidth. When it is activated, "DIRECT" illuminates in the display.

15. PRESET SCAN BUTTON

Press this button to scan the preset station frequencies. The receiver stops at each preset location that contains a frequency for about 4 seconds, so you can hear a station. The preset location indicator blinks 4 times. Press this button again to stop scanning.

16. SEARCH SELECTOR

Press this button to select AUTO or MANUAL tuning.

■ In AUTO mode, scanning is automatically continued up or down until the next station is picked up by pressing the UP/DOWN tuning buttons. The display window shows 'AUTO'. Use this mode to quickly find strong AM or FM stations.

■ In MANUAL mode, the frequency is changed by a step with the UP/DOWN button. If you keep pressing the UP/DOWN tuning buttons, scanning is continued until the button is released.

NOTE: Tuning Intervals:

BAND	USA/CANADA
FM	50 KHz
AM	10 KHz

17. FM MODE BUTTON

Press this button to select stereo or mono mode.

■ **STEREO:** Provides stereophonic reception of an FM stereo broadcast. The display window shows 'FMST'.

■ **MONO:** The left and right channel signals detected from an FM stereo broadcast are mixed and reproduced through both channels. If you want to find a weak FM station, select this mode.

18. STATION MEMORY BUTTON

Use this button to store an AM or FM frequency. Press this button and select one of 30 preset locations to store the frequency with the STATION PRESET buttons while the memory indicator, 'MEMORY' blinks.

NOTE: When you store a frequency in a memory location that already contains a frequency, you replace the previous frequency. If your receiver is disconnected from AC power for more than about 10 days, it loses all stored frequencies.

19. UP/DOWN TUNING BUTTONS

Press the DOWN button (v) to tune in lower frequency stations, the UP button (^) to tune in higher frequency stations. If you press the DOWN button when the display is at the bottom of the frequency range, the display returns to the top of the range. If you press the UP button when the display is at the top of the frequency range, the display returns to the bottom of the range. When the receiver finds a strong frequency, the display window shows 'TUNED'.

20. FM/AM BAND SELECTOR

Press these buttons to select the FM or AM radio band. When you select the AM or FM radio band, the receiver displays the last frequency selected on that band.

21. STATION PRESET BUTTONS

Select one of 30 preset locations to recall the station stored in memory. The input function is automatically changed to TUNER when the button is pressed. When you select numbers from 10 through 29, you must select the second digit within about 2 seconds. To select preset 30, simply press "0".

22. TAPE 2 MONITOR BUTTON

Set TAPE 2 MONITOR to the "off" position when you want to hear the other input functions. Press this button to monitor the cassette deck connected to the TAPE 2 MON input jacks.

23. INPUT FUNCTION SELECTOR

Press the button to select the desired input function: VCR 1, VCR 2, VDP, TAPE 1, TV/Aux, Tuner, CD or Phono.

To dub from VCR 2 to VCR 1, press the VCR 2 button and then press the VCR 1 REC button.

For the input function of VCR 1 press the VCR 2 button and VCR1 DUBBING button. Set the recording VCR (VCR 1) to recording mode. Set the playback VCR (VCR 2) to play a tape.

Dubbing will start.

■ To hear another input source during video tape dubbing: Press the input function you want to hear, and play the input source.

NOTE: If you press the TEST TONE button during VCR 1 DUBBING, the audio signal is not recorded.

24. VCR 2 SELECTOR

Push in this button to select the VCR 2 jacks on the front, rather than the VCR 2 jacks on the rear.

25. VCR 2/CAMCORDER INPUT JACKS

VIDEO IN:

Connect to the VIDEO OUTPUT jack of a VCR (yellow jack).

AUDIO IN:

Connect to the AUDIO OUTPUT jacks of a VCR (red and white jacks).

26. LOUDNESS BUTTON

Press this button to compensate for the response of the human ear at low listening levels (known as the Fletcher-Munson hearing curve). The high and low frequencies are automatically boosted when this button is pushed in. In the OFF position, the frequency response is flat at all volume levels. This button does not work at high volume levels.

27. VOLUME CONTROL

Turn the VOLUME clockwise to increase the volume and counterclockwise to decrease it. The volume of the front, center, and rear channels is changed at the same time.

28. VOLUME LEVEL INDICATOR

This indicator moves in accordance with the volume level. The indicator blinks when the mute button on the remote commander is pressed.

29. DISPLAY WINDOW

This window shows the state of operation for easier control of the receiver. It also contains the IR Remote Sensor.

DISASSEMBLY PROCEDURES

REFER TO PAGE 21 and 33.

1 COVER TOP REMOVAL

Remove 8 screws (A) and then remove the Cover Top (51).

2 COVER BOTTOM REMOVAL

Remove 10 screws (B) and then remove the Cover Bottom (29).

3 FRONT PANEL ASSEMBLY REMOVAL

1. Remove the Cover Top (51), referring to the previous step 1.
2. Remove the flat cable from wafer (CP401) on the Volume P.C.Board (PCB9).
3. Disconnect (CP102) from the Volume P.C.Board (PCB6).
4. Disconnect (CNT602) from the Surround P.C.Board (PCB11).

5. Disconnect (CP701 and CP702) from the Input P.C.Board (PCB9).

6. Disconnect (CP703) from the Video P.C.Board (PCB2).

7. Remove 8 screws (C) and then remove the Front Panel Assembly (AA).

4 VOLUME P.C.Board (PCB9) REMOVAL

1. Remove the Cover Top (51), referring to the previous step 1.
2. Pull out the Volume Knob (1) with Volume LED P.C.Board (PCB8).
3. Disconnect (CP102 and CP503) from the Volume P.C.Board (PCB6).
4. Remove the Hex Nut from the Volume-motor to remove the Volume P.C.Board (PCB6).
5. Remove 3 screws (M) and then remove the Volume P.C.Board (PCB6).

[5] SPEAKER SEL. P.C.Board (PCB7) REMOVAL

1. Remove the Cover Top (51), referring to the previous step [1].
2. Remove the Front Panel Assembly (AA), referring to the Previous step [3].
3. Remove 4 screws (D) and then remove the Speaker Sel. P.C.Board (PCB7).

[6] TONE P.C.Board (PCB5) REMOVAL

1. Remove the Cover Top (51), referring to the Previous step [1].
2. Remove the Front Panel Assembly (AA), referring to the previous step [3].
3. Pull the Bass, Treble, Balance Knobs (3).
4. Remove the Hex Nuts from the variable resistors (17, 18).
5. Remove 3 screws (E) and then Tone P.C.Board (PCB5).

[7] FRONT P.C.Board (PCB4) REMOVAL

1. Remove the Cover Top (51), referring to the previous step [1].
2. Remove the Front Panel Assembly (AA), referring to the previous step [3].
3. Remove 9 screws (F) and then remove the Front P.C.Board (PCB4).

[8] TUNER P.C.Board (PCB10) REMOVAL

1. Remove the Cover Top (51), referring to the previous step [1].
2. Remove 3 screws (G) and then remove the Tuner P.C.Board (PCB10).

[9] SURROUND P.C.Board (PCB11) REMOVAL

1. Remove the Cover Top (51), referring to the previous step [1].
2. Disconnect (CNT602) from the Surround P.C.Board (PCB11).
3. Remove 2 screws (H) and then remove the Surround P.C.Board (PCB11).

[10] VIDEO P.C.Board (PCB2) REMOVAL

1. Remove the Cover Top (51), referring to the previous step [1].
2. Remove the Surround P.C.Board (PCB11), referring to the previous step [9].
3. Disconnect (CP703, CP101 and CN301) from the Video P.C.Board (PCB2).
4. Disconnect (CP902) from the Sub-Woofer P.C.Board (PCB3).
5. Disconnect (CP301) from the Main P.C.Board (PCB1).
6. Remove 5 screws (I) and then remove the Video P.C.Board (PCB2).

[11] SURROUND P.C.Board (PCB3) REMOVAL

1. Remove the Cover Top (51), referring to the previous step [1].
2. Disconnect (CP902 and CP110) from the Sub-Woofer P.C.Board (PCB3).
3. Remove 4 Screws (K) and then remove the Sub-Woofer P.C.Board (PCB3).

[12] CHASSIS BACK REMOVAL

1. Remove the Cover Top (51), referring to the previous step [1].
2. Do Steps [2], [8], [9], [10] and [11].
3. Remove 15 screws (J) and then remove the Chassis Back (34).

[13] MAIN P.C.Board (PCB1) REMOVAL

1. Remove the Cover Top (51), referring to the previous step [1].
2. Do Steps [2], [4], [8], [9] and [12].
3. Unsolder all leads of (Q116, Q112, Q115, Q123, Q126 and Q127) from copper track on the Input P.C.Board (PCB9).
4. Disconnect (CP103, CP109 and CP206) from the Main P.C.Board (PCB1).
5. Disconnect (CP110, CP701, CP702, CP204 and CP207) from the Input P.C.Board (PCB9).
6. Remove the flat cable from wafer (CP401) on the Input P.C.Board (PCB9).
7. Remove 5 screws (L) and then remove the Input P.C.Board (PCB9).


[14] MAIN P.C.Board (PCB1) REMOVAL

1. Remove the Cover Top (51), referring to the previous step [1].
2. Do Steps [2], [8], [9], [10], [11] and [12].
3. Unsolder all leads of (Q216L/R, Q217L/R and Q213L/R) from copper track on the Main P.C.Board (PCB1).
4. Disconnect (CP201, CP202, CP203, CP204, CP206, CP207H and CP207T) from the Main P.C.Board (PCB1).
5. Remove 6 screws (N) and then remove the Main P.C.Board (PCB1).

CIRCUIT DESCRIPTION

CPU (4 bit CMOS MICROPROCESSOR : CXP50116-530Q)

1. Pin Description & Block Diagram

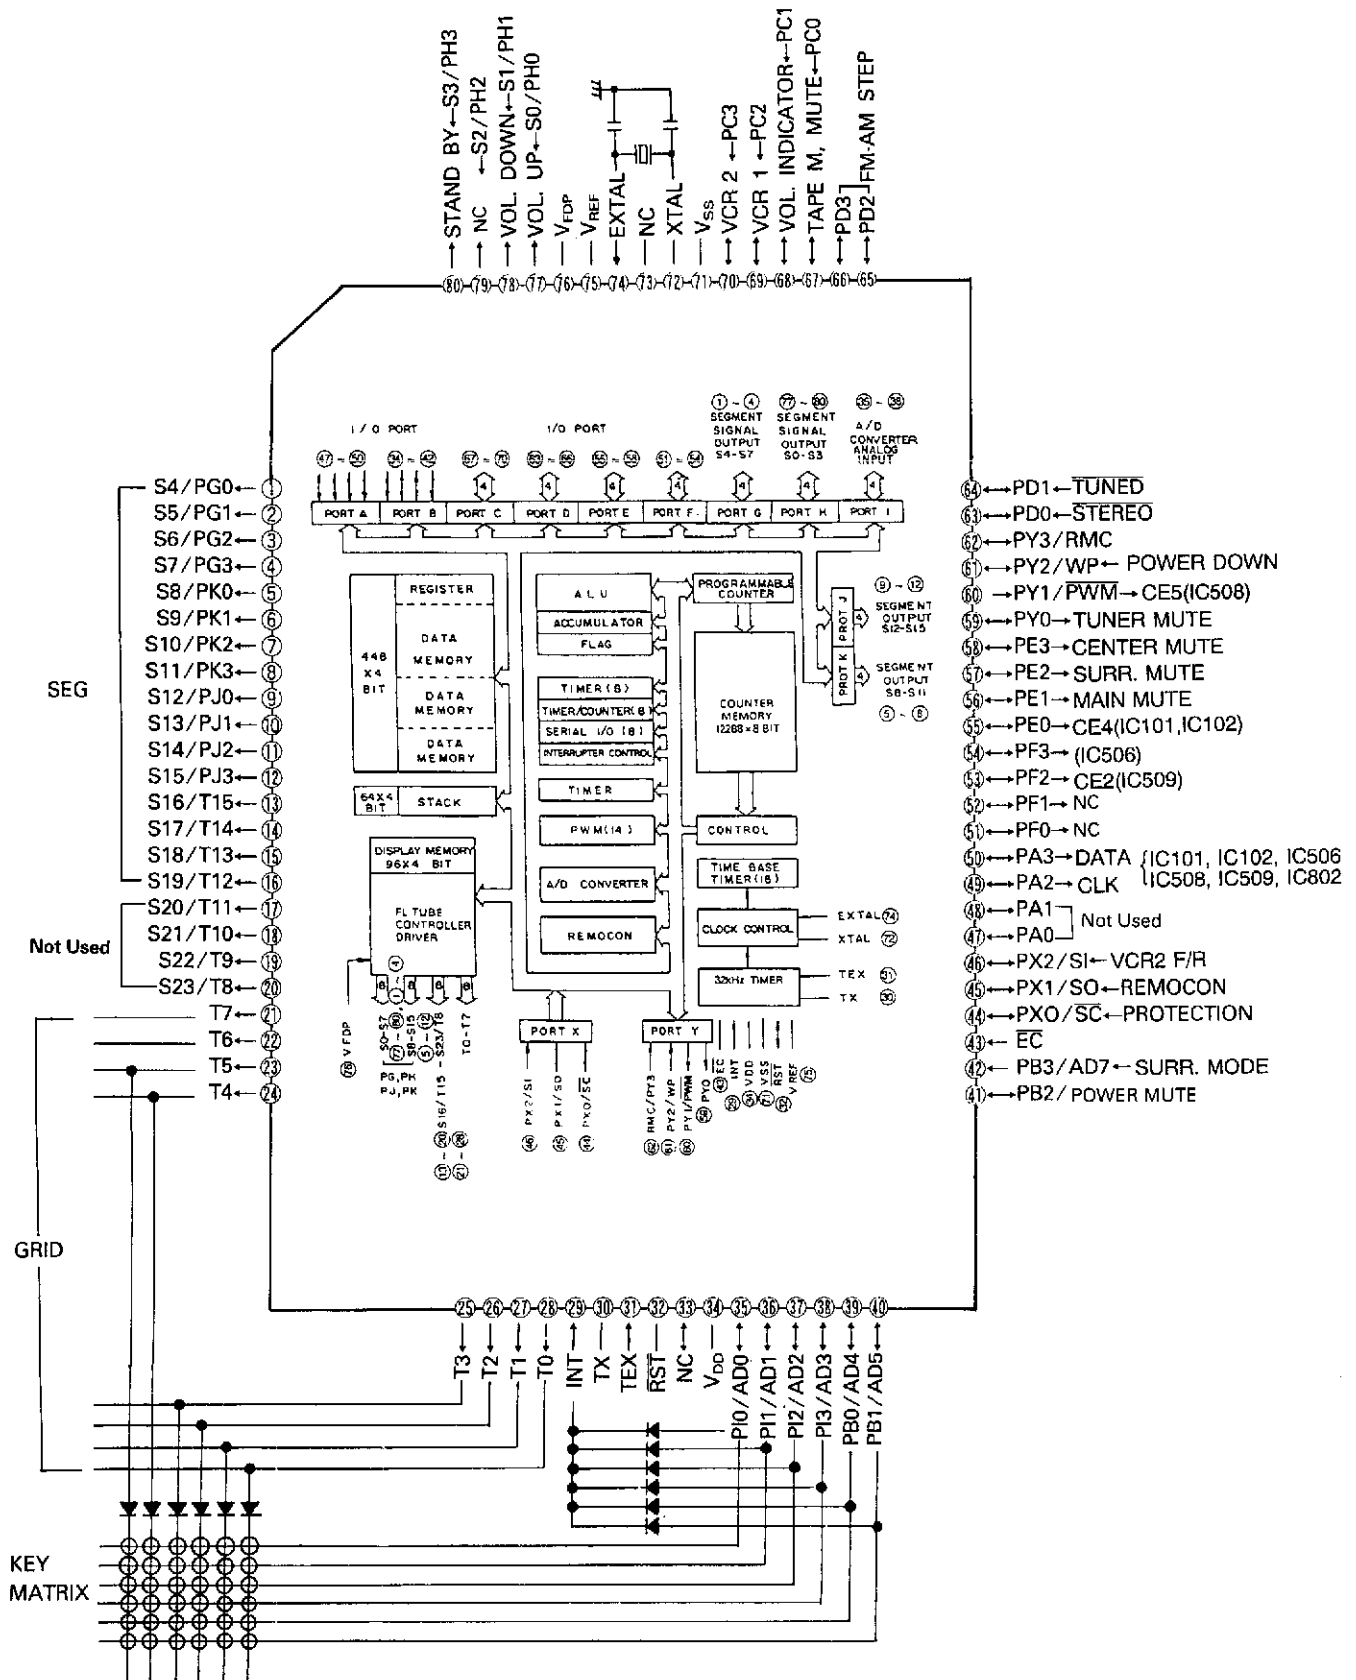

2. Input and Output Terminal Functions


Code	Function
S4/PG0-S19/T12	These are segment signal output pins of FL controller/driver.
S20/T1-S23/T8	Not used
T7-T 0	These are timing signal output pins of FL controller/driver and key scan pins.
INT	This is external interrupt dedicated pin.
TX, TEX	Not used
RST	This is the system reset of the device.
NC	No connection
V _{DD}	This is the power supply pin.
PI0/AD0-PB1/AD5	These are the key input pins.
PB2/AD6	This is the power mute output pin.
PB3/AD7	This is the channel mode control pin of surround mode.
EC	Not used.
PX0	This is the protection input pin.
PX1	This is the remote control input pin.
PX2	This is the VCR2 front and rear input control pin.
PA0	Not used.
PA1	Not used.
PA2-PA3	These are used to control the PLL IC, analog switching IC. Shift register IC, volume IC, delay IC. (CLK, DATA)
PF0	This is the FM mode control pin.
PF1	This is used to control the PLL IC.
PF2	This is used to control the shift register IC.
PF3	This is used to control the volume IC.
PE0	This is used to control at analog switching IC.
PE1	This is the main mute output pin.
PE2	This is the surround mute output pin.
PE3	This is the center mute output pin.
PY0	This is the tuner mute output in.
PY1	This is used to control the delay IC.
PY2	This is the power down pin.
PY3	Not used.
PD0	This is the tuner stereo input pin.
PD1	This is the tuner tuned input pin.
PD2-PD3	These are used to control FM and AM step.
PC0	This is used to eliminate the noise of the PLL IC in the Tape 2 Monitor mode.
PC1	This is used to control volume indicator.
PC2	This is used to control VCR1
PC3	This is used to control VCR2
V _{SS}	This pin provides the ground potential.
XTAL, EXTAL	These pin serve for connecting a clock oscillator crystal.
NC	No connection.
V _{REF}	Not used.
V _{FDP}	This is the power supply pin of the FL controller.
PH0-PH1	These are used to control the motor volume.
PH2	Not used.
PH3	This is used to control stand-by mode.

3. Key Matrix


Pin No.	35	36	37	38	39	40
22	4	9	CD	O	5	PHONO
23	VCR1	VCR2	TV	T2M	T1	TUNER
24		VCR1 REC	SURR MODE	MEMORY		SCAN
25	▼	▲	FM MODE	AUTO MANUAL	FM	AM
26	2	6	3	2	7	8
27				POWER		
28	DELAY TIME		TEST TONE		CENTER MODE	

4. Digital Tuning System Description


Digital Turing System

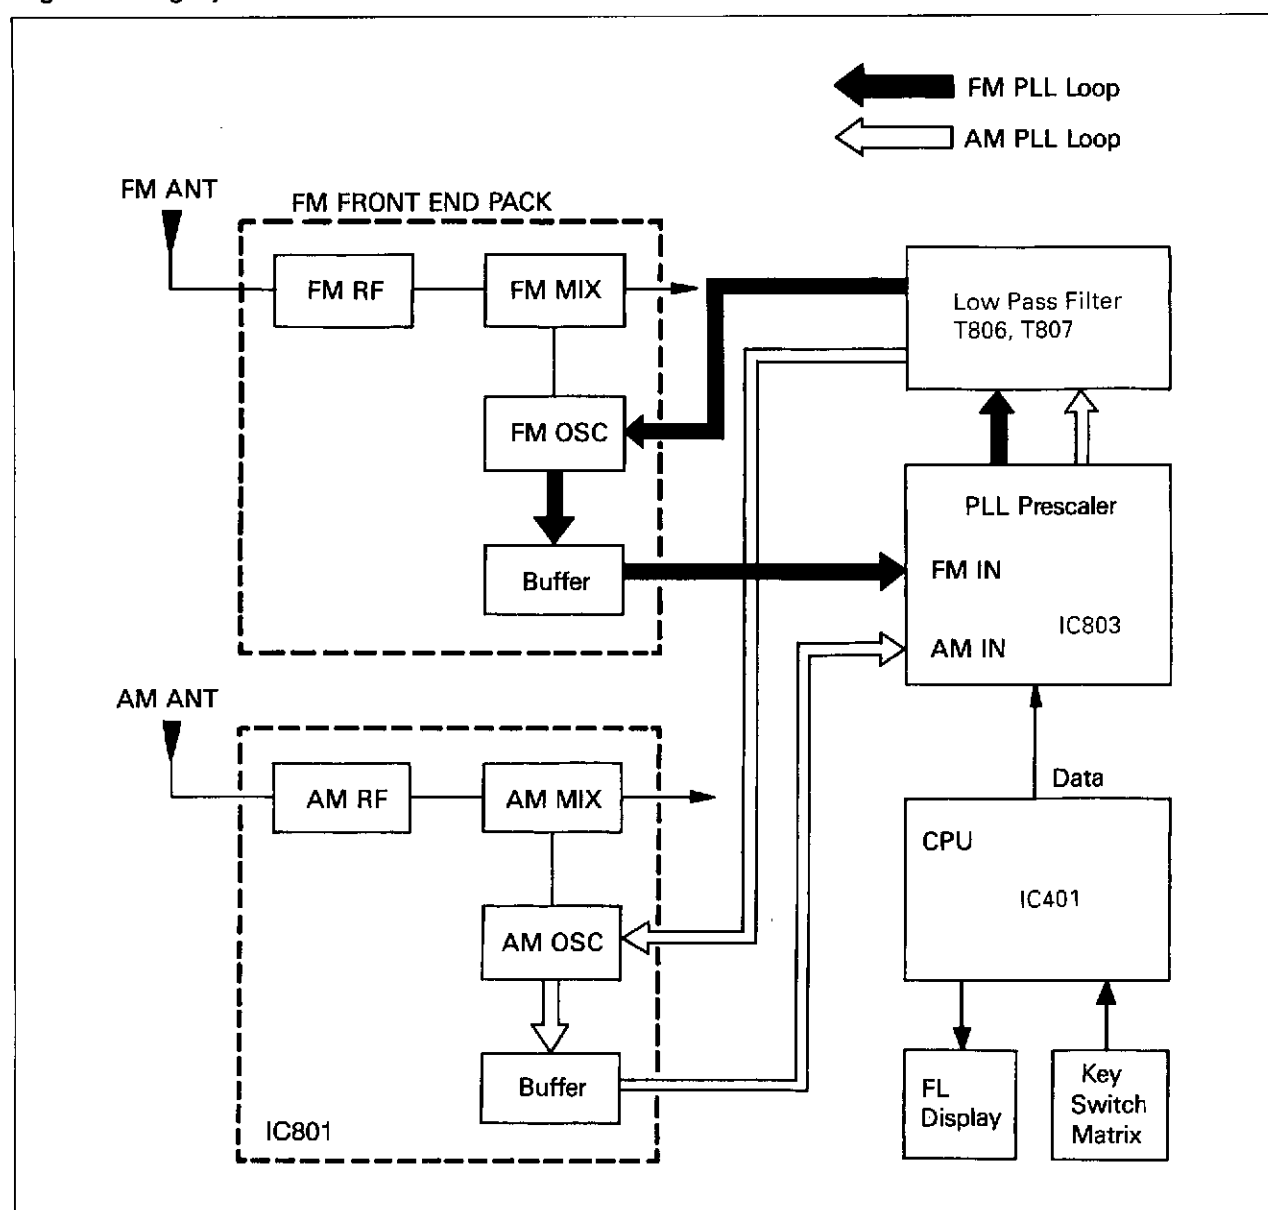

- Vco vs. FM Band Frequency Curve

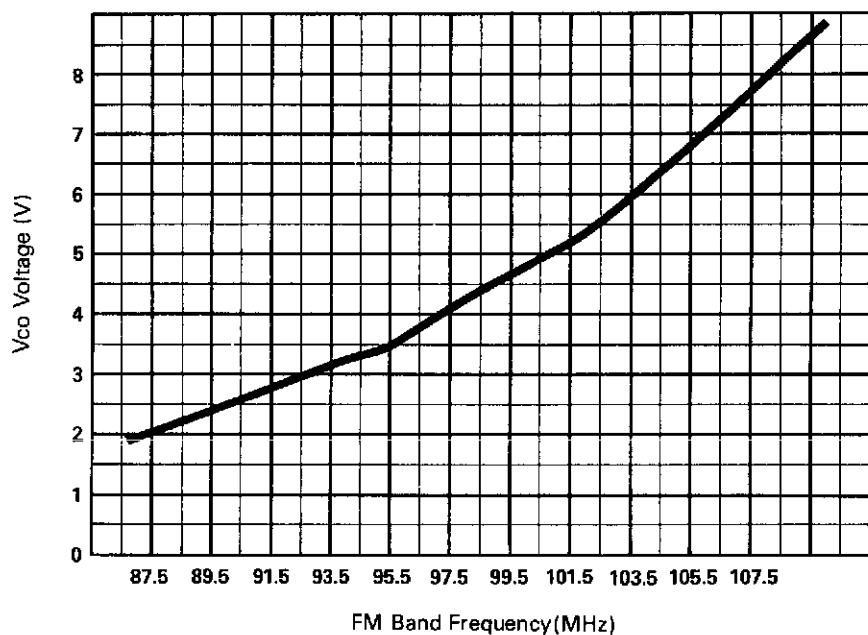

- Vco vs. AM Band Frequency Curve

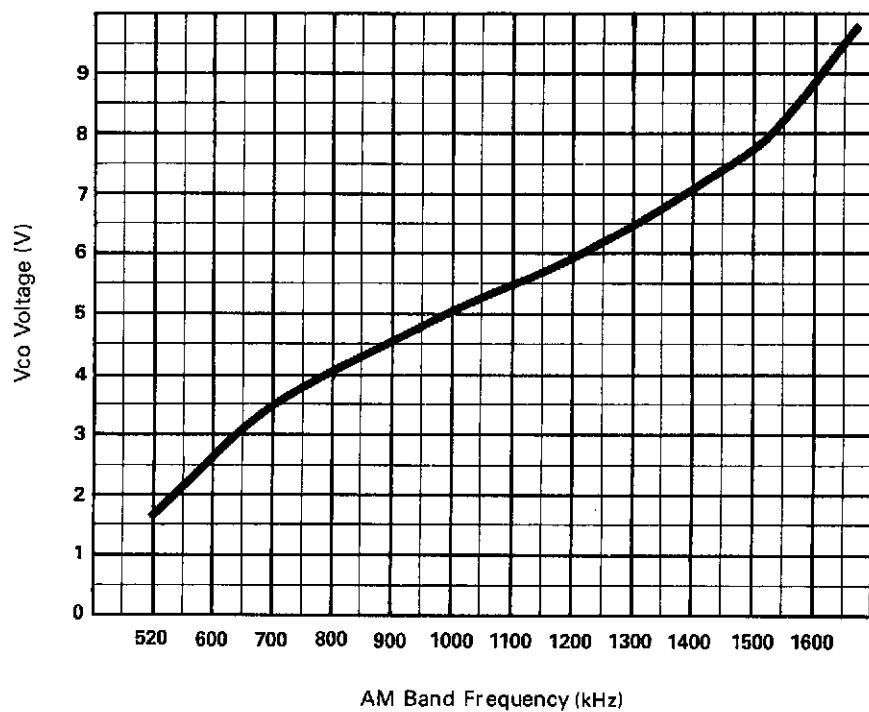


5. Protection Circuits

Speaker Protection Circuit

The CPU protects both this unit and the speakers when an abnormally high current flows in Q216 L/R and Q217 L/R due to excessive input drive, too low of a load impedance, or short of the speaker terminals. If current increase is excessive, the voltage across R245 L/R or R246 L/R turns on Q218 L/R, then Q219 turns on Q221.

It makes the protection port of the CPU to low state. Then the power is turned off.

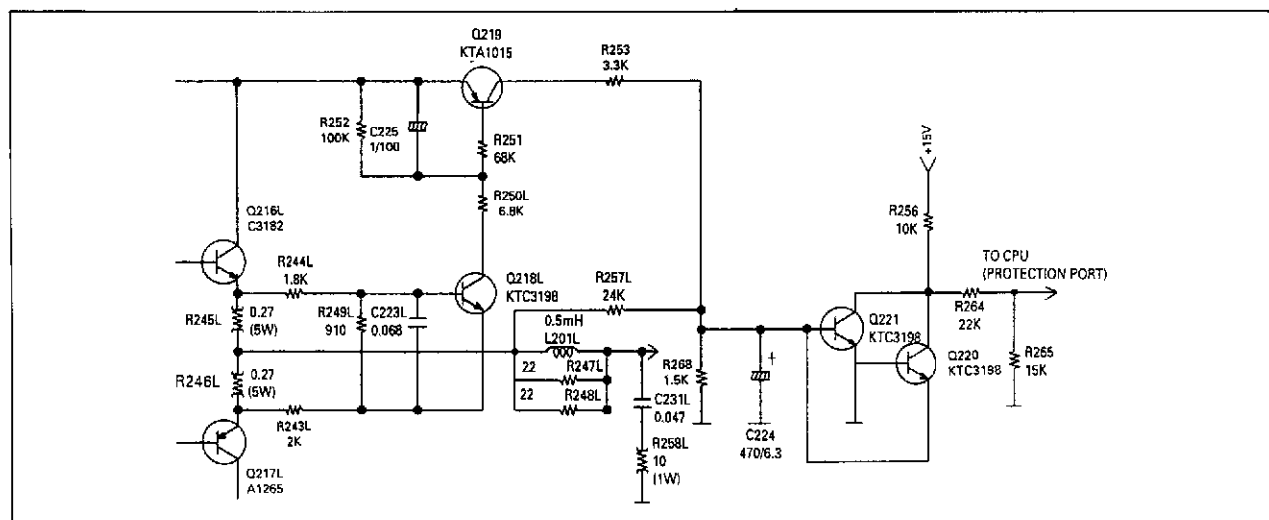


Thermal Protection Circuit

This receiver has a overload thermal protection circuits to guard against abnormal operation.

When the temperature of TRANS POSISTOR installed with the main transformer or H/SINK POSISTOR rises abnormally, the resistance of the posistor becomes larger and Q221 is turned on.

It makes the protection port of the CPU to low state. Then the power is turned off.

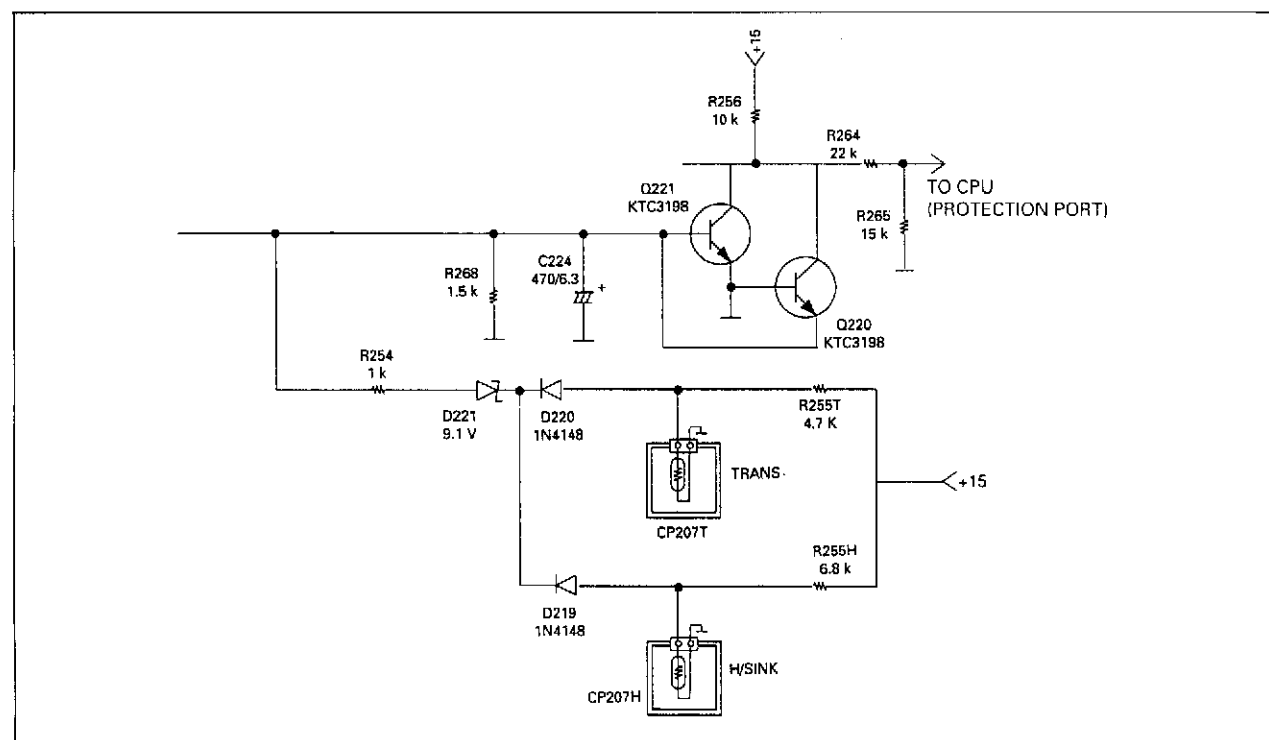


ALIGNMENT PROCEDURES

1. Equipment Required

- AM Standard Signal Generator (AM SSG)
 - Oscilloscope
 - AC Voltmeter
 - FM Standard Signal Generator (FM SSG)
 - Stereo Modulator
- Audio Generator
 - Distortion Meter
 - DC Voltmeter
 - Frequency Counter

Note : Disconnect external FM antenna prior to alignment.

2. Alignment and Test Points (PCB10)

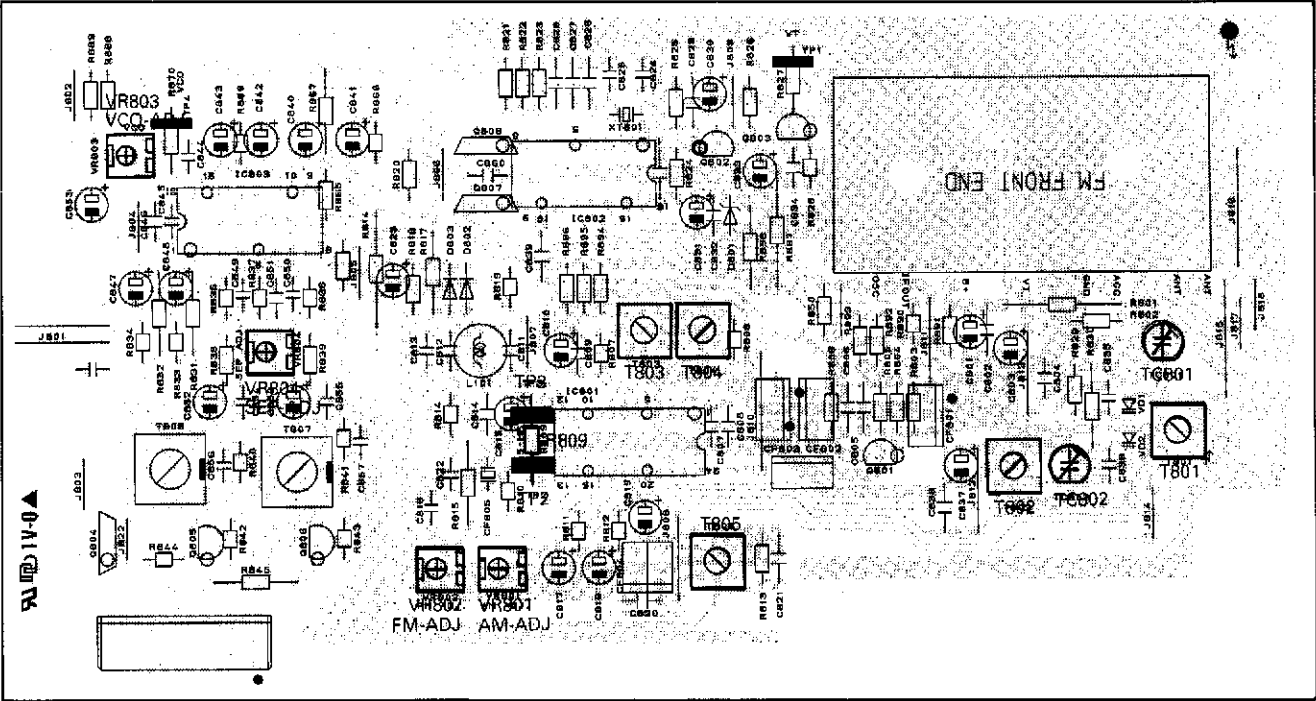


3. AM IF and RF Alignment

Preparation

1. Output of Signal Generator should not be higher than necessary to obtain an optimum output reading.
2. Signal Generator Modulation: 30%.
3. Switch: Press to AM.

Step	Signal Generator Frequency	Receiver Frequency on the Display	Equipment Connection	Adjustment Point	Adjust for
1	999 kHz (400 Hz, Mod.)	522 kHz	DC Voltmeter TP1	T802	1.2 V reading
		1611 kHz	DC Voltmeter TP1	TC802	8.5 V reading
2	594 kHz (400 Hz, Mod.)	594 kHz	AC voltmeter to TAPE OUT jack.	T801 (ANT Coil)	Maximum reading
3	1404 kHz (400 Hz, Mod.)	1404 kHz	AC voltmeter to TAPE OUT jack.	TC801 (ANT Trimmer)	Maximum reading

4	450 kHz (400 Hz, Mod.)	999 kHz	AC voltmeter to TAPE OUT jack.	T805 (IFT)	Maximum reading
5	999 kHz (400 Hz, Mod.)	999 kHz	Same as Step 1.	VR801	FL display 'TUNED' Indication on receiver with AM SSG Output level of 800 μ V/m

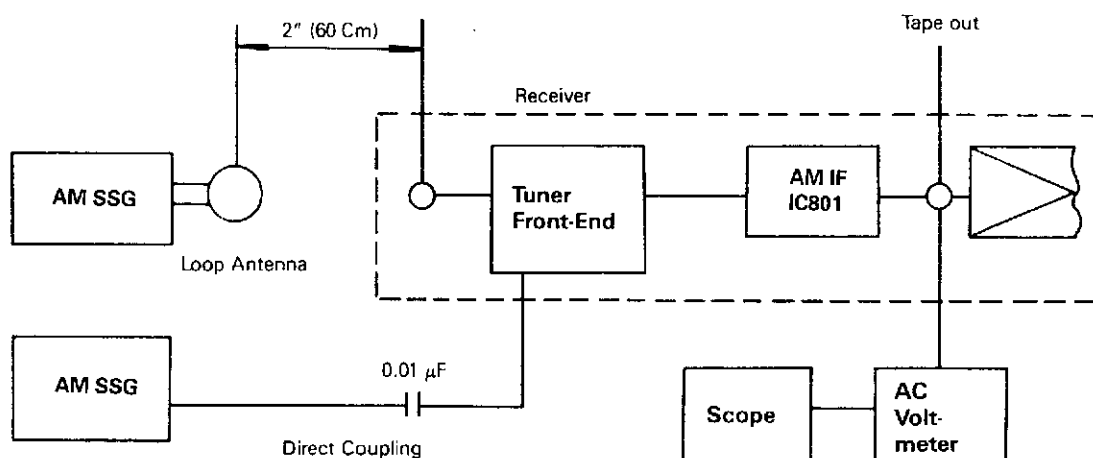


AM Alignment Connection

4. FM IF Alignment

Preparation

1. Signal Generator output should be no higher than necessary to obtain an optimum output reading.
2. Switch Press to FM.
3. Signal generator deviation : 40 kHz.

Step	Signal Generator Frequency	Receiver Frequency Display	Equipment Connection	Adjustment Point	Adjust for
1	98.0 MHz (1 kHz, Mod.)	98.0 MHz	DC Volt meter to R809 (PCB10)	T803	Zero reading on DC volt meter.
2	98.0 MHz (1 kHz, Mod.)	98.0 MHz	Distortion meter to TAPE OUT jack	T804	Minimum distortion
3	98.0 MHz (1 kHz, Mod.)	98.0 MHz	Same as Step 1	VR802	FL display 'TUNED' Indication on receiver with FM SSG output level of 10 μ V/m

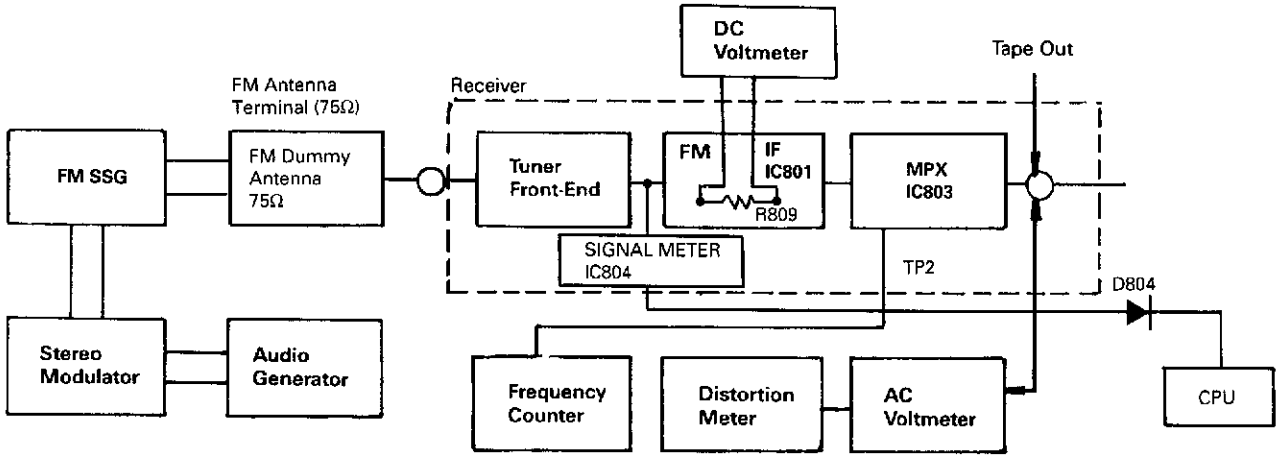

FM RF/IF and MPX Alignment Connection

5. MPX Alignment, SM Alignment Preparation

- 1. Switch : Press to FM.
- 2. Tuner for 98 MHz on band.
- 3. Signal Generator output level : 1000 μ V.
- 4 Deviation : 40 kHz, at 100% modulation of composite signal.
- 5. Connect Signal Generator to FM antenna terminal through FM dummy antenna (75 Ω).

Step	19 kHz Modulation Level	Signal Generator Frequency Setting	Equipment Connection	Adjustment Point	Adjust for
1	Pilot off	Carrier only	Frequency counter connect to TP2 (HOT) of PCB and ground	VR803	76 kHz
2	8% Mod.	Composite to channel 1kHz R	AC voltmeter to TAPE OUT jack of R channel	–	Adjust for about 450mV of audio output
3	8% Mod.	Composite to channel 1 kHz L	AC voltmeter to TAPE OUT jack of R channel	VR804	AC voltmeter reading should be at least 40 dB below.
4	8% Mod.	Composite to channel 1 kHz R	AC voltmeter to TAPE OUT jack of L channel	VR804	Same as Step 3.
5	8% Mod.	Composite to channel 1 kHz L or R	AC voltmeter to TAPE OUT jack Lor R channel	VR805	FL display 'SIG 60 dB' indication on receiver with FM SSG output lenel of 1000 μ V/m

If you could not obtain –40dB readings in Steps 3 and 4 (compared with Step 2), readjust VR804 until you obtain –40dB readings for both Steps 3 and 4. Nominal is –45 dB.

TROUBLESHOOTING

Symptom	Cause and Remedy
Receiver inoperative (FL indicator does not light)	A) Faulty AC power cord. Replace. B) Defective the power switch. Replace. C) Broken wire in the power transformer. Replace the power transformer. D) Blown fuse. Replace the fuse.
Fuse blows when power is turned on.	A) Defective power transformer. Replace. B) Short on the primary or secondary of the transformer circuitry. Repair the trace. C) Damaged rectifier (D208 to D211) or damaged transistor (Q216 to Q217). Replace the defective component(s). D) Short circuit in the amplifier circuit. Replace the shorted component(s) in the amplifier circuit.
Power indicator lights but no sound from both channels	A) Speaker switch 1 or 2 defective. Replace the defective switch (es) B) Defect in transistor Q216 L/R, Q217 L/R on the Main Amp Board. Replace the defective component(s).
Speaker A inoperative	A) Speaker switch A defective. Replace
Speaker B inoperative	A) Speaker switch B defective. Replace.
One channel does not work when Volume is at maximum with a test signal applied to the center terminal of Volume control VR5 of the dead channel	A) Defect in transistor Q216 L/R, Q217 L/R on the Main Amp Board Locate and correct the defect. B) Break in copper foil of printed circuit board. Repair the circuit trace. C) Short in speaker output terminal. Repair or replace.
Speaker works normally but headphones inoperative	A) Headphone plug does not mate with jack. Replace the jack. B) Defective resistor R901, R902. Replace.
PHONO input inoperative	A) Poor contact in phono input jack. Repair or replace the jack. B) Defective phono switch or IC103. Replace.
LOUDNESS has no effect	A) Defective loudness switch. Replace. B) Defective resistor R601, R602, C601, C602. Replace the defective components(s).
FM inoperative	A) Defective front-end. (FE407-G60) Replace. B) Defective FM switch. Replace the switch

Symptom	Cause and Remedy
FM inoperative	<p>C) Defective transistor Q801, Q805, Q806, IC801, IC803 Replace the defective transistor(s) or IC(s).</p> <p>D) Defective coil T803 or T804 Replace the coil(s).</p> <p>E) Defective lead-in. Repair or replace the lead-in.</p> <p>F) Ceramic filter CF801, CF802, CF803 defective. Replace the defective ceramic filter(s).</p> <p>G) Defective controller circuit component. Replace.</p>
Poor multiplex separation	<p>A) Improper adjustment. Readjust VR803 and VR804. (Refer to MPX Alignment.)</p> <p>B) IC803 defective. Replace.</p> <p>C) Variable resistor VR803 or VR804 defective. Replace the variable resistor(s).</p>
STEREO indicator does not light	<p>A) Defective indicator in FL. Replace.</p> <p>B) Improper adjustment of VR803 of tuner board. Make readjustment.</p> <p>C) Defective IC803 Replace the defective component.</p>
FM volume not sufficient	<p>A) If volume from both L and R channels is not loud enough : Front end Section defective. Faulty IC801, Coil T803, Defective C838 of tuner Board. If sound of one channel is not loud enough: Defective T806, T807</p>
FM Mono has no effect	<p>A) Defective FM MODE switch. Replace.</p>
AM inoperative	<p>A) Damaged IC801 of tuner board. Replace.</p> <p>B) Defective T801, T802, T805 or CF804 of tuner board. Replace the defective component(s).</p> <p>C) Resistor R829, R817 defective. Replace the defective component(s).</p> <p>D) Capacitor C836, C818, C813 defective. Replace the defective capacitor(s).</p> <p>E) Defective AM switch Replace.</p> <p>F) Defective varicap diode VD1, VD2 Replace varicap diodes(s).</p> <p>G) Damaged AM loop antenna. Repair or replace.</p> <p>H) Defective controller circuit component. Replace.</p>
Bass control has no effect	<p>A) Variable resistor BASS defective. Replace.</p> <p>B) Defective R709L/R, R710L/R, C702L/R, C708L/R Replace the defective component(s).</p>

Symptom	Cause and Remedy
Treble control has no effect	A) Variable resistor TREBLE defective. B) Defective R711 L/R, R712 L/R, C709 L/R, C710L/R Replace the defective components(s).
Auto tune inoperative (UP/DOWN)	A) Poor contact in Up/Down key. Repair or replace. B) Defective IC401 Replace. C) Defective FL401. Replace. D) Defective tuner circuit component. Replace. E) In case of FM only, improper adjustment of FM front-end. Readjust.
Manual tune inoperative (UP/DOWN) (AM or FM)	A) Poor contact in Up/Down key. Replace. B) Defective IC401. Replace.
Memory setting (keys 1-10) inoperative	A) Poor contact in memory keys 1-10. Replace. B) Poor contact in memory set key. Replace. C) Defective IC401. Replace the defective component.
FL inoperative	A) FL defective. Replace. B) Defective IC401. Replace. C) Defective X401. Replace.
Noise Volume control	A) Defective IC603. Replace. B) Defective capacitor C615 or C616. Replace the defective capacitor(s).
Remote Control Unit inoperative	A) Weak Battery. Replace. B) Defective. Replace. C) Defective IC401(CPU Board) or IC01. Replace.


GENERAL UNIT PARTS LIST

Ref. No.	Description	Mfr. Part No.	Q'ty	Version
CABINET AND CHASSIS				
1	Knob, Volume	048543059611	1	
2	Indicator, Volume	8555048610	1	
3	Knob, Rotary	048545124311	3	
4	Panel, Front	048501033612	1	
5	Window, Display	8553019710	1	
6	Filter	048555048511	1	
7	Button, Power	048545124011	1	
8	Button, Preset	048543059611	1	
9	Switch, Tact	4658003710	32	
10	Indicator, Power	8555048710	1	
11	Jack, Phone	4438005020	1	
12	Switch, Push	4626043610	2	
13	Shield, Fence, knob	6165147910	1	
14	Button, Speaker	048545124111	2	
15	Button, Function	048543059911	1	
16(SW433)	Switch, Push	4628054410	1	
17	Volume, Bass/Treble	3208049510	2	
18	Volume, Balance	3208052010	1	
19	Shield Fence	6165148410	1	
20	Jack, RCA, 3P, VCR	4438109710	1	
21	Button, Loud	048545124211	1	
22	Switch, Loud	4628059610	1	
23	Volume, Motor	3228019410	1	
24	Bracket, Volume	6505138410	1	
25	Button, Tuning	048543059711	2	
26	Foot	6033102510	2	USA/CANADA
(27)	Foot, Hot-stamping	046033102511	2	USA/CANADA
27	Foot, Hot-stamping	046033102511	4	EUROPE
28	Frame, Cover	6123205210	1	
29	Cover, Bottom	6122416120	1	
30	Bracket, PCB	6505111710	2	
31	Frame, Right	6122636410	1	
32	Jack, RCA, 4P	4438108110	1	
33	Terminal, Antenna	4408108210	1	
34	Chassis, Back	046102044251	1	EUROPE
(34)	Chassis, Back	046102044211	1	USA/CANADA
35	Jack, RCA, 6P	4438103210	1	
36	Frame, Center	6123205110	1	
37	Bracket, Jack	6505138510	1	
38	Terminal, Speaker, 4P	4408106410	1	
39	Jack, Multi	4438006510	2	
40	Jack, RCA, 2P	4438109310	2	
41	Jack, RCA, 1P	4438113810	1	
42	Bracket, Heatsink	6505135010	1	
43	Heatsink, Power	7502008510	1	
44	Heatsink, Regulator TR.	7505206220	1	
45	Heatsink, Regulator TR.	7505206120	2	
46	Bracket, PCB	6505134910	2	
47	Terminal, Speaker, 8P	4408105810	1	
49	Frame, Left	6121608930	1	
50	Chassis, Front	6122214510	1	
51	Cover, Top	046122022421	1	
52	Stopper, AC Cord	6518002320	1	EUROPE
(52)	Stopper, AC Cord	6518002310	1	USA/CANADA
53	Cord, AC Power	4408001430	1	EUROPE
(53)	Cord, AC Power	4408001410	1	USA/CANADA
54	System Ground	4408103710	1	
55	Jack, RCA, 4P	4438103410	2	
56	Heatsink, Regulator TR.	7505202410	4	
57	Jack RCA, 4P	4438103110	1	
58	Jack, RCA, 6P	4438108010	1	
59	Terminal Speaker, 2P	4408108710	1	
60	Jack RCA, 2P	4438111310	1	
HARDWARE KIT				
S1	Screw, #2BTC 3x6 (B)	8109230083	25	
S2	Screw, #1PT 3X10B	8119130103	18	
S3	Screw, #2BTC 3x8 (Y)	8109230081	7	
S4	Screw, #2WPTC 3x6 (B)	8159230081	38	
S5	Screw, #HEX MSPW 3x12	8099130121	12	
S6	Screw, WSAM 4X8B	8159440083	10	
S7	Screw, #2BTC 3x6 (B)	8109230083	18	
S8	Screw, Ground	8155000710	4	
MISCELLANEOUS				
TRANS	Power Transformer, 230V 50Hz	2828100257	1	EUROPE
(TRANS)	Power Transformer, 120V 60Hz	2828009981	1	USA/CANADA
	Ass'y Posistor	052438012202	2	
	Card Cable, 25P, 210mm	4118825215	1	


PRODUCT SAFETY NOTICE

Each precaution in this manual should be followed during servicing. Components identified with the IEC symbol Δ in the part list are of special significance to safety. When replacing a component identified with Δ , use only the replacement parts designated, or parts with the same ratings of resistance, wattage or voltage that are designated in the parts list in this manual. Leakage-current or resistance measurements must be made to determine that exposed parts are acceptably insulated from the supply circuit before returning the product to the customer.


GENERAL UNIT

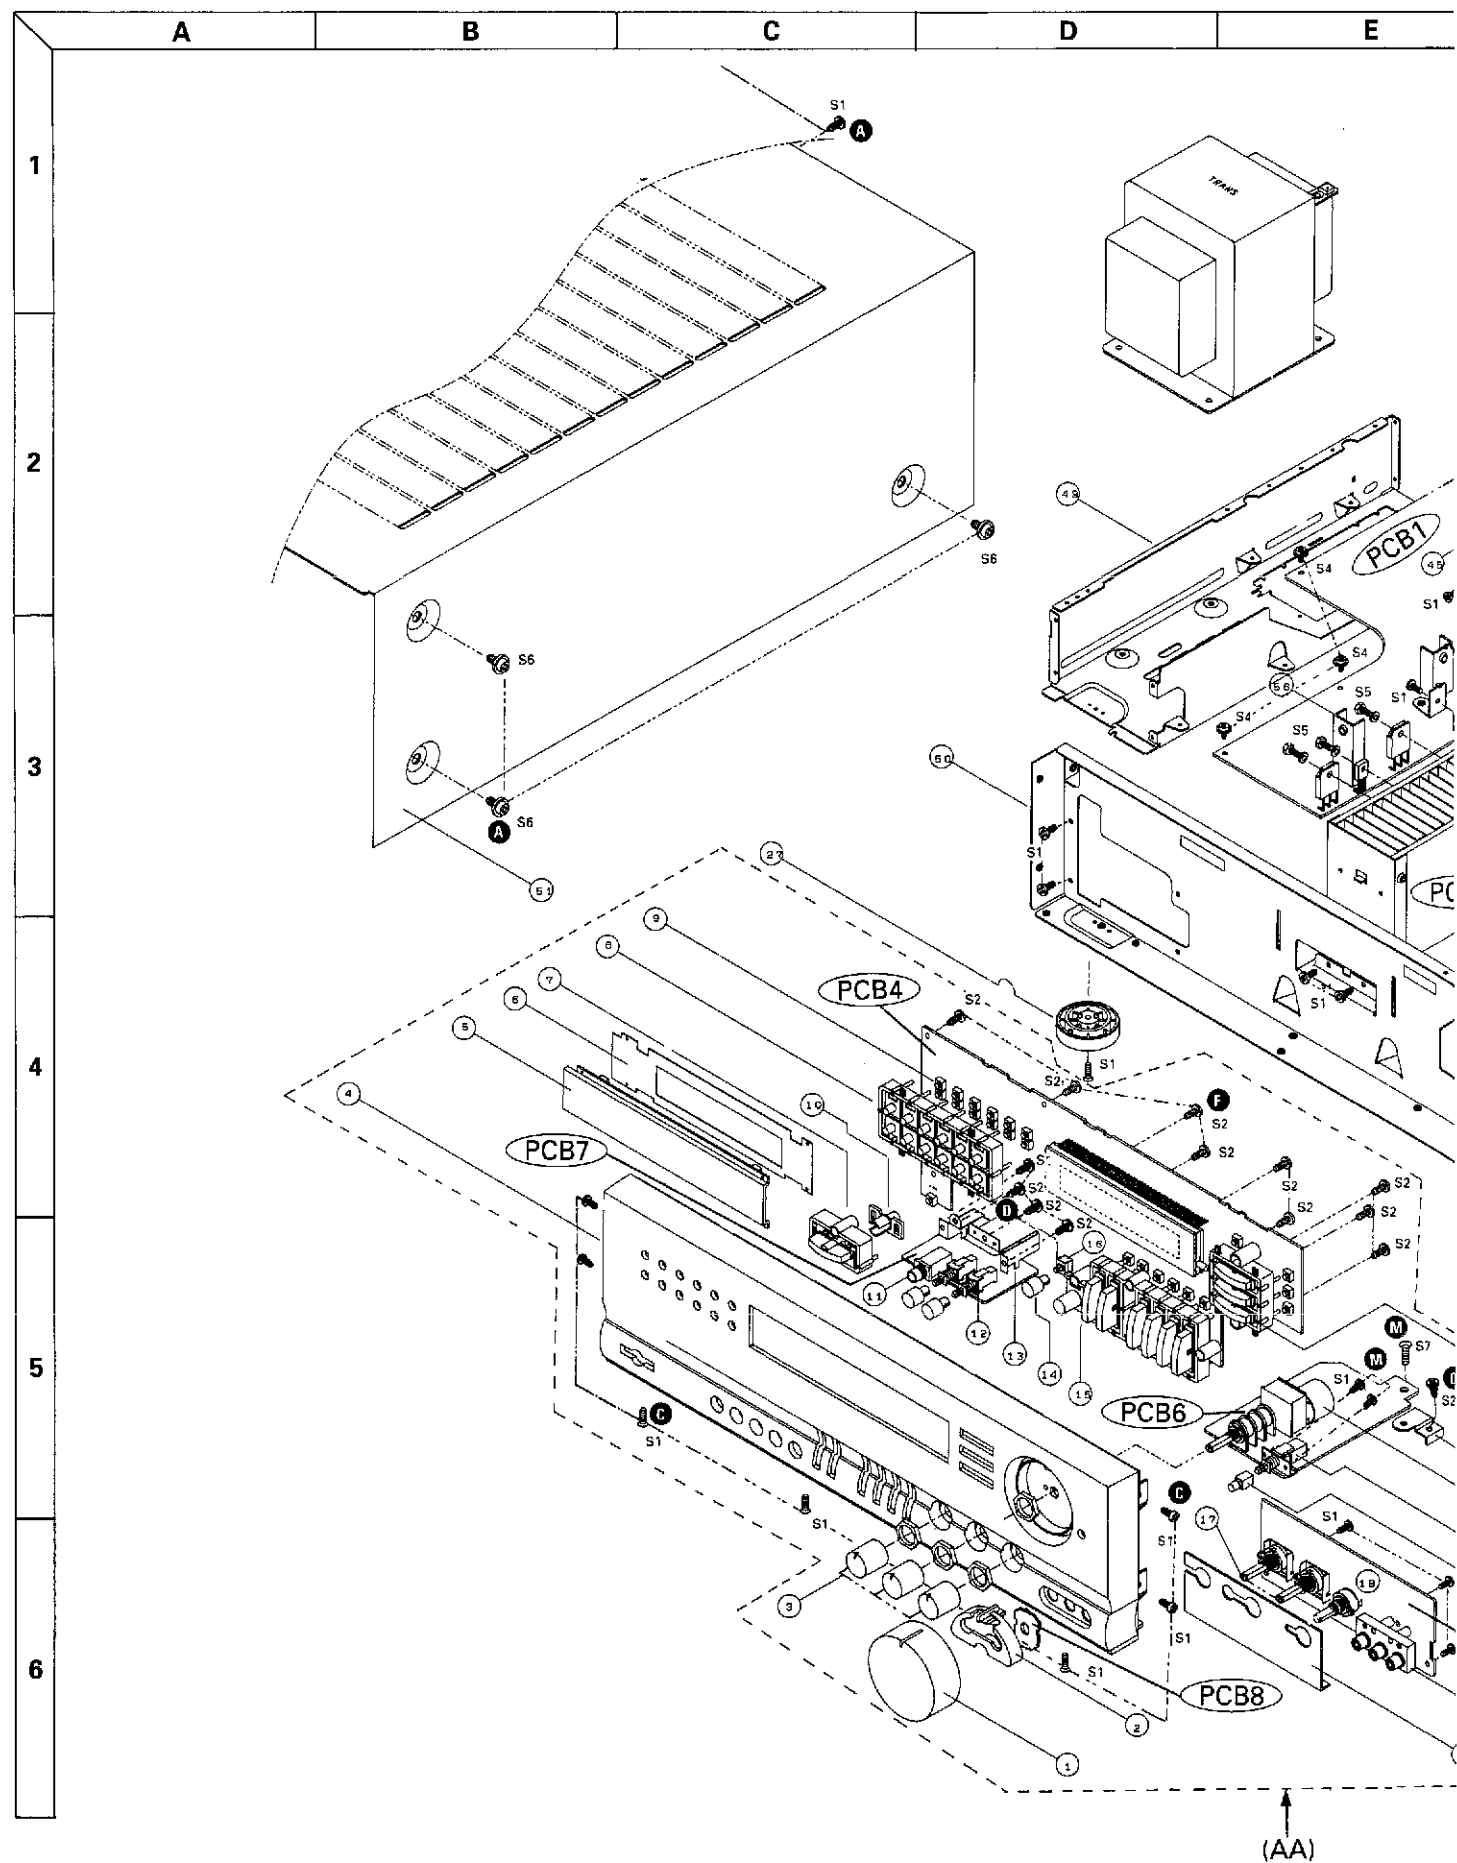


E	F	G	H	I
---	---	---	---	---

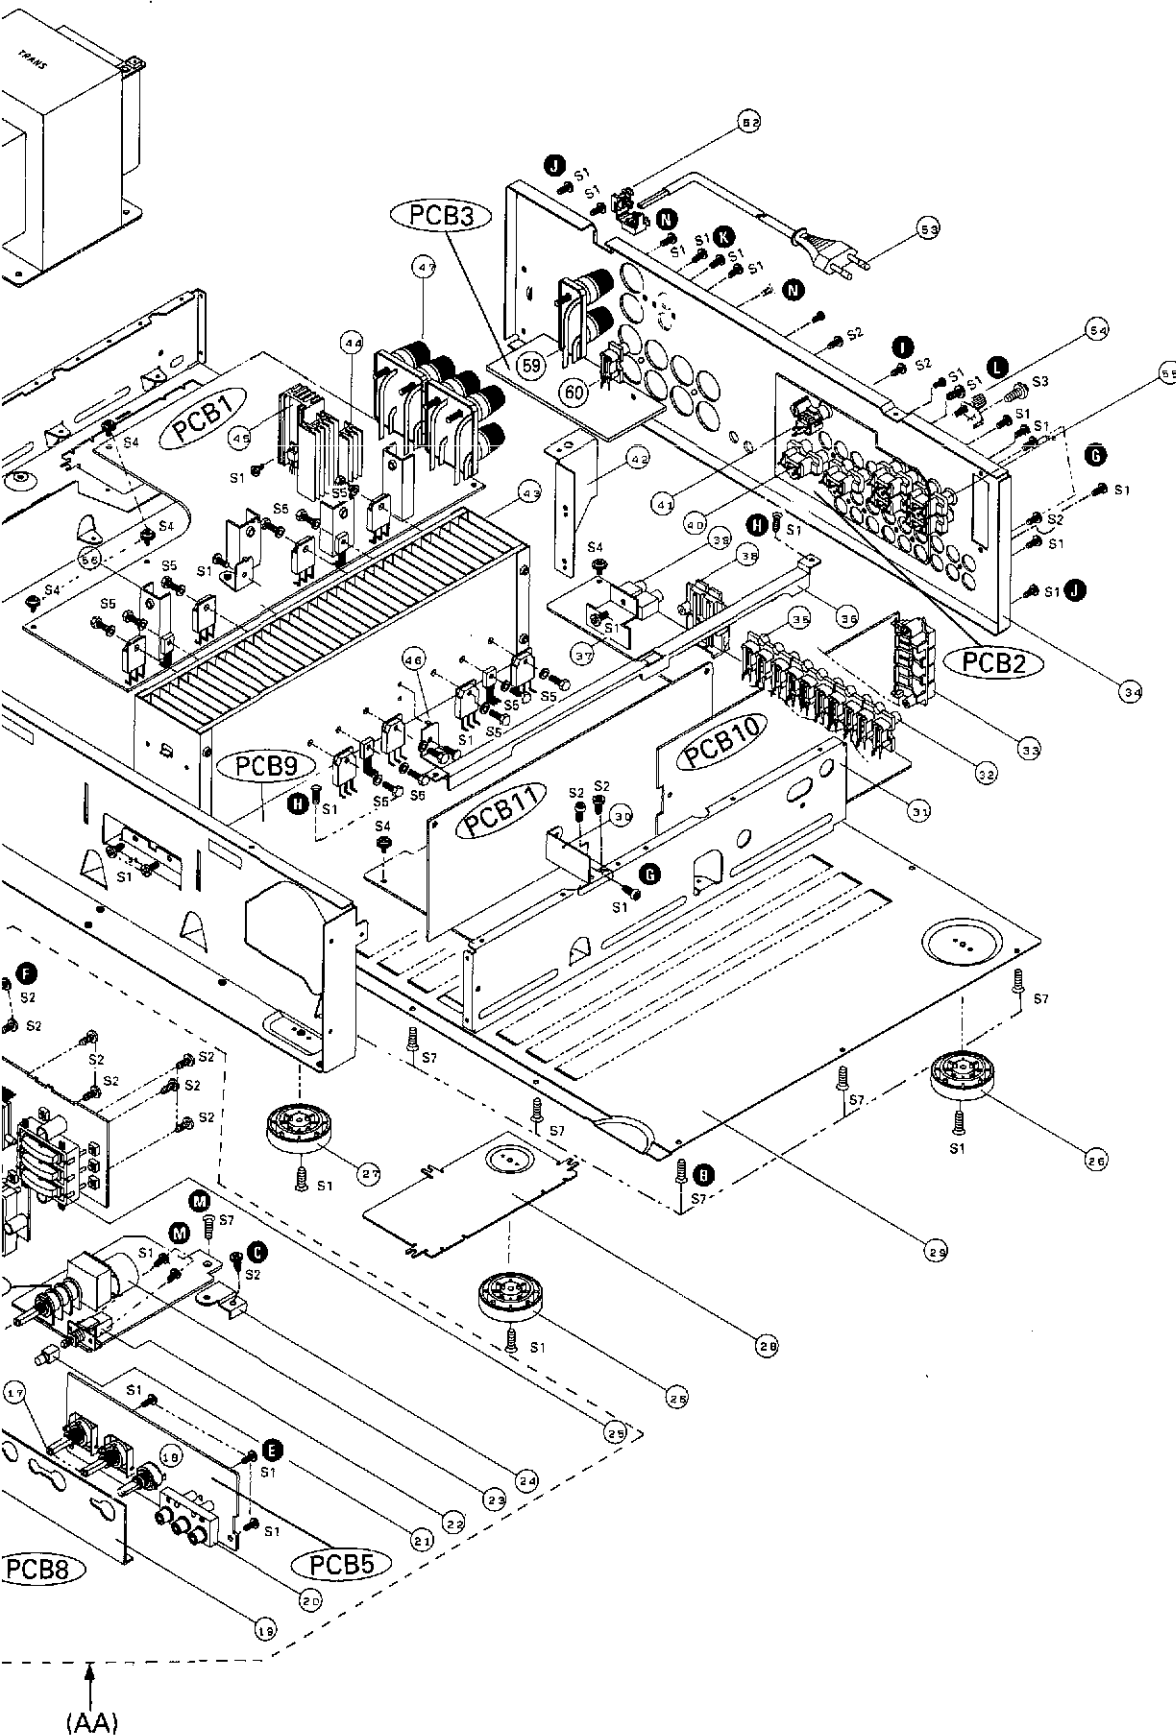


PRINTED CIRCUIT BOARDS

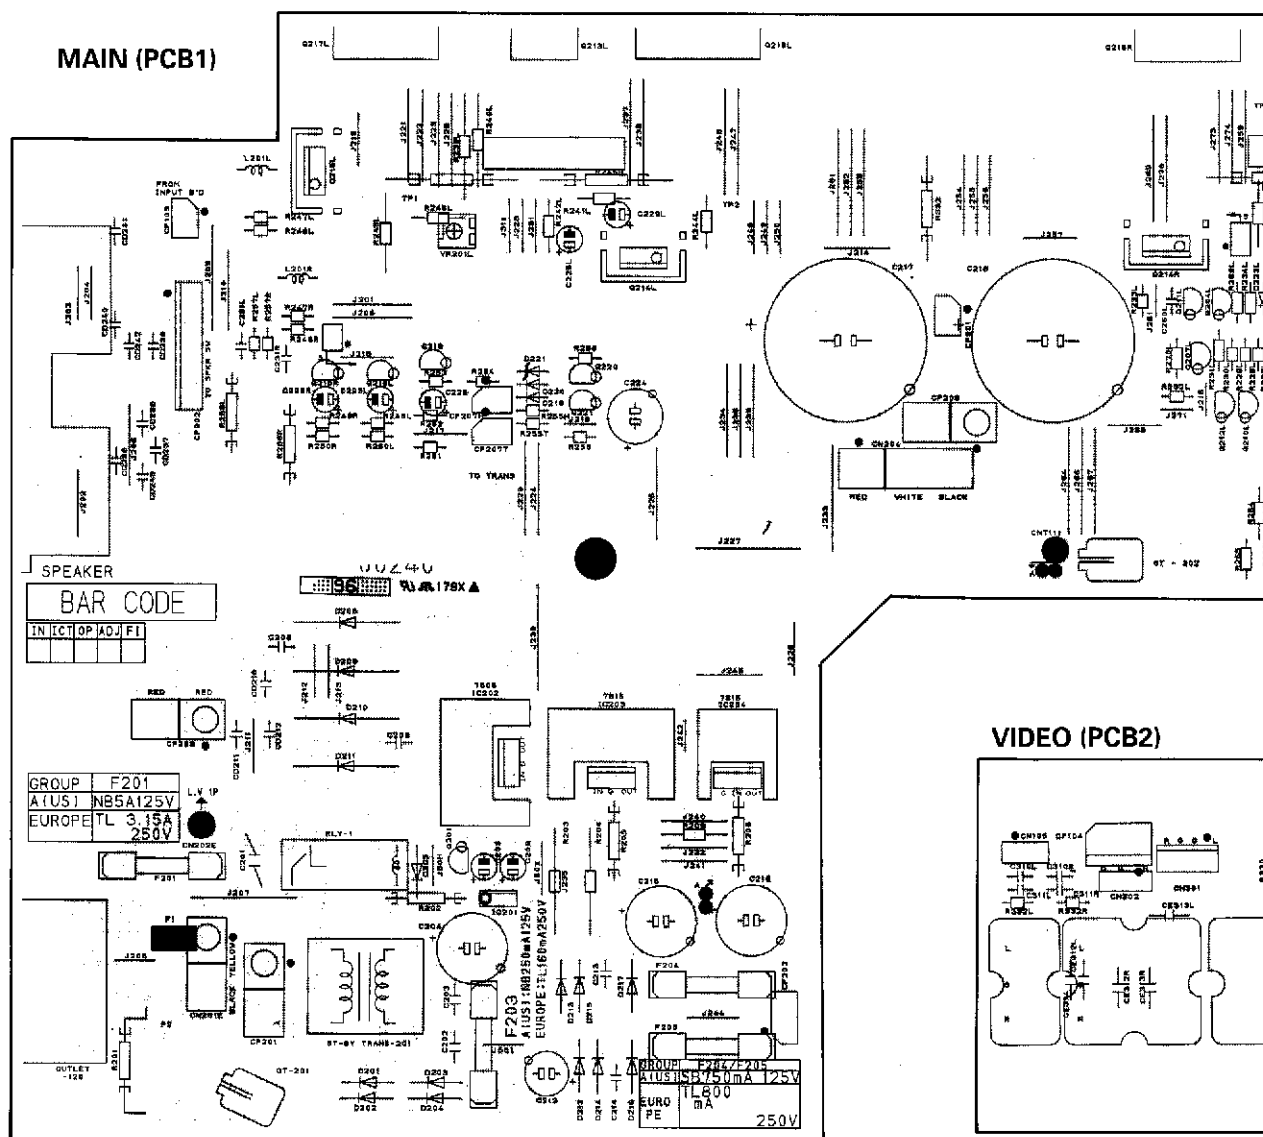


SURROUND (PCB11)

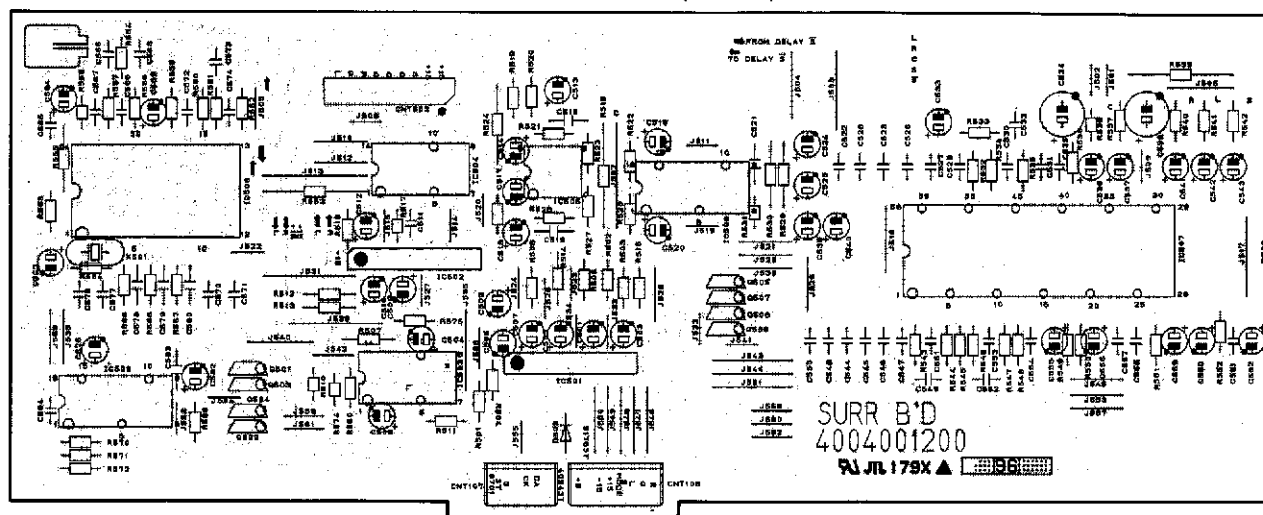


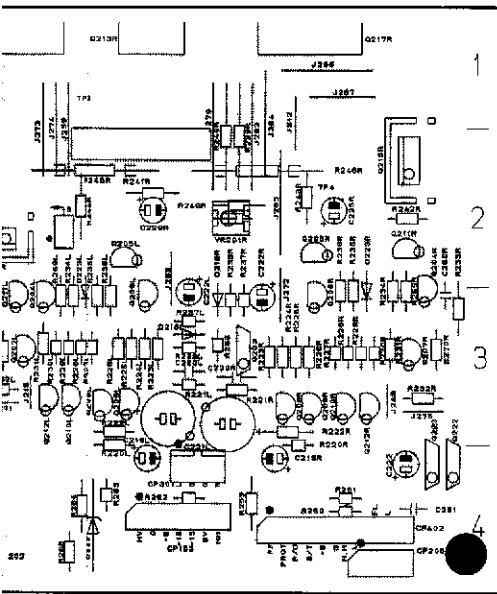


VOLUME (PCB6)

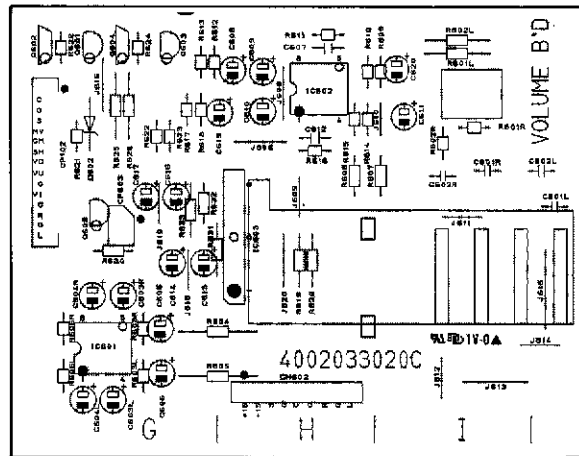


SPEAKER SEL. (PCB7)

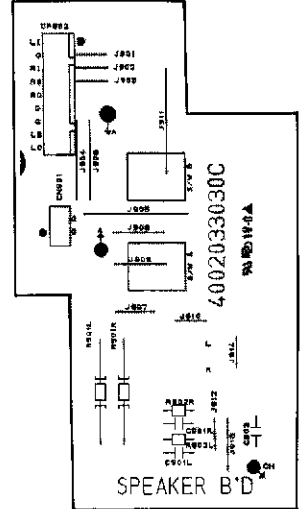


TONE (PCB5)

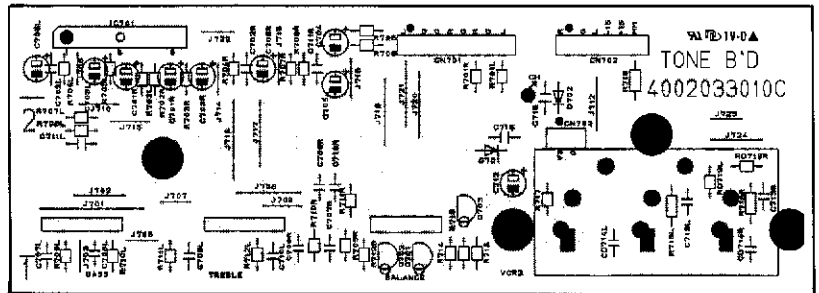


TUNER (PCB10)

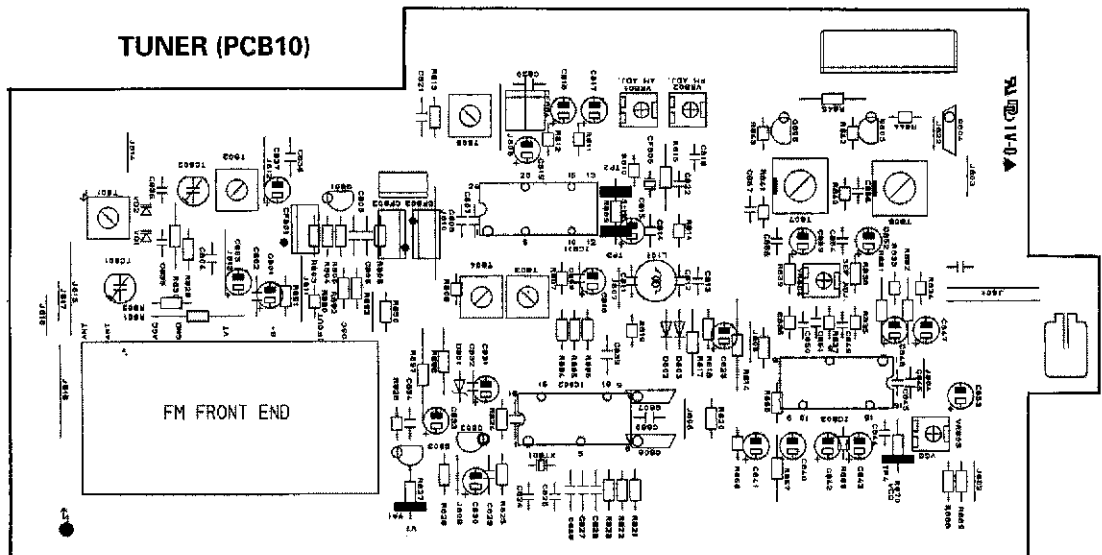


FRONT (PCB4)

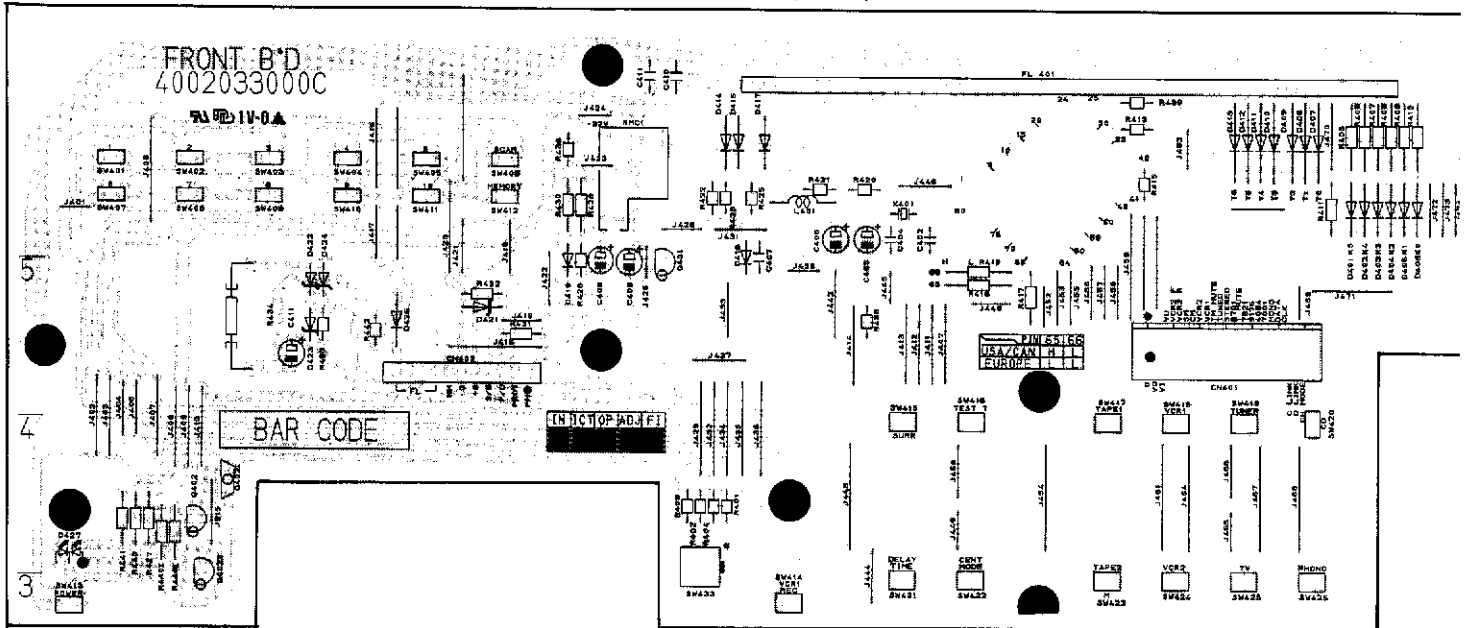

VOLUME LED (PCB8)

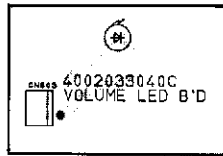


INPUT (PCB9)

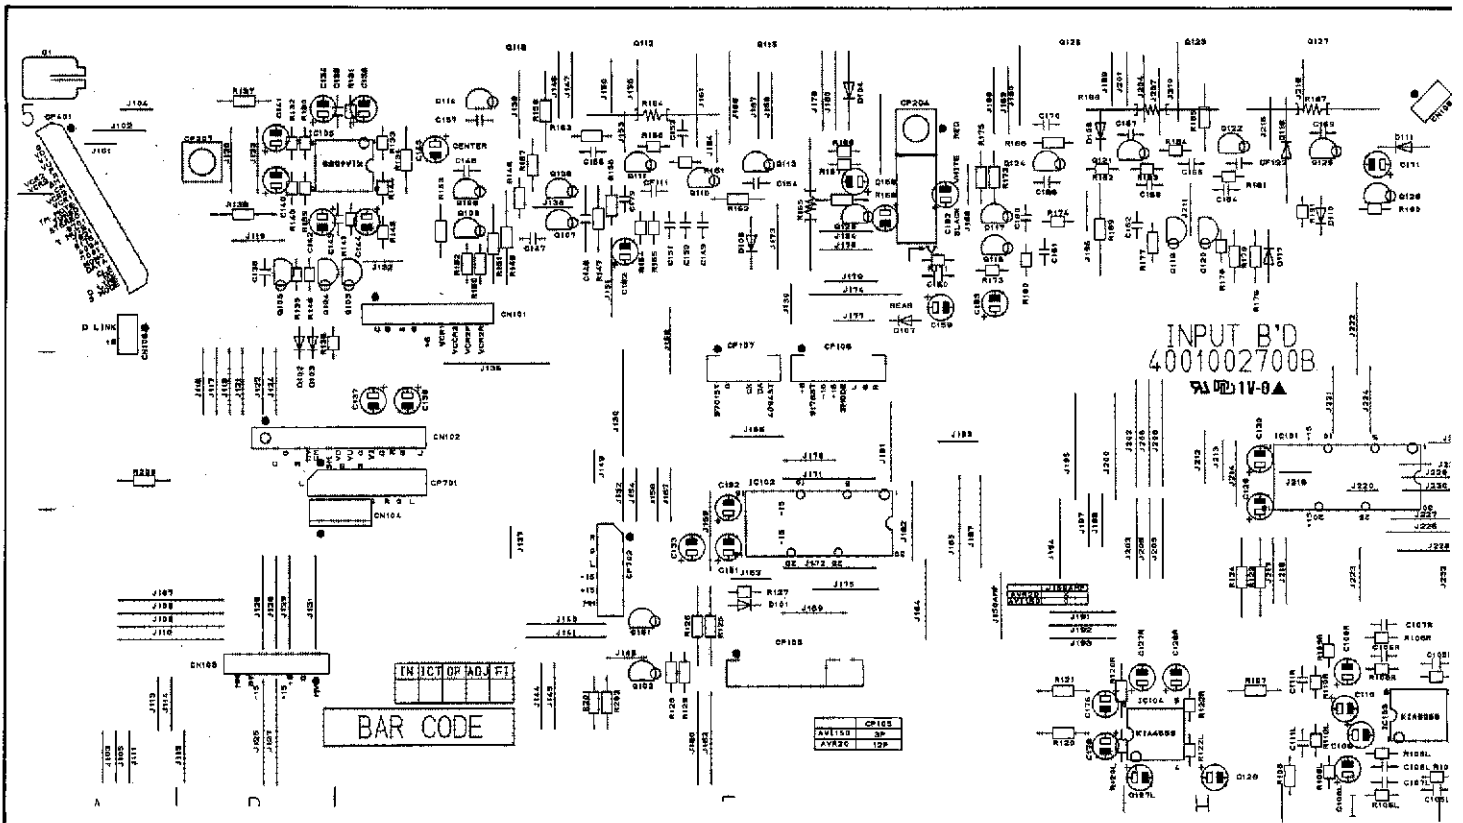

ELECTRICAL PARTS LIST

PRODUCT SAFETY NOTICE : Products marked with Δ have special characteristics important to safety. If you replace any of these components, read carefully the product safety notice in this manual.
Don't degrade the safety of the product through improper servicing.
Resistor/Capacitor tolerance – D : ($\pm 0.5\%$), J : ($\pm 5\%$), K : ($\pm 10\%$), M : ($\pm 20\%$), Z : +80, - 20%)

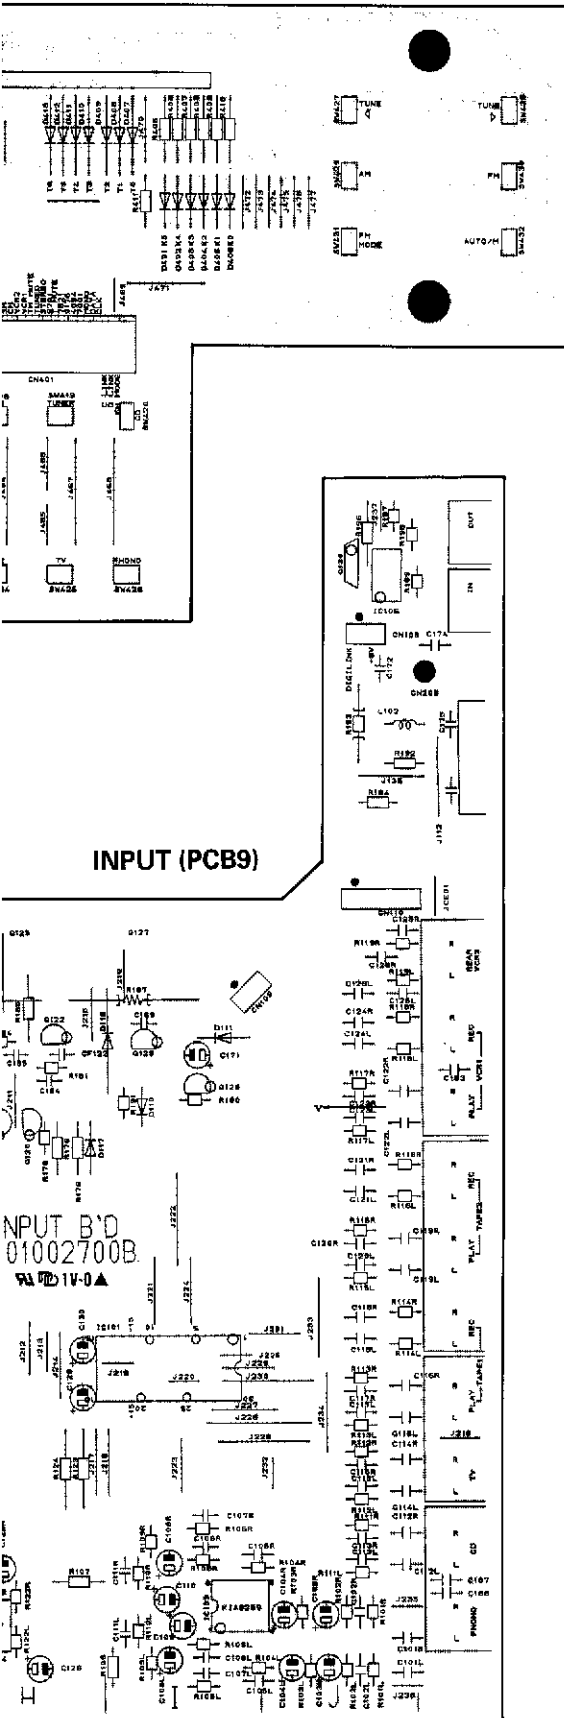

Ref. No.	Description	Mfr. Part No.	Q'ty	Version
PCB1 ASSEMBLY P.C. BOARD MAIN				
CAPACITORS				
C201	Ceramic Disc 0.0047 μ F 400 V K	3548472340	1	
C202/203	Mylar 0.047 μ F 100 V J	3679473120	2	
C204	Electrolytic SG 470 μ F 16 V M	3479347139	1	
C206	Electrolytic SG 22 μ F 50 V M	3479322071	1	
C208/209	Mylar 0.1 μ F 250 V J	3679104257	2	
C212	Ceramic Tubular 100 pF 35 V K	3519101935	1	
C213/214	Mylar 0.047 μ F 100 V J	3679473120	2	
C215/216	Electric SG 1000 μ F 35 V M	3409310269	2	
C217/218	Electrolytic HM 8200 μ F 63 V M	3419582235	2	
C219L/R	Electrolytic SG 47 μ F 25 V M	3479347041	2	
C220L/R	Electrolytic SG 100 μ F 50 V J	3479310171	2	
C221L/R	Electrolytic SG 470 μ F 10 V M	3479347121	2	
C222	Electrolytic SG 10 μ F 50 V M	3479310071	1	
C222L/R	Electrolytic SG 1 μ F 50 V M	3479310971	2	
C223L/R	Mylar 0.068 μ F 100 V J	3679683120	2	
C224	Electrolytic SG 470 μ F 10 V M	3479347121	1	
C225	Electrolytic SA 10 μ F 50 V M	3479310071	1	
C225L/R	Electrolytic SG 10 μ F 50 V M	3479310071	2	
C229L/R	Electrolytic SG 4.7 μ F 50 V M	3479347971	2	
C231L/R	Mylar 0.047 μ F 100 V J	3679473120	2	
C280L/R	Ceramic Disc 5 pF 50 V D	3579509030	2	
CD237-243	Ceramic Tubular 0.0047 μ F 50 V K	3519472935	3	EUROPE
CD210-212	Mylar 0.1 μ F 250 V J	3679104257	3	EUROPE
COILS				
L201L/R	Inductor, 0.5 μ H	2648001010	2	
CONNECTORS				
CN204	Lead Ass'y 3P 530mm	4358800353	1	
CP103	Wafer 7P	4428505410	1	
CP109	Wafer 2P	4428508210	1	
CP201	Wafer 2P, LV	4428525780	1	
CP202	Wafer 3P	4428505710	1	
CP203	Wafer 2P, LV	4428525780	1	
CP205	Wafer 4P	4428505610	1	
CP206	Wafer 1P, LV	4428525680	1	
CP207H	Wafer 2P	4428508210	1	
CP207T	Wafer 2P	4428508210	1	
CP301	Wafer, 4P	4428517710	1	
CP402	Wafer 11P	4428510710	1	
CP901	Wafer 2P	4428508210	1	
CP902	Wafer 9P	4428518210	1	
DIODES				
D201-205	1N4002, Rectifier	2258100135	5	
D208-211	PX6A03, Rectifier	2058100138	4	
D212-217	1N4002, Rectifier	2258100135	6	
D218L/R	1N4148M, Switching	2058322101	2	
D219/220	1N4148M, Switching	2058322101	2	
D221	Zener, UZ 9.1 BSC	2258599107	1	
D222	Zener, UZ 4.3 BSB	2258599102	1	
D223L/R	1N4148M, Switching	2058322101	2	
INTEGRATED CIRCUITS				
IC201/202	GL7806, Regulator	2168601110	2	
IC203	GL7815, Regulator	2168602105	1	
IC204	GL7915, Regulator	2168602114	1	
TRANSISTORS				
Q112	2SC4137, Bias NPN	2008622110	1	
Q115	2SC3854, NPN	2028416107	1	
Q116	2SA1480, PNP	2028116104	1	
Q123	2SC4137, Bias NPN	2008622110	1	
Q126	2SC3854, NPN	2028416107	1	
Q127	2SA1480, PNP	2028116104	1	
Q201	KTC1815Y/BKTC3198Y, NPN	2208606104	1	
Q203	DTC114YS, NPN	2208622106	1	
Q204L/R	KTA970/KTA1268, PNP	2208206104	2	
Q205L/R	KTA1015Y/BKTA1266Y, PNP	2208206105	2	
Q206L/R	KTA970/KTA1268, PNP	2208206104	2	
Q207L/R	KTC2240/BKTC3200, NPN	2208606108	2	
Q208L/R	KTA970/KTA1268, PNP	2208206104	2	
Q209L/R	KTA970/KTA1268, PNP	2208206104	2	
Q210L/R	KTC2240/BKTC3200, NPN	2208606108	2	

Ref. No.	Description	Mfr. Part No.	Q'ty	Version	Ref. No.	Description	Mfr. Part No.	Q'ty
Q211L/R	BKTA949/KTA1024, PNP	2208206102	2		PCB2	ASSEMBLY P.C. BOARD VIDEO		
Q212L/R	KTC2229/KTC3206, NPN	2208606107	2			CAPACITORS		
Q213L/R	2SC4137, Bias NPN	2008622110	2		C301	Electrolytic SG	33 uF 25 V M	3479333041 1
Q214L/R	2SC4883A, NPN	2028316100	2		C302	Electrolytic SG	470 uF 10 V M	3479347121 1
Q215L/R	2SA1859A, PNP	2028016100	2		C303	Ceramic Disc	470 pF 50V D	3579471130 1
Q216L/R	2SC3162N-O	2208307101	2		C304	Electrolytic SG	33 uF 25 V M	3479333041 1
Q217L/R	2SA1265N-O	2028007101	2		C305	Electrolytic SG	470 uF 10 V M	3479347121 1
Q218L/R	KTC1815Y/BKTC3198Y,NPN	2208606104	2		C306	Ceramic Tubular	1 pF 50 V K	3519010935 1
Q219	KTA1015Y/BKTA1266Y, PNP	2208206105	1		C307	Electrolytic SG	470 uF 10 V M	3479347121 1
Q220/221	KTC1815Y/BKTC3198Y,NPN	2208606104	2		C308	Ceramic Tubular	1 pF 50 V K	3519010935 1
Q222/223	DTC114YS, NPN	2208622106	2		C309	Electrolytic SG	100 uF 10 V M	3479310121 1
					C311	Ceramic Tubular	0.1 uF 50 V K	3519104935 1
					CZ301/302	Ceramic Disc	0.1 uF 50 V Z	3579104534 2
	RESISTORS					CONNECTORS		
R201	Carbon Film	3.3 Mohm 1/5 W J	3069335970	1		Lead Ass'y, 4P, 600mm	436204608331	1
R202	Metal Film	4.7 ohm 1 W J	3029479472	1		Lead Ass'y, 3P, 300mm	436103303331	1
R203/204	Metal Film	22 ohm 2 W J	3029220572	2	CN301	Wafer, 9P, Angle	4428513490	1
R205	Metal Film	10 ohm 1 W J	3029100472	1	CP101	Wafer 4P, Angle	4428513440	1
R206	Metal Film	4.7 ohm 1 W J	3029479472	1	CP104	Wafer 2P, Angle	4428513420	1
R209	Carbon Film	3.3 kohm 1/5 W J	3069332970	1				
R220L/R	Carbon Film	330 ohm 1/5 W J	3069331970	2				
R221L/R	Carbon Film	33 kohm 1/5 W J	3069333970	2				
R222L/R	Carbon Film	1 kohm 1/5 W J	3069102970	2				
R223L/R	Carbon Film	1.5 kohm 1/5 W J	3069152970	2	D301/302	DIODES		
R224L/R	Carbon Film	390 ohm 1/5 W J	3069391970	2		1N4148M, Switching	2058322101	2
R225L/R	Carbon Film	1.5 kohm 1/5 W J	3069152970	2				
R226L/R	Carbon Film	390 ohm 1/5 W J	3069391970	2				
R227L/R	Carbon Film	560 ohm 1/5 W J	3069561970	2	IC301	INTEGRATED CIRCUIT		
R228L/R	Carbon Film	560 ohm 1/5 W J	3069561970	2		GD4066, Switching	2138001101	1
R229L/R	Carbon Film	82 ohm 1/5 W J	3069820970	2				
R230L/R	Carbon Film	560 ohm 1/5 W J	3069561970	2				
R231L/R	Carbon Film	560 ohm 1/5 W J	3069561970	2				
R232L/R	Carbon Film	22 kohm 1/5 W J	3069223970	2		TRANSISTORS		
R233L/R	Carbon Film	22 kohm 1/5 W J	3069223970	2	Q301	KTA1015Y/BKTA1266Y, PNP	2208206105	1
R234L/R	Carbon Film	82 ohm 1/5 W J	3069820970	2	Q302	KTC1815Y/BKTC3198Y,NPN	2208606104	1
R235L/R	Carbon Film	560 ohm 1/5 W J	3069561970	2	Q303	KTA1015Y/BKTA1266Y, PNP	2208206105	1
R236L/R	Carbon Film	270 ohm 1/5 W J	3069271970	2	Q304	KTC1815Y/BKTC3198Y,NPN	2208606104	1
R237L/R	Carbon Film	10 kohm 1/5 W J	3069103970	2	Q305	KTA1015Y/BKTA1266Y, PNP	2208206105	1
R238L/R	Carbon Film	33 kohm 1/5 W J	3069333970	2	Q306	KTC1815Y/BKTC3198Y,NPN	2208606104	1
R239L/R	Carbon Film	360 ohm 1/4 W J	3069361970	2	Q307	FEET, 2SK117Y	2218207106	1
R240L/R	Carbon Film	1.2 kohm 1/4 W J	3069122970	2				
R241L/R	Carbon Film	82 ohm 1/5 W J	3069820970	2				
R242L/R	Carbon Film	33 kohm 1/5 W J	3069333970	2				
R243L/R	Carbon Film	1.5 kohm 1/5 W J	3069152970	2				
R244L/R	Carbon Film	1.8 kohm 1/5 W J	3069182970	2				
R245L/R	Cement	0.27 ohm 5 W K	3059276782	2				
R246L/R	Cement	0.27 ohm 5 W K	3059276782	2				
R247L/R	Carbon Film	22 ohm 1/5 W J	3069220970	2				
R248L/R	Carbon Film	22 ohm 1/5 W J	3069220970	2				
R249L/R	Carbon Film	910 ohm 1/5 W J	3069911970	2				
R250L/R	Carbon Film	6.8 kohm 1/5 W J	3069682970	2				
R251	Carbon Film	68 kohm 1/5 W J	3069683970	2				
R252	Carbon Film	100 kohm 1/5 W J	3069104970	2				
R253	Carbon Film	3.3 kohm 1/5 W J	3069332970	2				
R254	Carbon Film	1 kohm 1/5 W J	3069102970	2				
R255T	Carbon Film	6.8 kohm 1/5 W J	3069682970	1				
R256	Carbon Film	10 kohm 1/5 W J	3069103970	1				
R257L/R	Carbon Film	24 kohm 1/5 W J	3069243970	2				
R258L/R	Metal Film	10 ohm 1 W J	3029100472	2				
R259	Carbon Film	10 kohm 1/5 W J	3069103970	1				
R260	Carbon Film	10 kohm 1/5 W J	3069103970	1				
R261	Carbon Film	10 kohm 1/5 W J	3069103970	1				
R262	Carbon Film	1 kohm 1/5 W J	3069102970	1				
R263	Carbon Film	2.4 kohm 1/5 W J	3069242970	1				
R264	Carbon Film	22 kohm 1/5 W J	3069223970	1				
R265	Carbon Film	15 kohm 1/5 W J	3069153970	1				
R266	Carbon Film	150 kohm 1/5 W J	3069154970	1				
R269L/R	Carbon Film	560 ohm 1/5 W J	3069561970	2				
R270L/R	Carbon Film	2.4 kohm 1/5 W J	3069242970	2				
	FUSES							
F201	5T 250 V, 3.15 A	5508302735	1	EUROPE				
(F201)	NB 125 V, 5 A	5508203021	1	USA/CANADA				
F203	TL 250 V, 160 mA	5508301035	1	EUROPE				
(F203)	NB 125 V, 250 mA	5508201221	1	USA/CANADA				
F204/205	TL 250 V, 800 mA	5508301934	2	EUROPE				
(F204/205)	NB 125 V, 750 mA	5508101821	2	USA/CANADA				
	MISCELLANEOUS							
GT201/202	Ground Plate	4235007310	2					
RLY-1	Relay, SDT-SS-112DM	5528043000	1					
TRANS201	Transformer, Standby, 230V, 50Hz	2828090901	1	EUROPE				
(TRANS201)	Transformer, Standby, 120V, 60Hz	2828096001	1	USA/CANADA				
44	Heatsink, Regulator TR.	7505208220	1					
45	Heatsink, Regulator TR.	7505208120	2					
47	Terminal, Speaker, 8P	4408105810	1					
56	Heatsink, Regulator TR.	7505202410	4					
					PCB3	ASSEMBLY P.C. BOARD SUB-WOOFER		
						CAP, Mylar	0.047 uF 100 V J	3679473120 1
						CAP, Ceramic	0.047 uF 50 V K	3519473935 1
						CAP, Ceramic	0.047 uF 50 V K	3519473935 1
						RES, Carbon Film	10 ohm 1/5 W J	3069100970 1
						RES, Carbon Film	10 ohm 1/4 W J	3069100270 1
						RES, Carbon Film	24 kohm 1/5 W J	3069243970 1
						RES, Carbon Film	1 kohm 1/5 W J	3069102970 2
						L101	Coil, Inductor, 0.5 uH	2648001010 1
						CP110	Connector, Wafer, 5P	4428506910 1
						CP302	Connector, Wafer, 3P	4428505710 1
						59	Terminal Speaker, 2P	4408108710 1
						60	Jack RCA, 2P	4438111310 1
					PCB4	ASSEMBLY P.C. BOARD FRONT		
						CAPACITORS		
						Ceramic CH	56 pF 50 V J	3528560210 1
						Ceramic CH	56 pF 50 V J	3528560210 1

Ref. Part No.	Q'ty	Version	Ref. No.	Description	Mfr. Part No.	Q'ty	Version
C405	47	uF	10 V	M	3409247022	1	
C406	Electrolytic, Back	0.047	uF	5.5 V	K	3438247315	1
C407	Ceramic Disc	0.1	uF	50 V	Z	3579104534	1
C408	Electrolytic SG	1	uF	50 V	M	3479310971	1
C409	Electrolytic SG	10	uF	50 V	M	3479310071	1
C410	Mylar	0.047	uF	100 V	J	3679473120	1
C411	Electrolytic SG	100	uF	50 V	M	3479310171	1
C411	Mylar	0.047	uF	100 V	J	3679473120	1
CONNECTORS							
CN401	Wafer 25P, 52575-2530		4428525826	1			
CN402	Lead Ass'y, 11P, 200 mm		436111203331	1			
COIL							
L401	Inductor, 100 uH		2646610182	1			
DIODES							
D401-415	1N4148M, Switching		2058322101	8			
D417-419	1N4148M, Switching		2058322101	3			
D421	Zener, UZ 4.3 BSB		2258599102	1			
D422/423	Zener, UZ 16.0 BSD		2258599117	2			
D424	Zener, UZ 9.1 BSC		2258599107	1			
D426	1N4002, Rectifier		2258100135	1			
D427	LED, SPR54MWW3, RED/GREEN		2380222302	1			
INTEGRATED CIRCUIT							
IC401	CPU, CXP50112-568Q		213622181	1	17	Volume, Bass/Treble	3208049510
					18	Volume, Balance	3208052010
					20	Jack, RCA, 3P, VCR	4439109710
TRANSISTORS							
Q401/402	KTC1815Y/BKTC3198Y,NPN		2208606104	2		LUG, HI-WP #24BK LF 280	152624102857
RESISTORS							
R401-403	Carbon Film	10	kohm	1/5 W	J	3069103970	4
R404	Carbon Film	22	kohm	1/5 W	J	3069223970	1
R405-410	Carbon Film	47	kohm	1/5 W	J	3069473970	6
R411	Carbon Film	220	kohm	1/5 W	J	3069224970	1
R413	Carbon Film	330	kohm	1/5 W	J	3069334970	1
R415	Carbon Film	10	kohm	1/5 W	J	3069103970	1
R417-402	Carbon Film	10	kohm	1/5 W	J	3069103970	4
R421	Carbon Film	100	kohm	1/5 W	J	3069104970	1
R422/423	Carbon Film	47	kohm	1/5 W	J	3069473970	2
R425	Carbon Film	47	kohm	1/5 W	J	3069473970	1
R426	Carbon Film	10	kohm	1/5 W	J	3069103970	1
R427	Carbon Film	1	kohm	1/5 W	J	3069102970	1
R428	Carbon Film	330	ohm	1/5 W	J	3069331970	1
R430	Carbon Film	47	kohm	1/5 W	J	3069473970	1
R431/432	Carbon Film	4.7	kohm	1/5 W	J	3069472970	2
R433	Carbon Film	15	kohm	1/5 W	J	3069153970	1
R434	Metal Film	390	ohm	1 W	J	3029391472	1
R436	Carbon Film	330	ohm	1/5 W	J	3069331970	1
R436	Carbon Film	3.3	kohm	1/5 W	J	3069332970	1
R439	Carbon Film	220	ohm	1/5 W	J	3069221970	1
R440	Carbon Film	270	ohm	1/5 W	J	3069271970	1
R441	Carbon Film	220	ohm	1/5 W	J	3069221970	1
R442	Carbon Film	100	ohm	1/5 W	J	3069101970	1
MISCELLANEOUS							
16(SW433)	Switch, Push		4628054410	1	D602	Zener, UZ 4.3 BSB	2258599102
9	Switch, Tact		468003710	32	D701	1N4148M, Switching	2058322101
FL401	FIP, 11CM9, FL Display		2328130925	1	D702	1N4148M, Switching	2058322101
RM01	TFMTS360, 36 kHz, Remocon sensor		2408005001	1	INTEGRATED CIRCUITS		
X401	Resonator, 4.19MHz		3938124005	1	IC601/602	KIA7559P/KIA4559P,OP AMP	2168206104
	Sponge, Rubber		6715020730	1	IC603	TA7291S	2168007204
ASSEMBLY P.C. BOARD VOLUME							
CAPACITORS							
C701L/R	Electrolytic SG	10	uF	50 V	M	3479310071	2
C702L/R	Ceramic Tubular	47	pF	50 V	K	3519470935	2
C703L/R	Electrolytic SG	4.7	uF	50 V	M	3479347971	2
C704/705	Electrolytic SG	47	uF	25 V	M	3479347041	2
C706L/R	Electrolytic SG	10	uF	50 V	M	3479310071	2
C707L/R	Mylar	0.018	uF	100 V	J	3679183120	2
C708L/R	Mylar	0.082	uF	63 V	K	3679823297	2
C709L/R	Mylar	0.0039	uF	100 V	J	3679392120	2
C710L/R	Mylar	0.018	uF	100 V	J	3679183120	2
C711L/R	Ceramic Tubular	560	pF	50 V	K	3519561935	2
C712	Electrolytic SG	33	uF	25 V	M	3479333041	1
C713L/R	Ceramic Tubular	100	pF	50 V	K	3519101935	2
C715/716	Ceramic Tubular	0.1	uF	50 V	K	3519104935	2
CONNECTORS							
CN701	Lead Ass'y, 8P, 200mm		436106203331	1	Q601	KTD1302, NPN	2208606112
CN702	Lead Ass'y, 6P, 220mm		436106223331	1	Q602	KTA114Y/KRA107M, PNP	2238006103
CN703	Lead Ass'v 2P, 480 mm		436102483331	1	Q603	KTD1302, NPN	2208606112
					Q604	KTA114Y/KRA107M, PNP	2238006103
					Q605	DTC114TS, NPN	2208622108
RESISTORS							
R601L/R	Carbon Film	5.1	kohm	1/5 W	J	3069512970	2
R602L/R	Carbon Film	18	kohm	1/5 W	J	3069183970	2
R603L/R	Carbon Film	100	kohm	1/5 W	J	3069104970	2
R604/605	Carbon Film	100	ohm	1/5 W	J	3069101970	2
R606L/R	Carbon Film	100	kohm	1/5 W	J	3069104970	2
R607/608	Carbon Film	5.1	kohm	1/5 W	J	3069512970	2
R609	Carbon Film	47	kohm	1/5 W	J	3069473970	1
R610	Carbon Film	1	kohm	1/5 W	J	3069102970	1
R611	Carbon Film	6.2	kohm	1/5 W	J	3069622970	1
R612	Carbon Film	100	kohm	1/5 W	J	3069104970	1
R613	Carbon Film	470	ohm	1/5 W	J	3069471970	1
R614	Carbon Film	47	kohm	1/5 W	J	3069473970	1
R615	Carbon Film	1	kohm	1/5 W	J	3069102970	1


Ref. No.	Description	Mfr. Part No.	Q'ty	Version	Ref. No.	Description	Mfr. Part No.	Q'ty	Version
R616	Carbon Film	6.2 kohm 1/5 W J	3069622970	1	C184	Ceramic Disc	8 pF 50 V D	3579809030	1
R617	Carbon Film	100 kohm 1/5 W J	3069104970	1	C186	Ceramic Disc	15 pF 50 V J	3579150130	1
R618	Carbon Film	470 ohm 1/5 W J	3069471970	1	C187	Ceramic Disc	1000 pF 50 V Z	3579102530	1
R619/620	Carbon Film	100 ohm 1/5 W J	3069101970	2	C188/189	Ceramic Tubular	220 pF 50 V K	3519221935	2
R621	Carbon Film	3.3 kohm 1/5 W J	3069332970	1	C170	Mylar	0.047 uF 100 V J	3679473120	1
R622-624	Carbon Film	1 kohm 1/5 W J	3069102970	3	C171	Electrolytic SG	1 uF 50 V M	3479310971	1
R625-628	Carbon Film	470 ohm 1/5 W J	3069471970	1	C172	Mylar	0.047 uF 100 V J	3679473120	1
R630	Carbon Film	560 ohm 1/5 W J	3069561970	1	C173-175	Ceramic Disc	0.0047 uF 50 V Z	3579472530	3
R631	Carbon Film	47 ohm 1/5 W J	3069479970	1	C176	Electrolytic SG	47 uF 25 V M	3479347041	1
R632	Carbon Film	10 kohm 1/5 W J	3069103970	1	C178	Electrolytic SG	47 uF 25 V M	3479347041	1
R633	Carbon Film	3 kohm 1/5 W J	3069302970	1	C187	Ceramic Disc	0.1 uF 50 V Z	3579104534	1
					C188	Ceramic Tubular	0.047 uF 50 V K	3519473935	1
MISCELLANEOUS					CONNECTORS				
22	Switch, Loud	4628059610	1		CN101	Lead Ass'y, 9P, 300mm	436109303331	1	
23	Volume, Motor	3228019410	1		CN102	Lead Ass'y, 16P, 160mm	436215163332	1	
PCB7 ASSEMBLY P.C. BOARD SPEAKER					CN103	Lead Ass'y, 7P, 460mm	436107463331	1	
CN901	Connector, Lead Ass'y, 2P, 280mm	436102283321	1		CN104	Lead Ass'y, 4P, 300mm	436104308331	1	
CN902	Connector, Lead Ass'y, 9P, 400mm	435209403401	1		CN108	Lead Ass'y, 2P, 440mm	436402443231	1	
R901/902	RES, Metal Film	270 ohm 2 W J	3029271572	2	CN109	Lead Ass'y, 2P, 220mm	436102233331	1	
11	Jack, Phone	4436005020	1		CN110	Lead Ass'y, 5P, 260mm	436105263331	1	
12	Switch, Push	4626043810	2		CP105	Wafer 12P	4428550120	1	
13	Shield, Fence, knob	6165147910	1		CP106	Wafer 8P	4428550080	1	
	LUG, HI-W AWG #24BK60	152624100626	1		CP107	Wafer 6P	4428550060	1	
PCB9 ASSEMBLY P.C. BOARD VOLUME LED					CN204(CP110)	Wafer 3P, LV	4428525790	1	
CN603	Connector, Lead Ass'y, 2P, 180mm	435102183181	1		CP207	Wafer, 1P AC	4428525860	1	
D601	LED, SLR 40MG3	2306220324	1		CP401	Wafer, FPC, 25P	4428526370	1	
					CP701	Wafer 8P	4428505510	1	
					CP702	Wafer 6P	4428505810	1	
PCB9 ASSEMBLY P.C. BOARD INPUT					COILS				
CAPACITORS					L101L/R	Inductor, 0.5 uH	2648001010	1	EUROPE
C101L/R	Ceramic Tubular	100 pF 50 V K	3519101935	2	L102	Inductor, 50 uH	2648601470	1	
C102L/R	Ceramic Tubular	100 pF 50 V K	3519101935	2					
C103L/R	Electrolytic SG	1 uF 50 V M	3479310971	2					
C104L/R	Electrolytic SG	33 uF 25 V M	3479333041	1					
C105L/R	Ceramic Tubular	2200 pF 50 V K	3519222935	2	D101-104	1N4148M, Switching	2058322101	4	
C106L/R	Mylar	0.0056 uF 100 V J	3679562120	2	D108-108	1N4148M, Switching	2058322101	3	
C107L/R	Mylar	0.0018 uF 100 V J	3679182120	2	D110/111	1N4148M, Switching	2058322101	2	
C108L/R	Electrolytic SG	1 uF 50 V M	3479310971	2	D116/117	1N4148M, Switching	2058322101	2	
C109/110	Electrolytic SG	47 uF 25 V M	3479347041	2					
C111L/R	Mylar	0.0018 uF 100 V J	3679182120	2					
C112L/R	Ceramic Tubular	100 pF 50 V K	3519101935	2	INTEGRATED CIRCUITS				
C113L/R	Ceramic Tubular	100 pF 50 V K	3519101935	2	IC101/102	LC7821	2168017132	2	
C114L/R	Ceramic Tubular	100 pF 50 V K	3519101935	2	IC103	KIA6259P, OP AMP	2168206107	1	
C115L/R	Ceramic Tubular	100 pF 50 V K	3519101935	2	IC104/105	KIA7559P/KIA4559P, OP AMP	2168206104	2	
C116L/R	Ceramic Tubular	100 pF 50 V K	3519101935	2	IC106	LTV817, Photo-Coupler	2408000136	1	
C117L/R	Ceramic Tubular	100 pF 50 V K	3519101935	2					
C118L/R	Ceramic Tubular	100 pF 50 V K	3519101935	2					
C119L/R	Ceramic Tubular	100 pF 50 V K	3519101935	2	TRANSISTORS				
C120L/R	Ceramic Tubular	100 pF 50 V K	3519101935	2	Q103/104	KTC1815Y/BKTC3198Y, NPN	2208606104	2	
C121L/R	Ceramic Tubular	100 pF 50 V K	3519101935	2	Q105	KTA114Y/KRA107M, PNP	2238008103	1	
C122L/R	Ceramic Tubular	100 pF 50 V K	3519101935	2	Q106/107	KTC2240/BKTC3200, NPN	2208606108	2	
C123L/R	Ceramic Tubular	100 pF 50 V K	3519101935	2	Q108/109	KTC1815Y/BKTC3198Y, NPN	2208606104	2	
C124L/R	Ceramic Tubular	100 pF 50 V K	3519101935	2	Q110	BKTA949/KTA1024, PNP	2208206102	1	
C125L/R	Ceramic Tubular	100 pF 50 V K	3519101935	2	Q111	KTC2229/KTC3206, NPN	2208606107	1	
C126L/R	Ceramic Tubular	100 pF 50 V K	3519101935	2	Q113	BKTC2235/KTC1027, NPN	2228406120	1	
C127L/R	Electrolytic SG	4.7 uF 50 V M	3479347971	2	Q114	BKTA965/KTA1023, PNP	2228106107	1	
C128L/R	Electrolytic SG	4.7 uF 50 V M	3479347971	2	Q117/118	KTC2240/BKTC3200, NPN	2208606108	2	
C129-132	Electrolytic SG	47 uF 25 V M	3479347041	4	Q119/120	KTC1815Y/BKTC3198Y, NPN	2208606104	2	
C133/134	Electrolytic SG	1 uF 50 V M	3479310971	2	Q121	BKTA949/KTA1024, PNP	2208206102	1	
C135	Ceramic Disc	1000 pF 50 V Z	3579102530	1	Q122	KTC2229/KTC3206, NPN	2208606107	1	
C136	Electrolytic SG	1 uF 50 V M	3479310971	1	Q124	BKTC2235/KTC1027, NPN	2228406120	1	
C137	Electrolytic SG	47 uF 16 V M	3479347031	1	Q125	BKTA965/KTA1023, PNP	2228106107	1	
C138	Electrolytic SG	22 uF 25 V M	3479322041	1	Q128/129	KTC1815Y/BKTC3198Y, NPN	2208606104	2	
C139	Mylar	0.022 uF 100 V J	3679223120	1	Q130	KTA114Y/KRA107M, PNP	2238006103	1	
C140/141	Electrolytic SG	47 uF 25 V M	3479347041	2					
C142	Electrolytic SG	1 uF 50 V M	3479310971	1	RESISTORS				
C143	Ceramic Disc	1000 pF 50 V Z	3579102530	1	R101L/R	Carbon Film	1 kohm 1/5 W J	3069102970	2
C144/145	Electrolytic SG	1 uF 50 V M	3479310971	1	R102L/R	Carbon Film	91 kohm 1/5 W J	3069913970	2
C146	Ceramic Tubular	680 pF 50 V K	3519681935	1	R103L/R	Carbon Film	91 kohm 1/5 W J	3069913970	2
C147	Ceramic Tubular	470 pF 50 V K	3519471935	1	R104L/R	Carbon Film	820 ohm 1/5 W J	3069821970	2
C148	Ceramic Tubular	27 pF 50 V J	3519270935	1	R105L/R	Carbon Film	560 kohm 1/5 W J	3069564970	2
C149	Ceramic Tubular	15 pF 50 V J	3519150935	1	R106L/R	Carbon Film	43 kohm 1/5 W J	3069433970	2
C151	Ceramic Disc	8 pF 50 V D	3579809030	1	R107/108	Carbon Film	47 ohm 1/5 W J	3069470970	2
C152	Electrolytic SG	33 uF 25 V M	3479333041	1	R109L/R	Carbon Film	470 ohm 1/5 W J	3069471970	2
C153	Ceramic Disc	1000 pF 50 V Z	3579102530	1	R110L/R	Carbon Film	100 kohm 1/5 W J	3069104970	2
C154	Ceramic Tubular	220 pF 50 V K	3519221935	1	R111L/R	Carbon Film	1 kohm 1/5 W J	3069102970	2
C155	Mylar	0.047 uF 100 V J	3679473120	1	R112L/R	Carbon Film	1 kohm 1/5 W J	3069102970	2
C156	Electrolytic SG	1 uF 50 V M	3479310971	1	R113L/R	Carbon Film	1 kohm 1/5 W J	3069102970	2
C157	Ceramic Tubular	220 pF 50 V K	3519221935	1	R114L/R	Carbon Film	1 kohm 1/5 W J	3069102970	2
C159	Electrolytic SG	0.47 uF 50 V M	3479347971	1	R115L/R	Carbon Film	1 kohm 1/5 W J	3069102970	2
C160	Ceramic Tubular	880 pF 50 V K	3519681935	1	R116L/R	Carbon Film	1 kohm 1/5 W J	3069102970	2
C161	Ceramic Tubular	470 pF 50 V K	3519471935	1	R117L/R	Carbon Film	1 kohm 1/5 W J	3069102970	2
C162	Ceramic Tubular	27 pF 50 V J	3519270935	1	R118L/R	Carbon Film	1 kohm 1/5 W J	3069102970	2
C163	Electrolytic SG	33 uF 25 V M	3479333041	1	R119L/R	Carbon Film	1 kohm 1/5 W J	3069102970	2
					R120L/R	Carbon Film	47 kohm 1/5 W J	3069473970	2
					R121	Carbon Film	470 ohm 1/5 W J	3069471970	1

27


Ref. No.	Description		Mfr. Part No.	Q'ty	Version	Ref. No.	Description		Mfr. Part No.	Q'ty	Version
R544	Carbon Film	47	kohm 1/5 W J	3069473970	1	R559	Carbon Film	15	kohm 1/5 W J	3069153970	1
R545	Carbon Film	15	kohm 1/5 W J	3069153970	1	R560	Carbon Film	22	ohm 1/5 W J	3069220970	1
R546	Carbon Film	7.5	kohm 1/5 W J	3069752970	1	R561	Carbon Film	18	kohm 1/5 W J	3069183970	1
R547	Carbon Film	47	kohm 1/5 W J	3069473970	1	R562	Carbon Film	15	kohm 1/5 W J	3069153970	1
R548	Carbon Film	15	kohm 1/5 W J	3069153970	1	R563	Carbon Film	47	ohm 1/5 W J	3069470970	1
R549	Carbon Film	22	kohm 1/5 W J	3069223970	1	R564	Carbon Film	1	Mohm 1/5 W J	3069105970	1
R550	Carbon Film	10	Mohm 1/5 W J	3069106970	1	R665-567	Carbon Film	1	kohm 1/5 W J	3069102970	3
R551	Carbon Film	22	kohm 1/5 W J	3069223970	1	R569	Carbon Film	470	ohm 1/5 W J	3069471970	1
R552	Carbon Film	100	kohm 1/5 W J	3069104970	1	R570	Carbon Film	1	kohm 1/5 W J	3069102970	1
R553	Carbon Film	8.2	kohm 1/5 W J	3069822970	1	R571/572	Carbon Film	1	kohm 1/5 W J	3069102970	2
R554	Carbon Film	7.5	kohm 1/5 W J	3069752970	1	R573	Carbon Film	100	ohm 1/5 W J	3069101970	1
R555	Carbon Film	56	ohm 1/5 W J	3069560970	1						
R556	Carbon Film	18	kohm 1/5 W J	3069183970	1						
R557	Carbon Film	5.6	kohm 1/5 W J	3069562970	1						
R558	Carbon Film	22	ohm 1/5 W J	3069220970	1	X501	MISCELLANEOUS Resonator, 2MHz		3938124001	1	

IC FUNCTIONAL BLOCK DIAGRAM


FRONT-END : FE FTH3-505H (USA/CA)

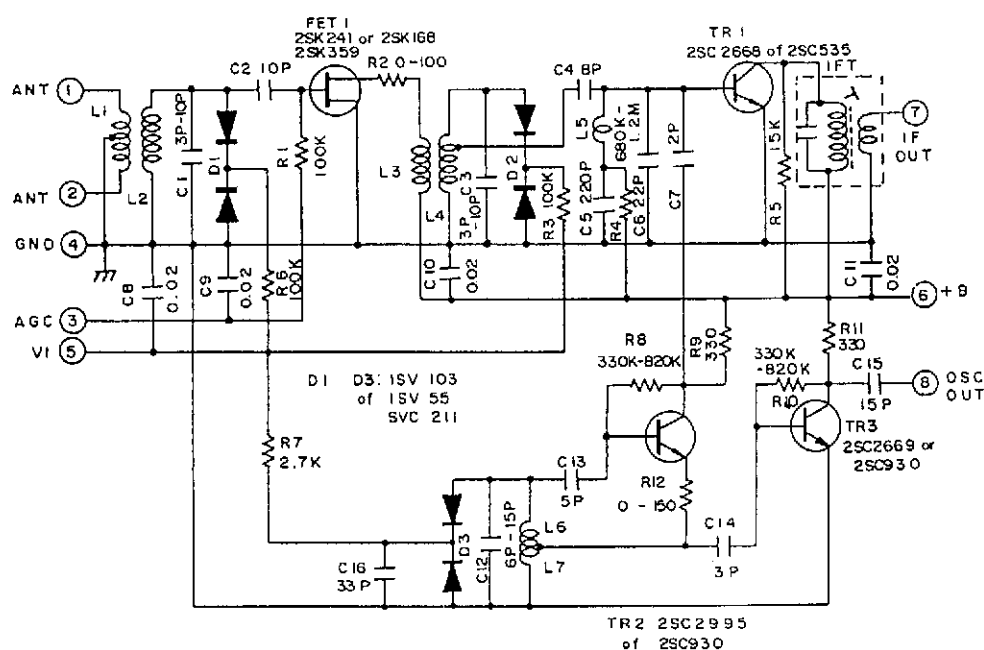

FE407-G60 (Europe)

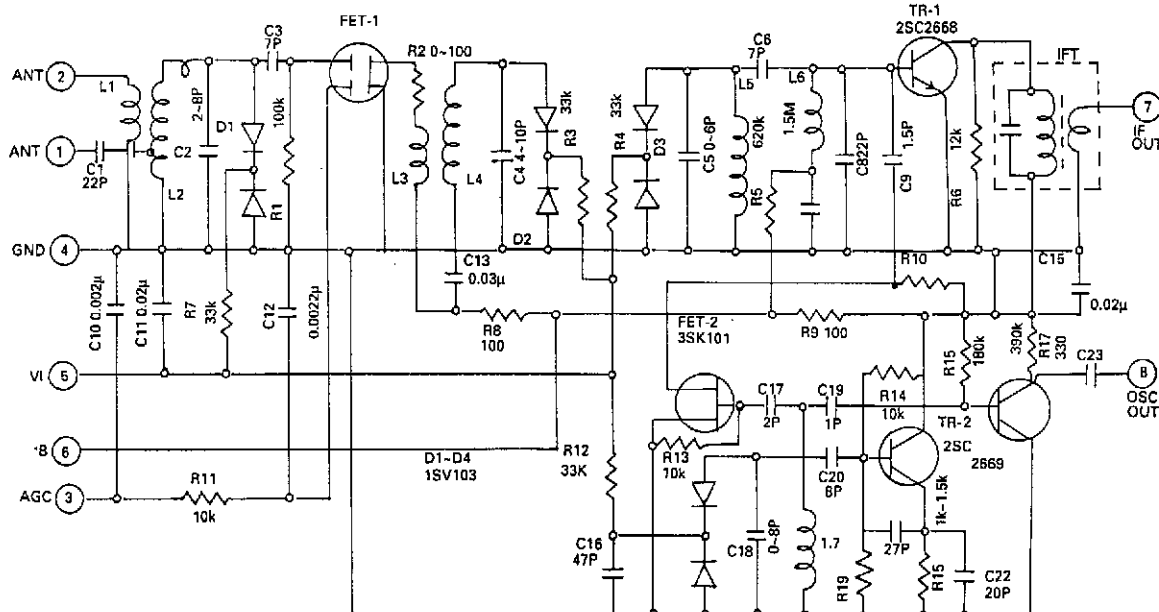


IC301 GD4066

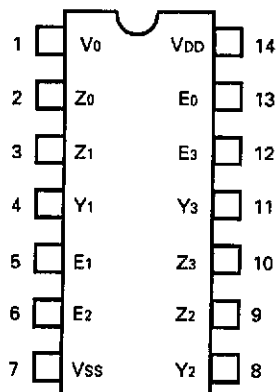CONNECTION DIAGRAM
DIP(TOP VIEW)


NOTE:
The SO Package has the same
pinout (Connection Diagram)
as the Dual-In-line Package.

LOGIC SYMBOL

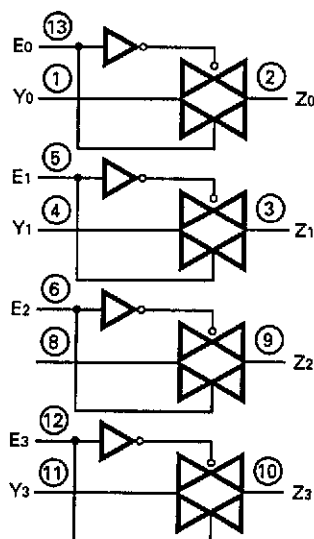


V_{DD} = Pin 14
 V_{SS} = Pin 7
 ○ = Pin Numbers


LOGIC DIAGRAM (1/4 OF A 4066B)

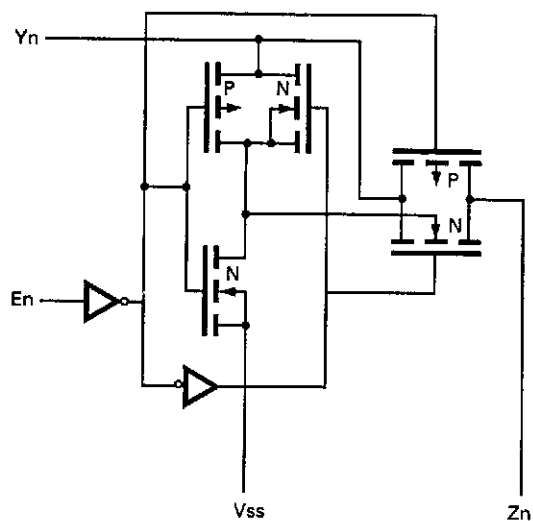


IC701, IC501, IC502 KIA75559/KIA4559S

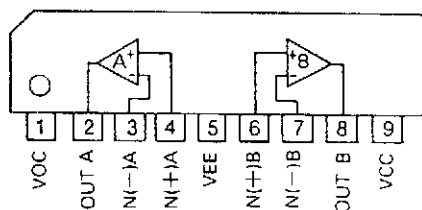


IC503, IC504 LC4966

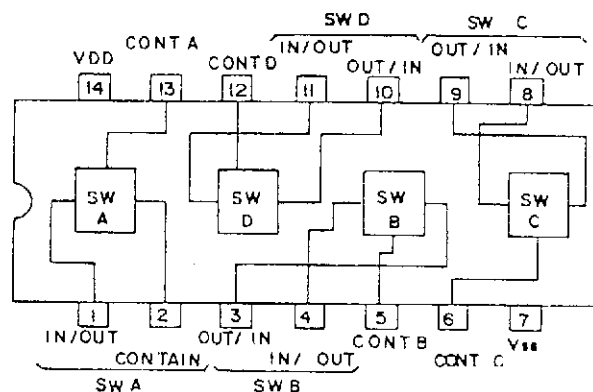


IC508 NJM9701D

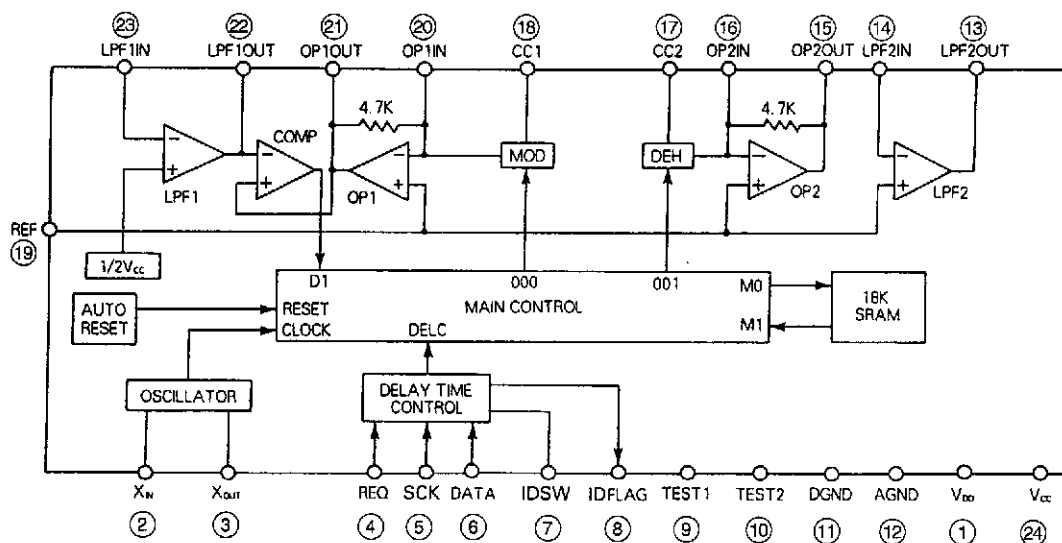


IC509 MC14094BCP

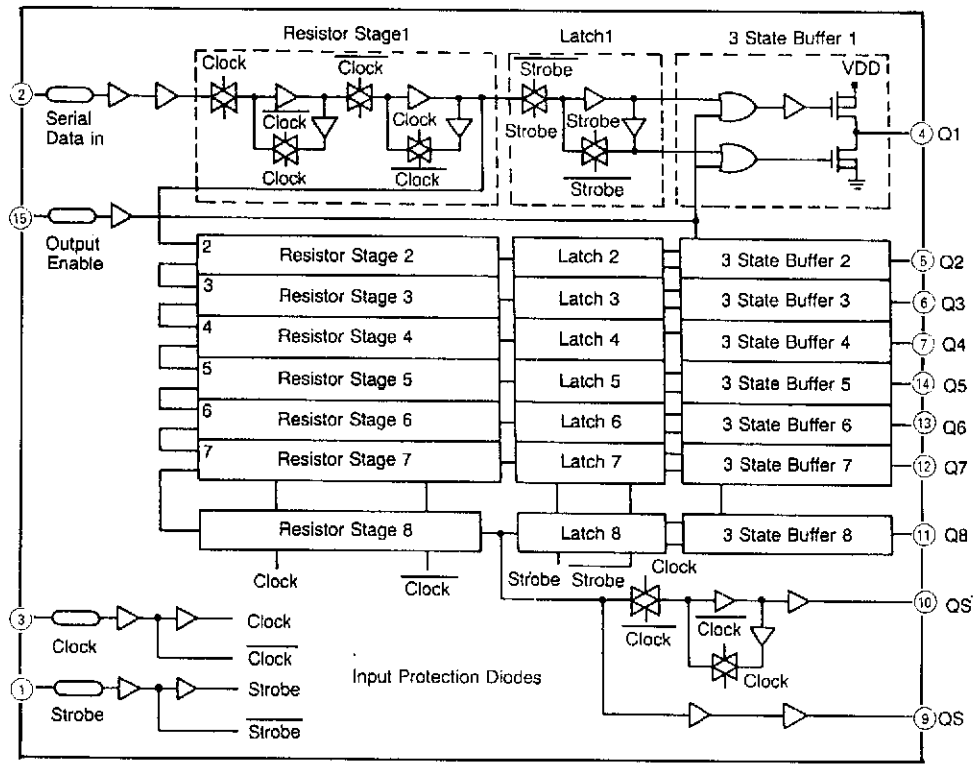


IC506 TC9176P

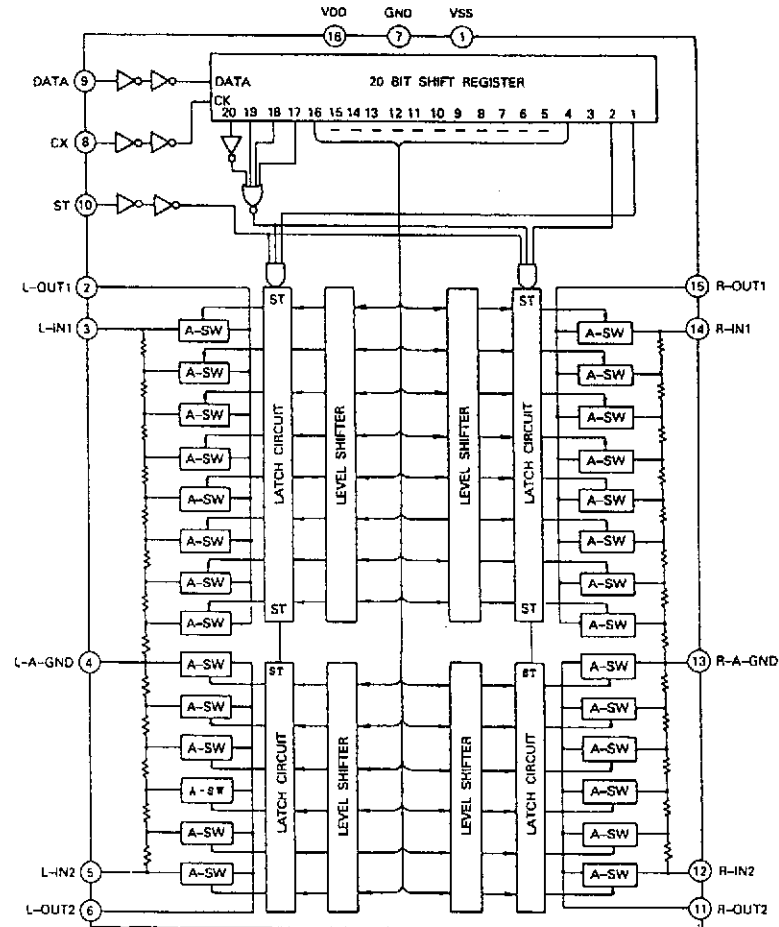


IC101, IC102 LC7821

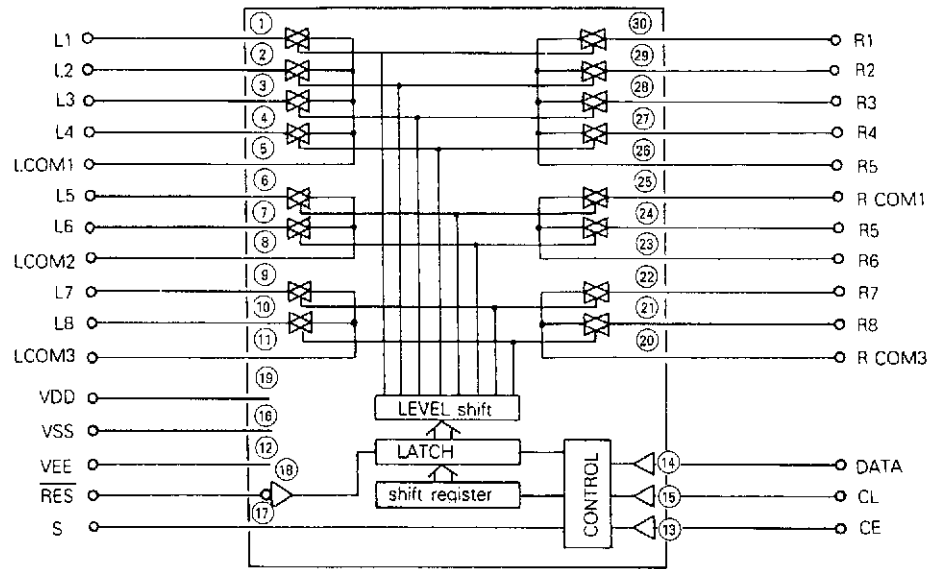


IC507 NJM2177L

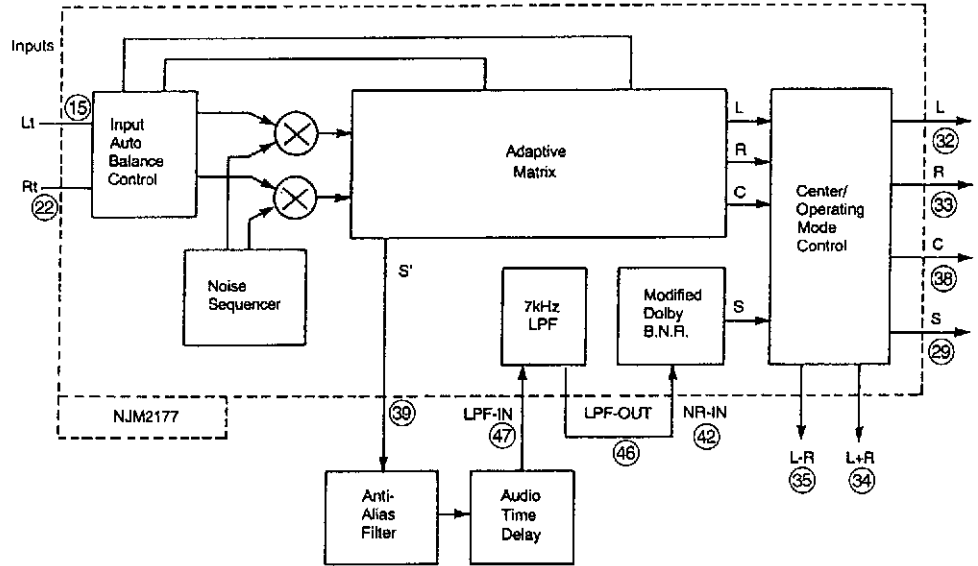



IC802 LM7001

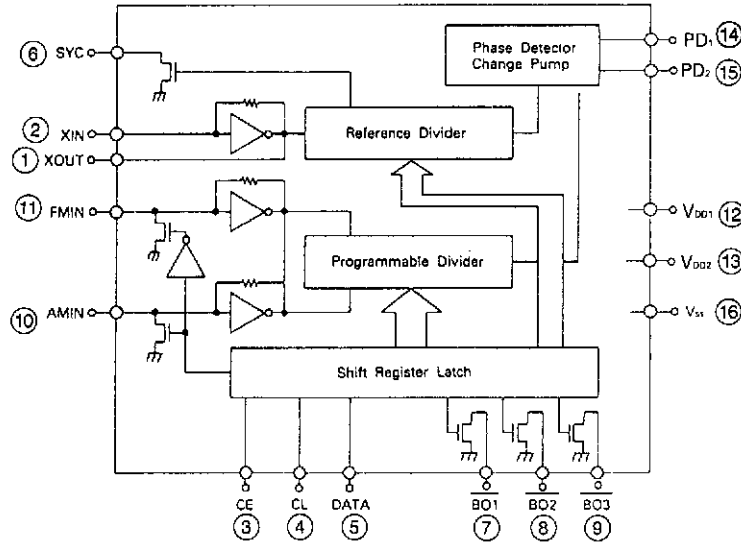




SCHEMATIC DIAGRAMS I

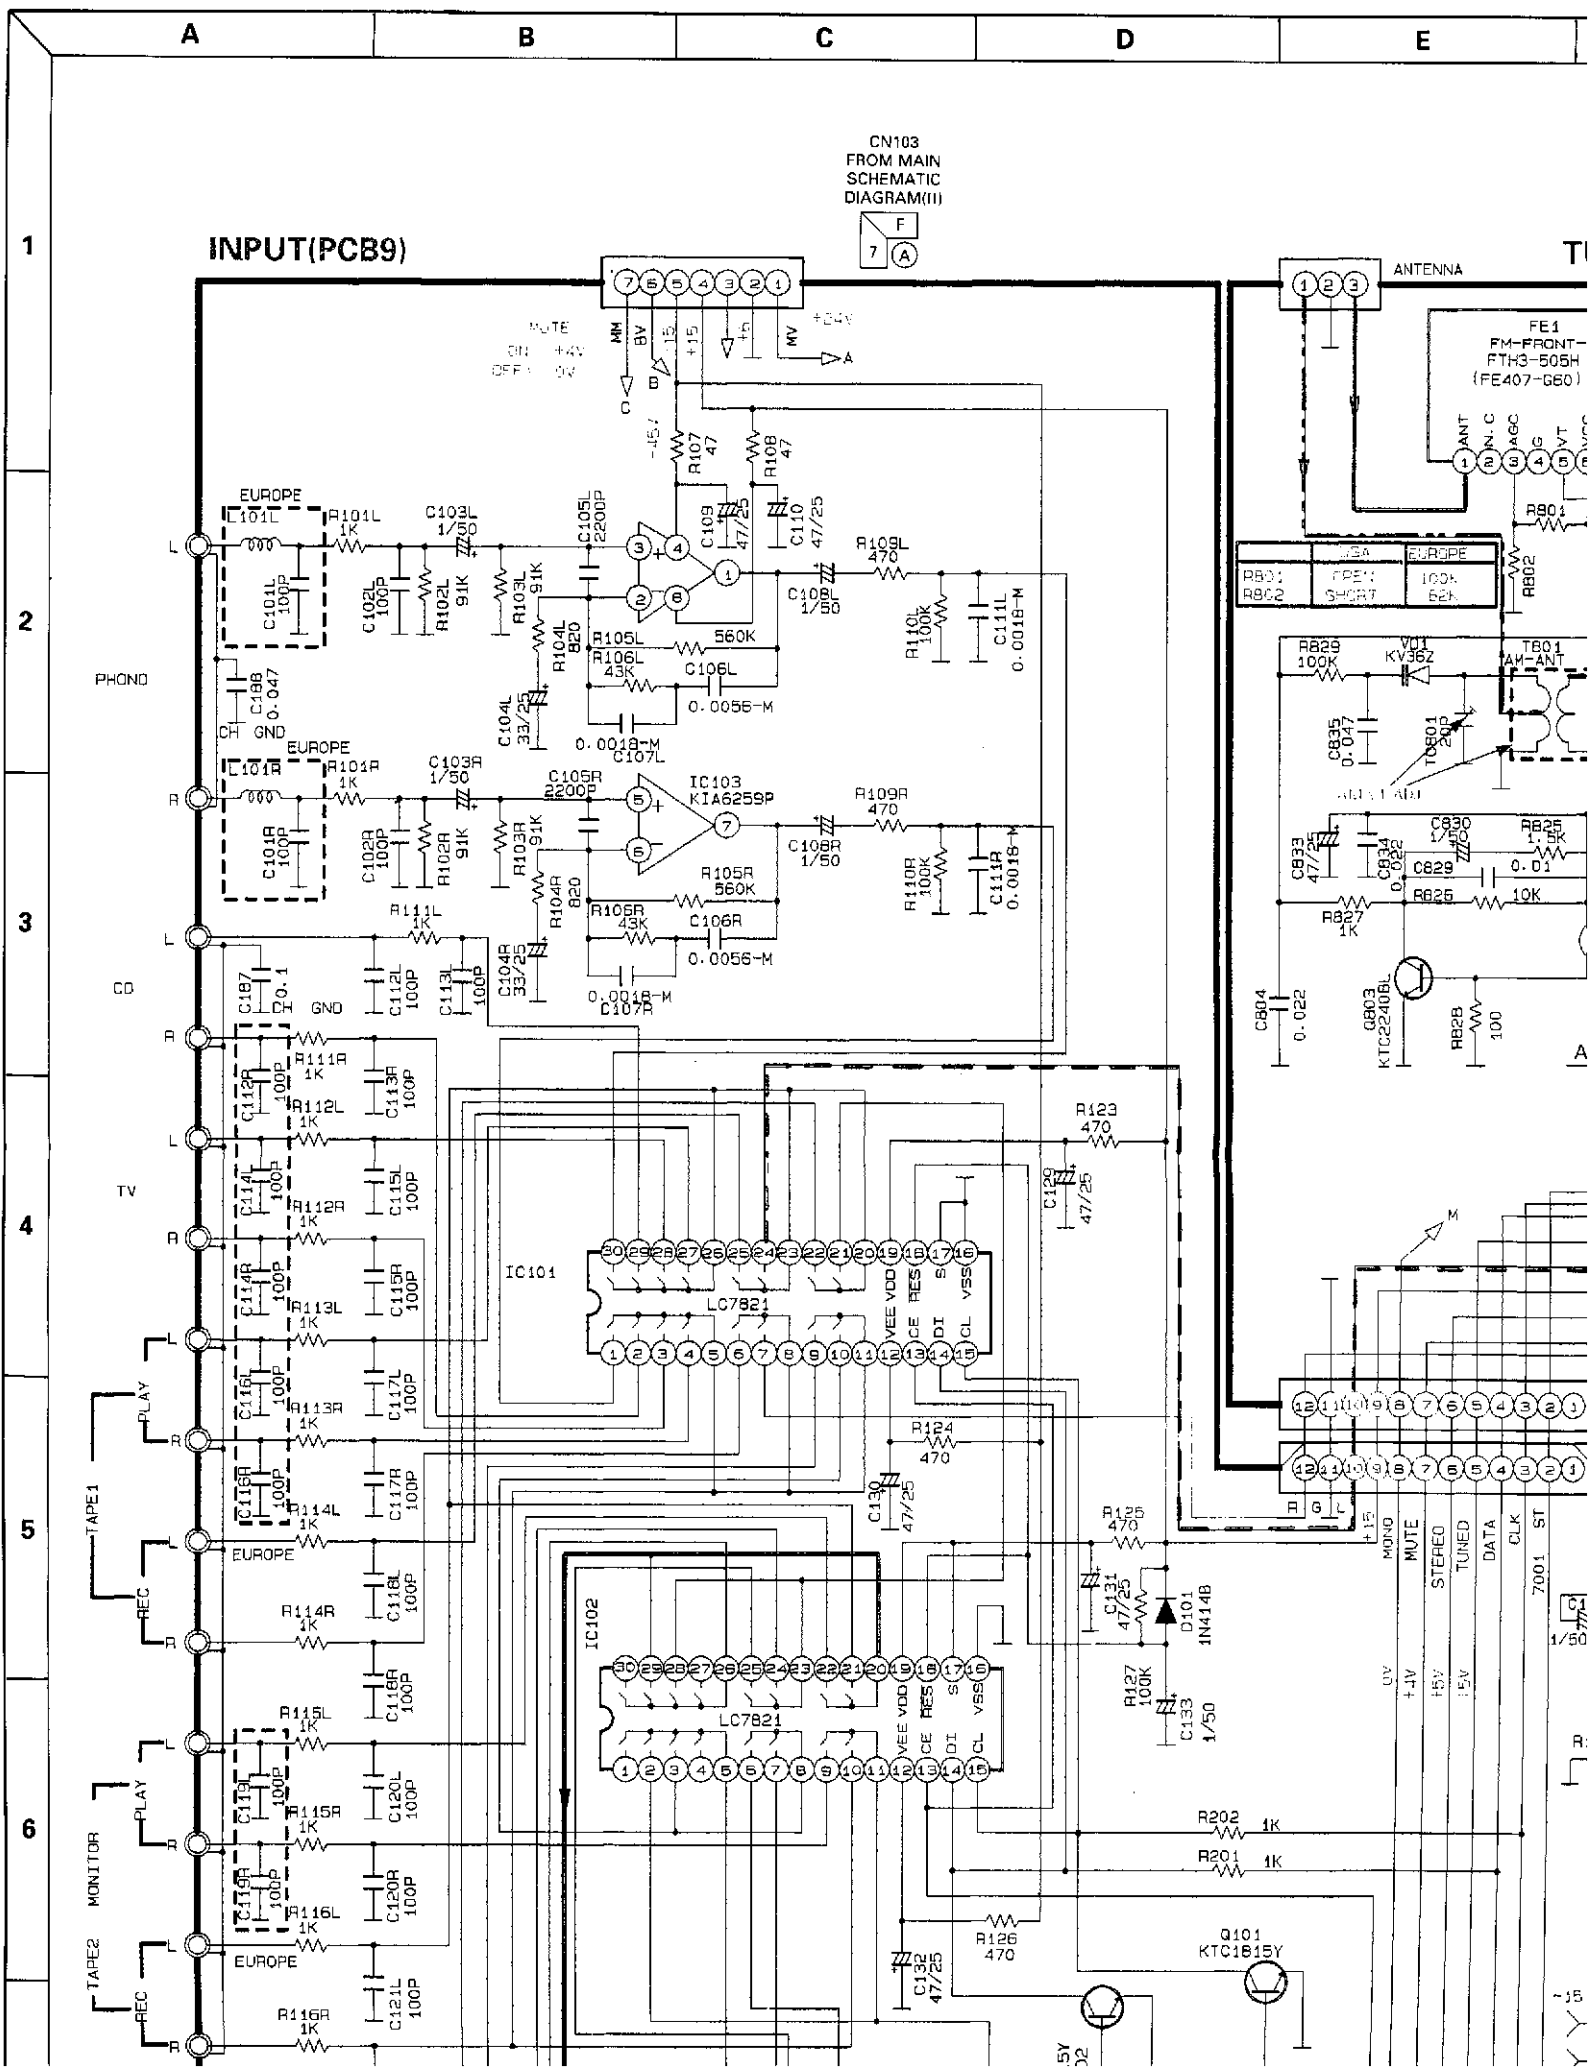

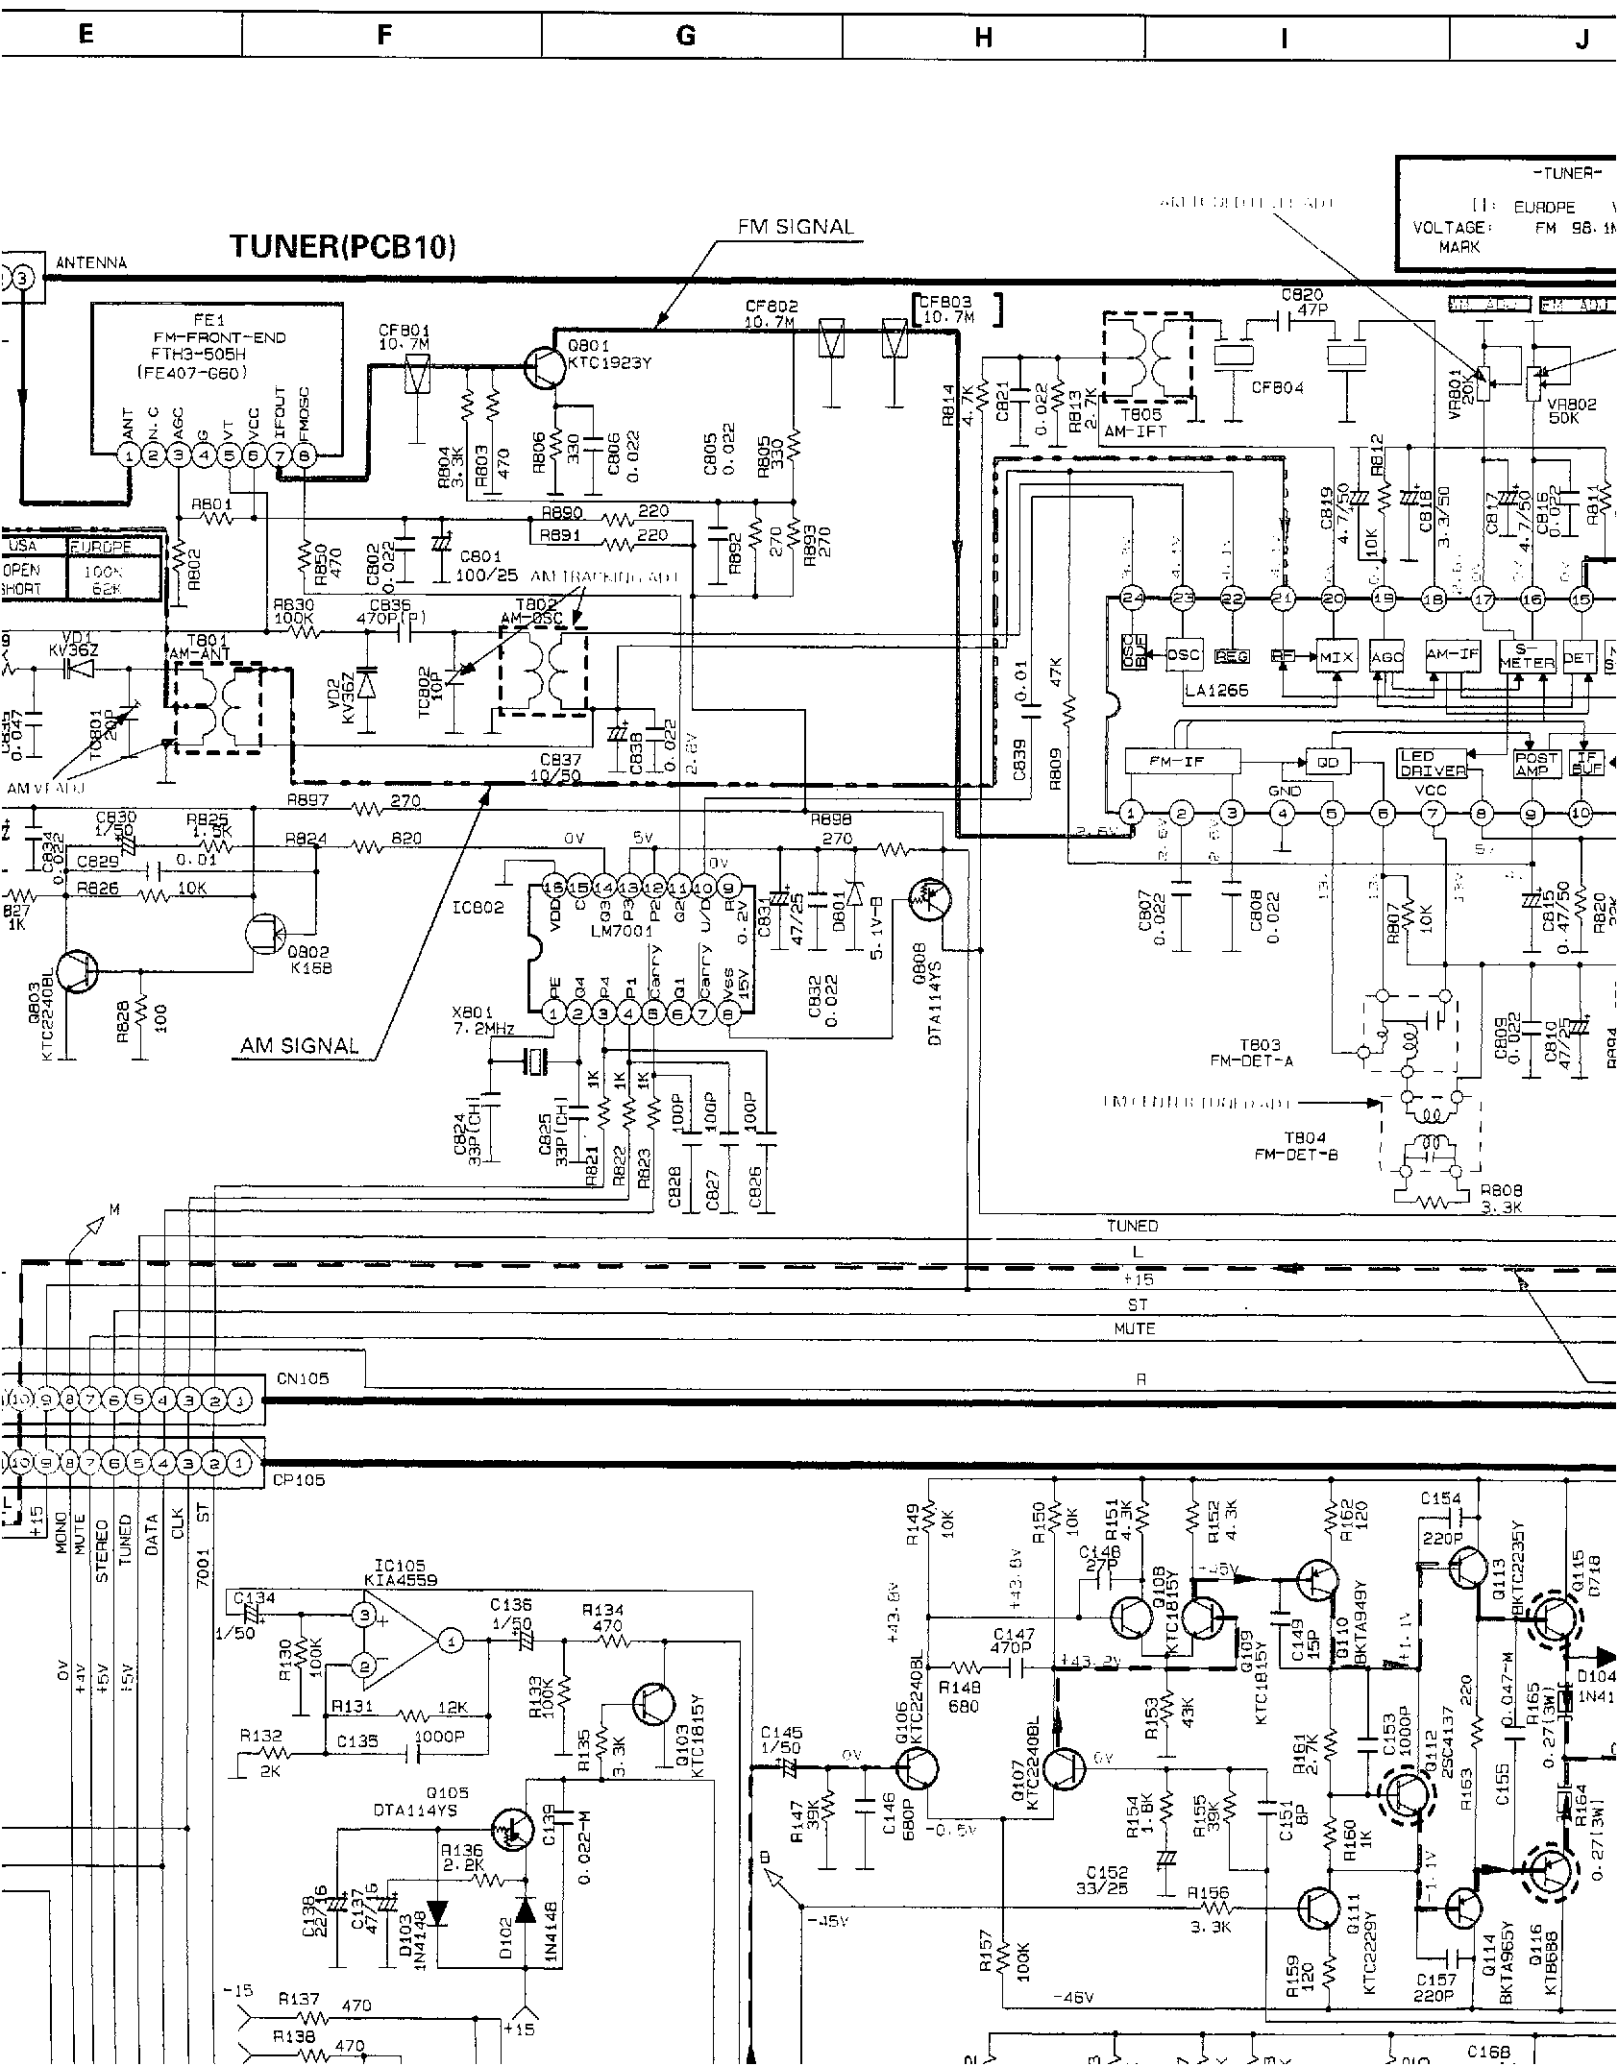


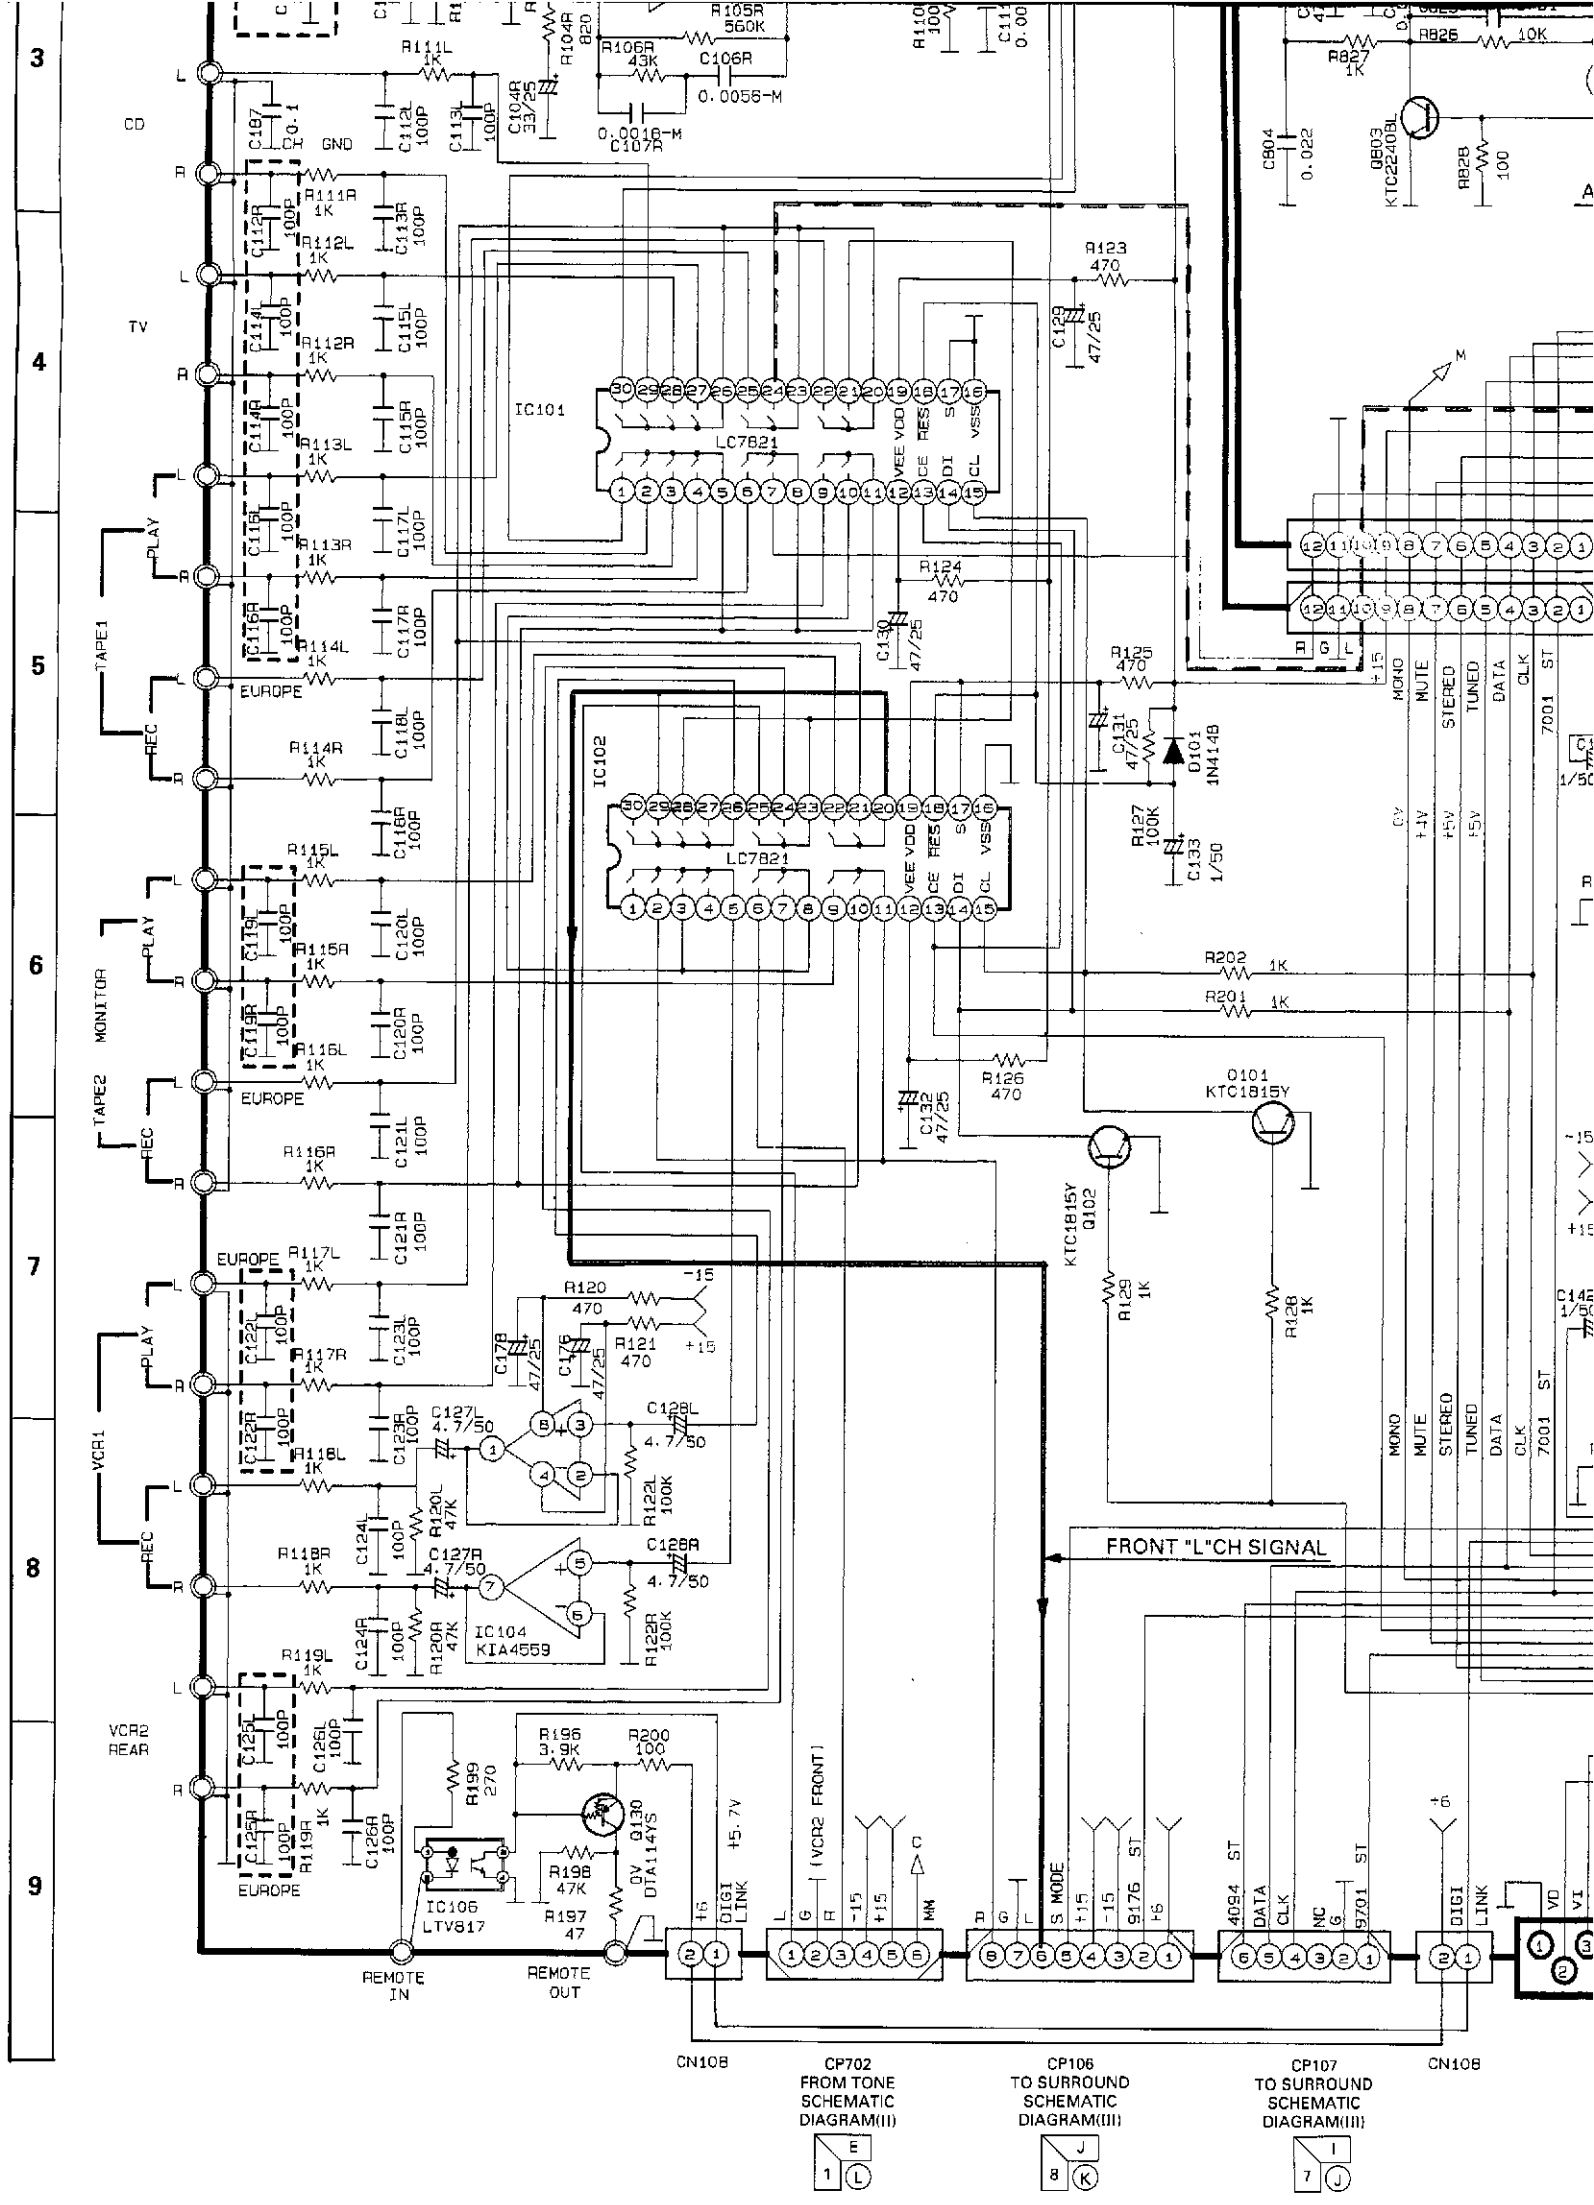

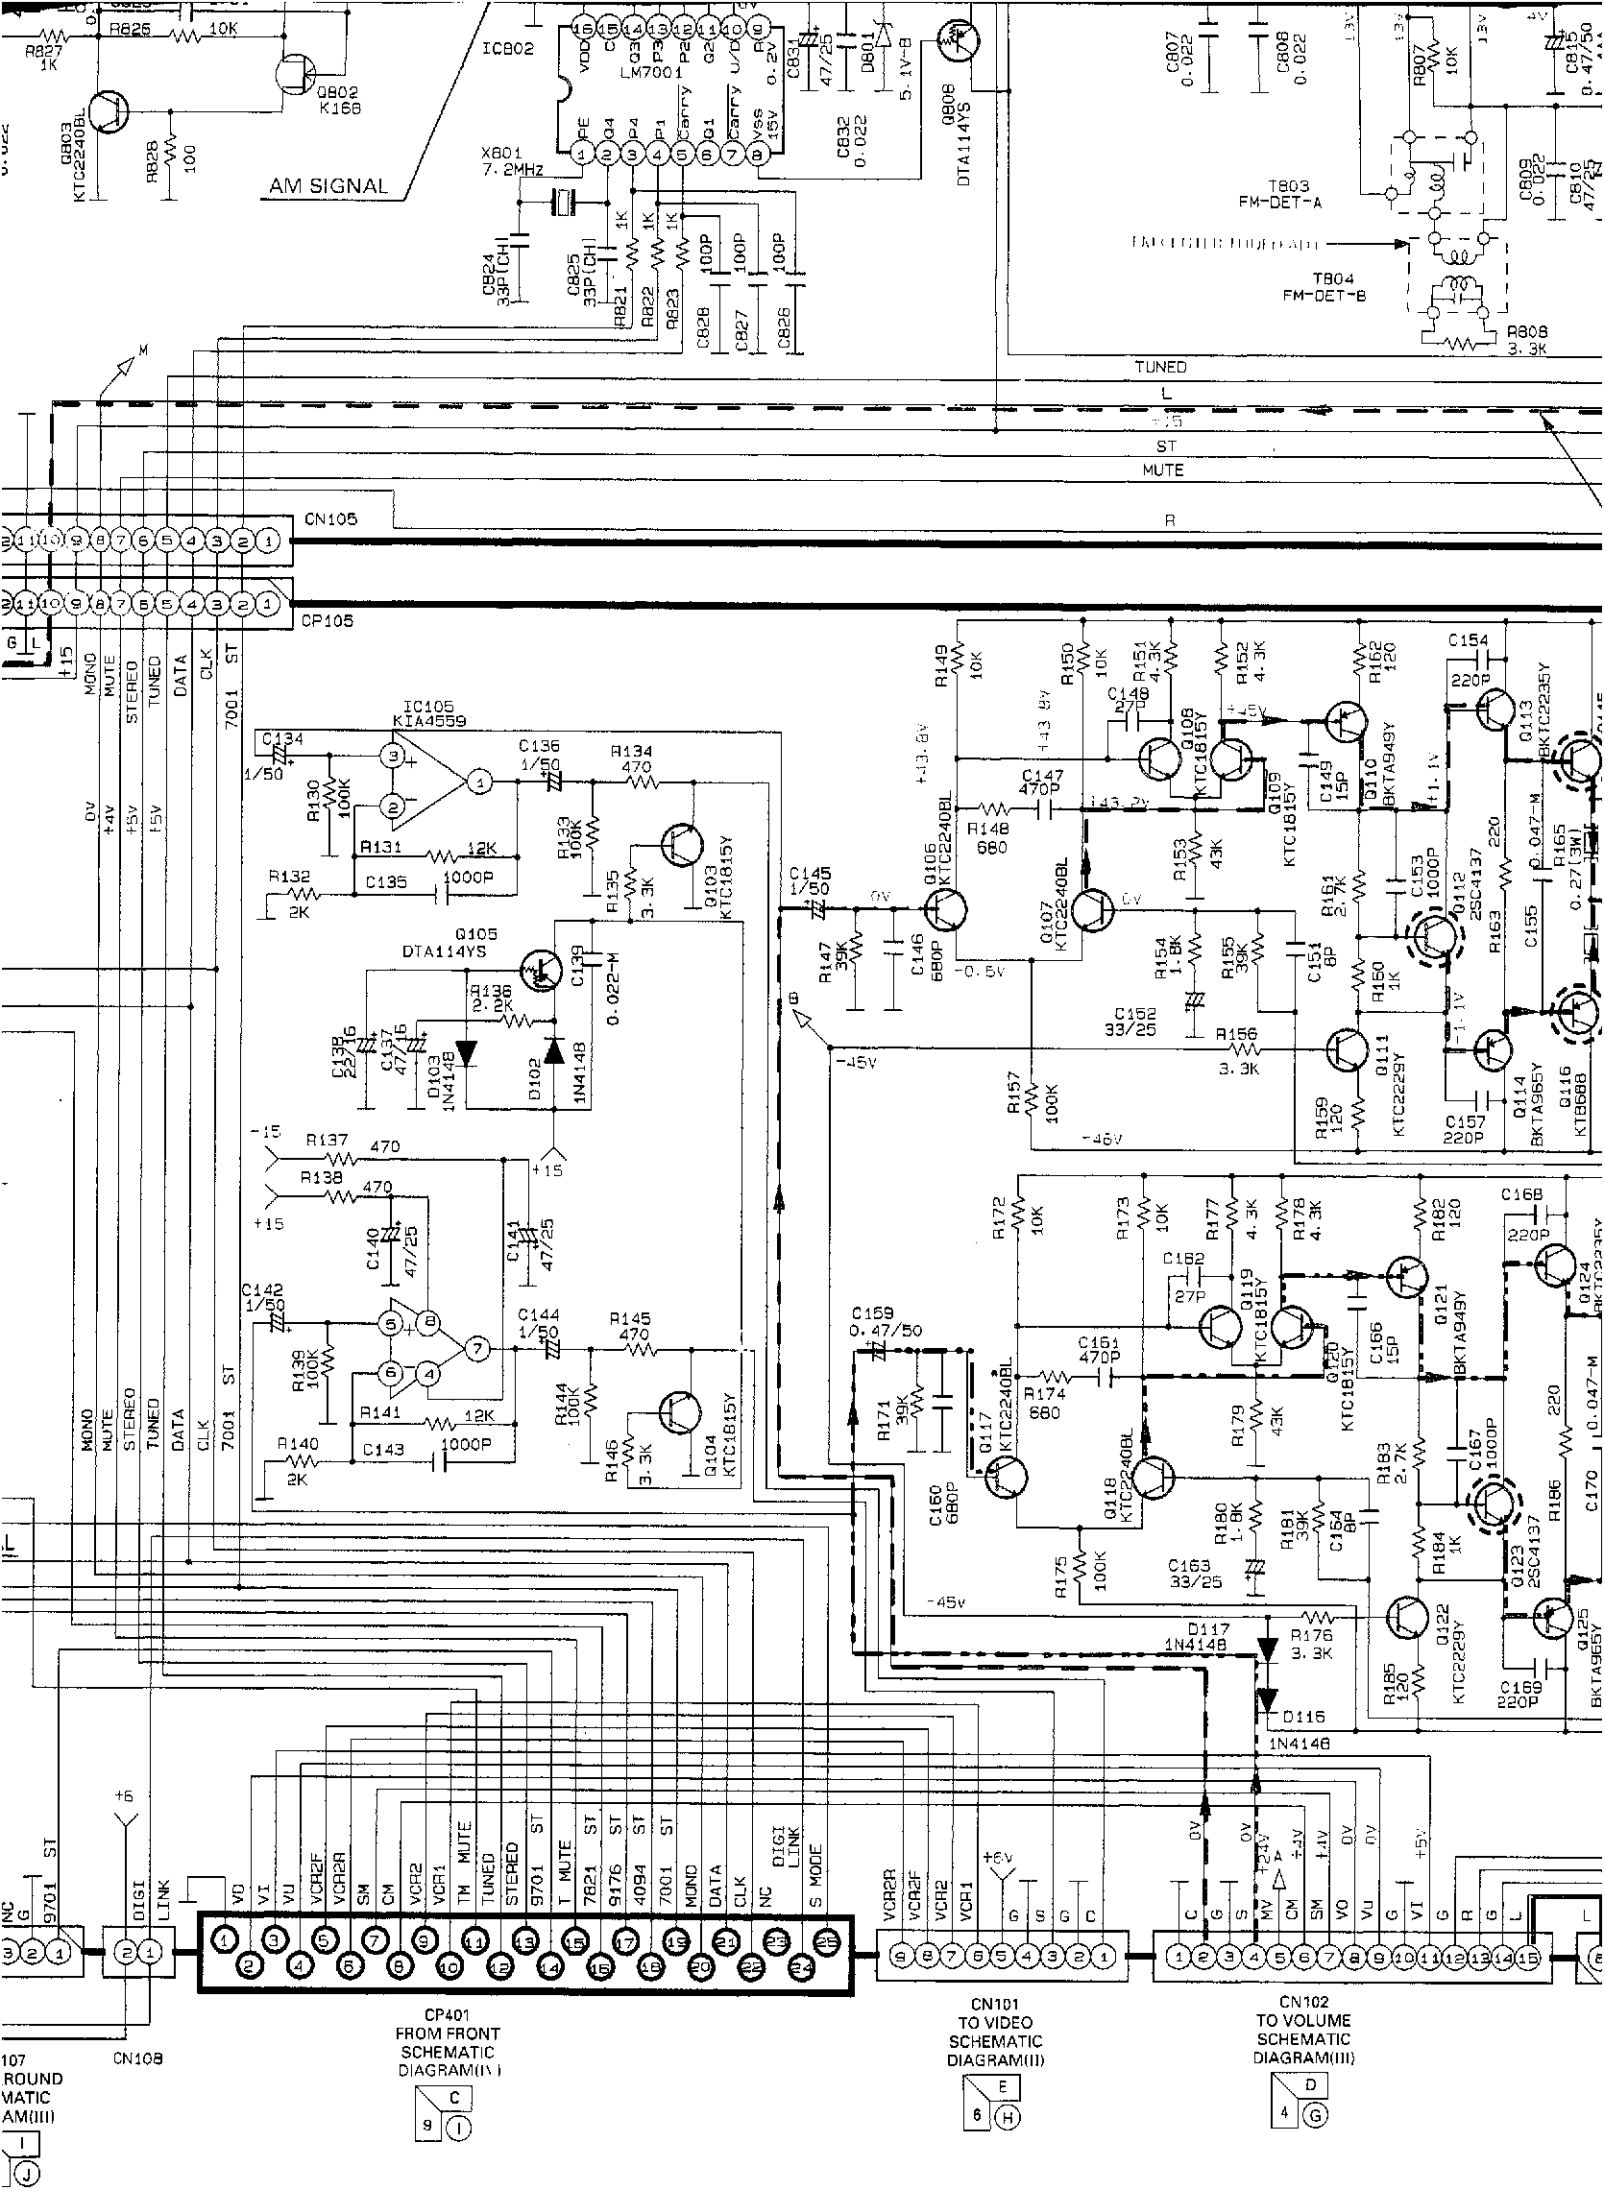

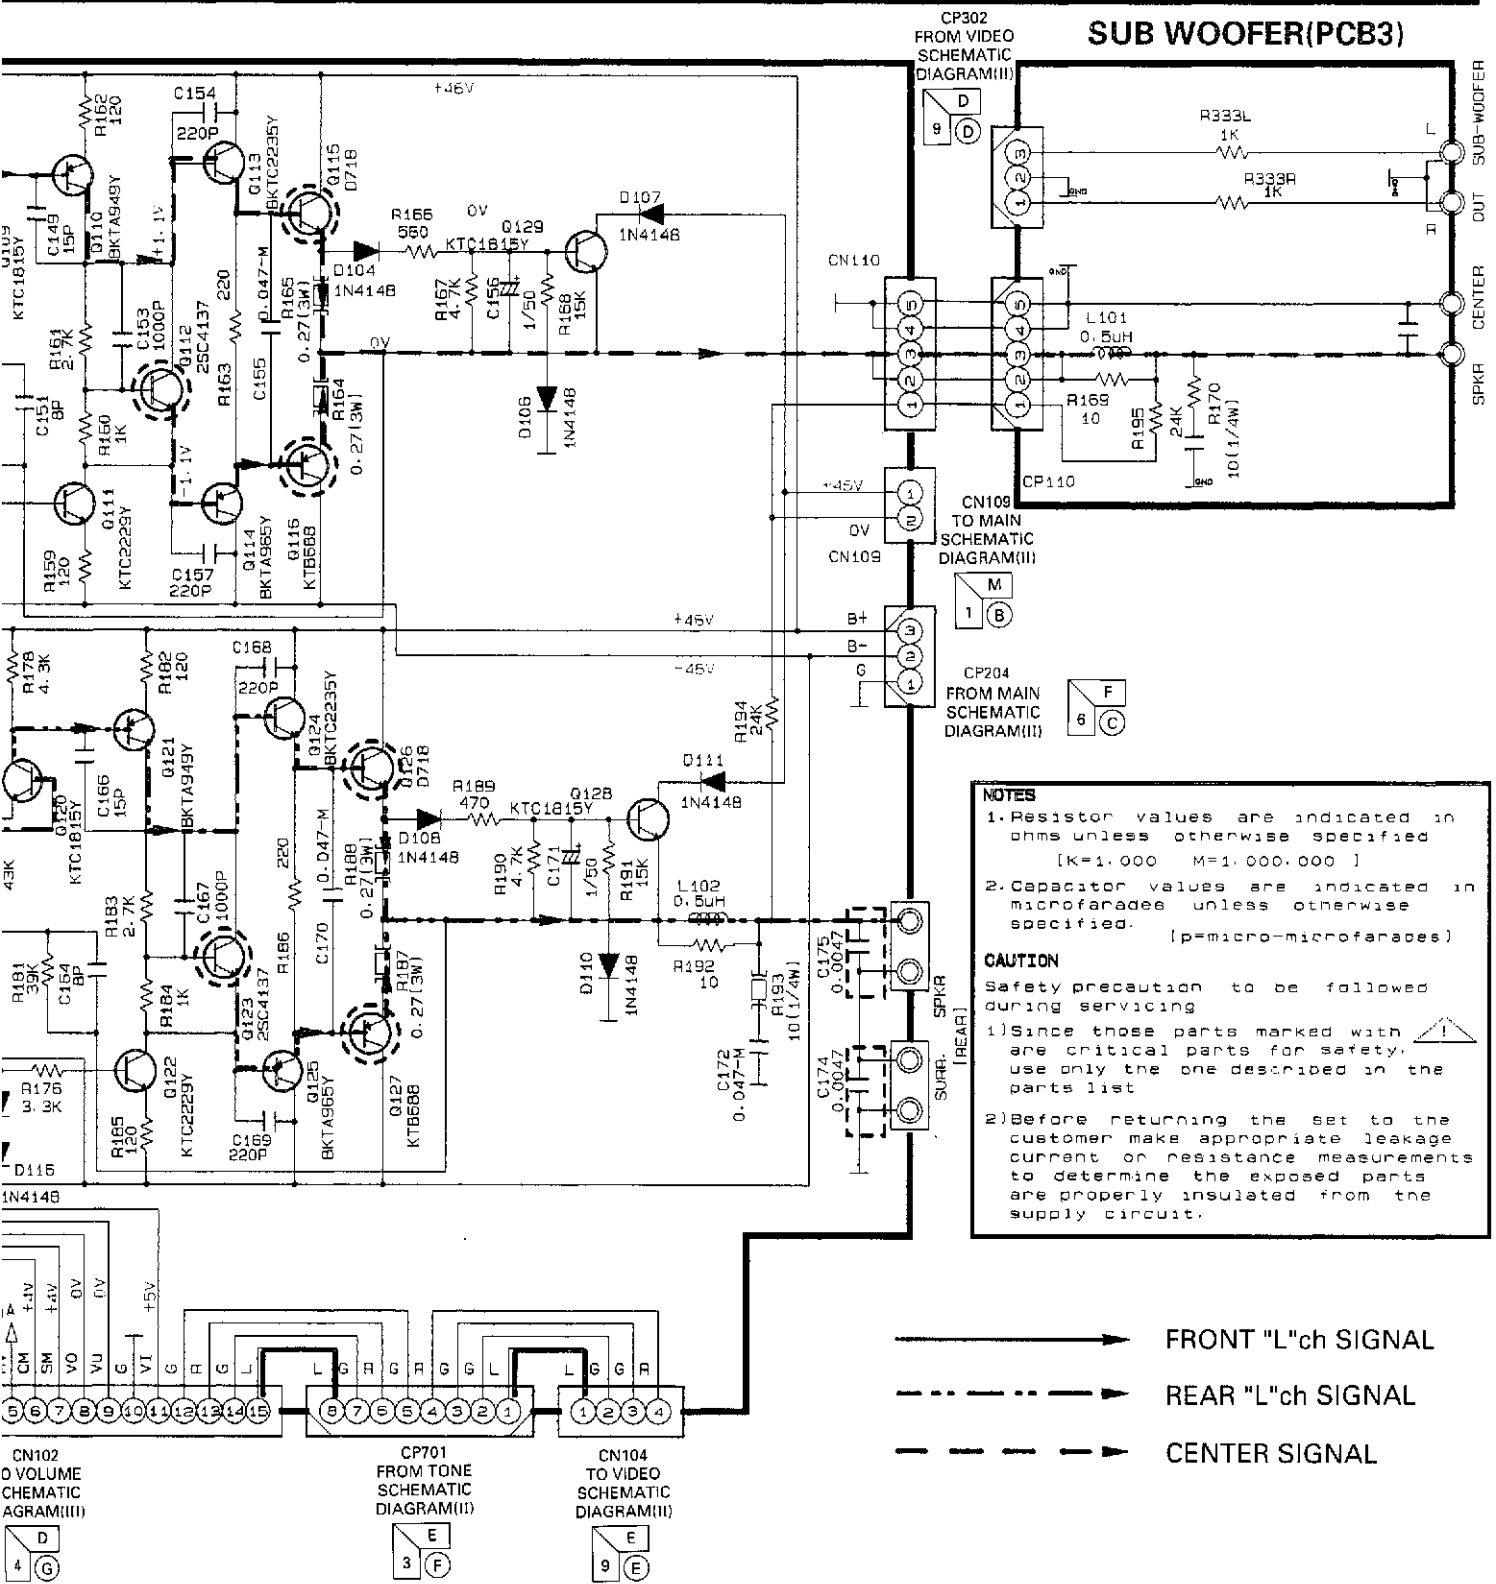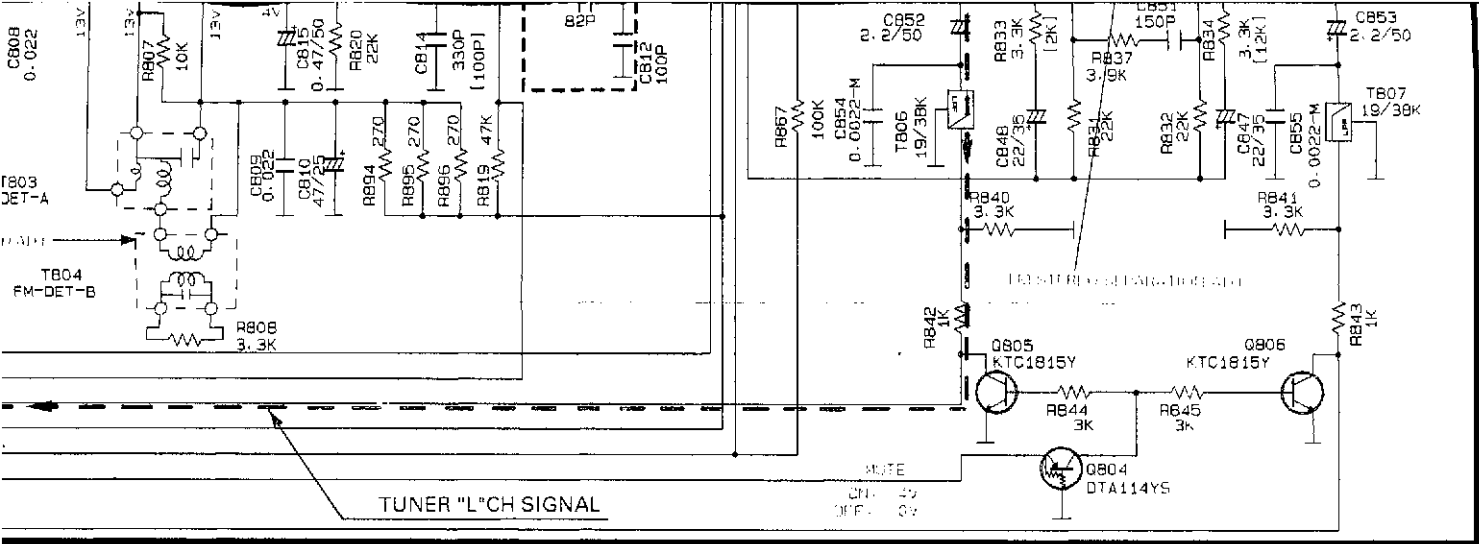

SCHEMATIC DIAGRAMS II

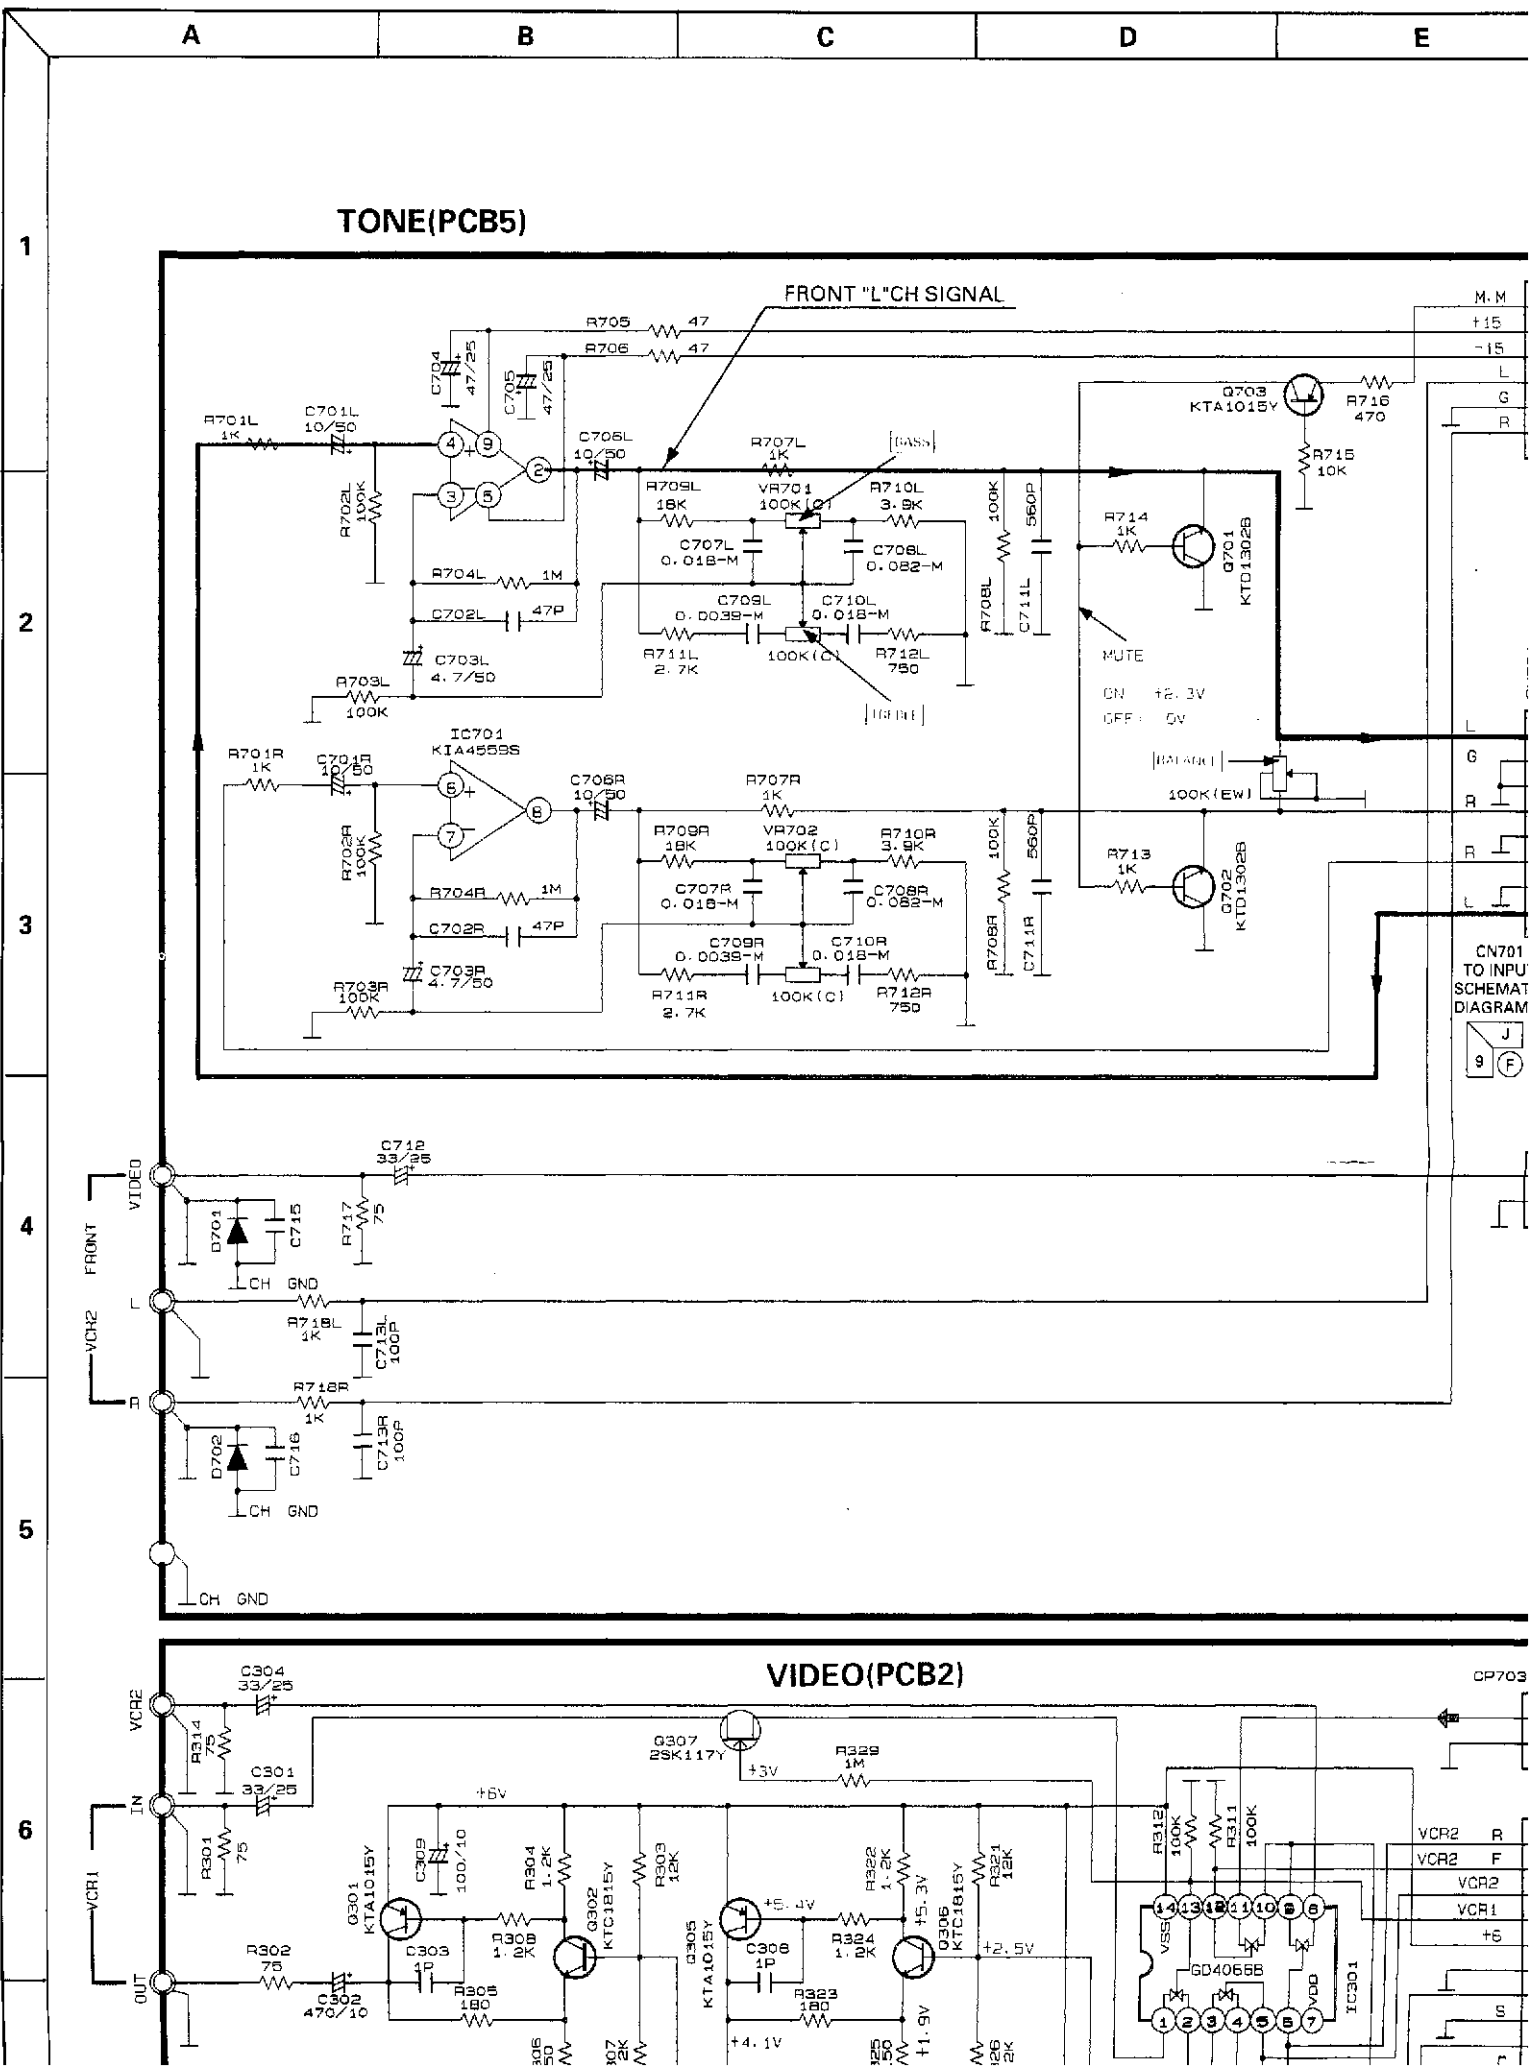

 F204

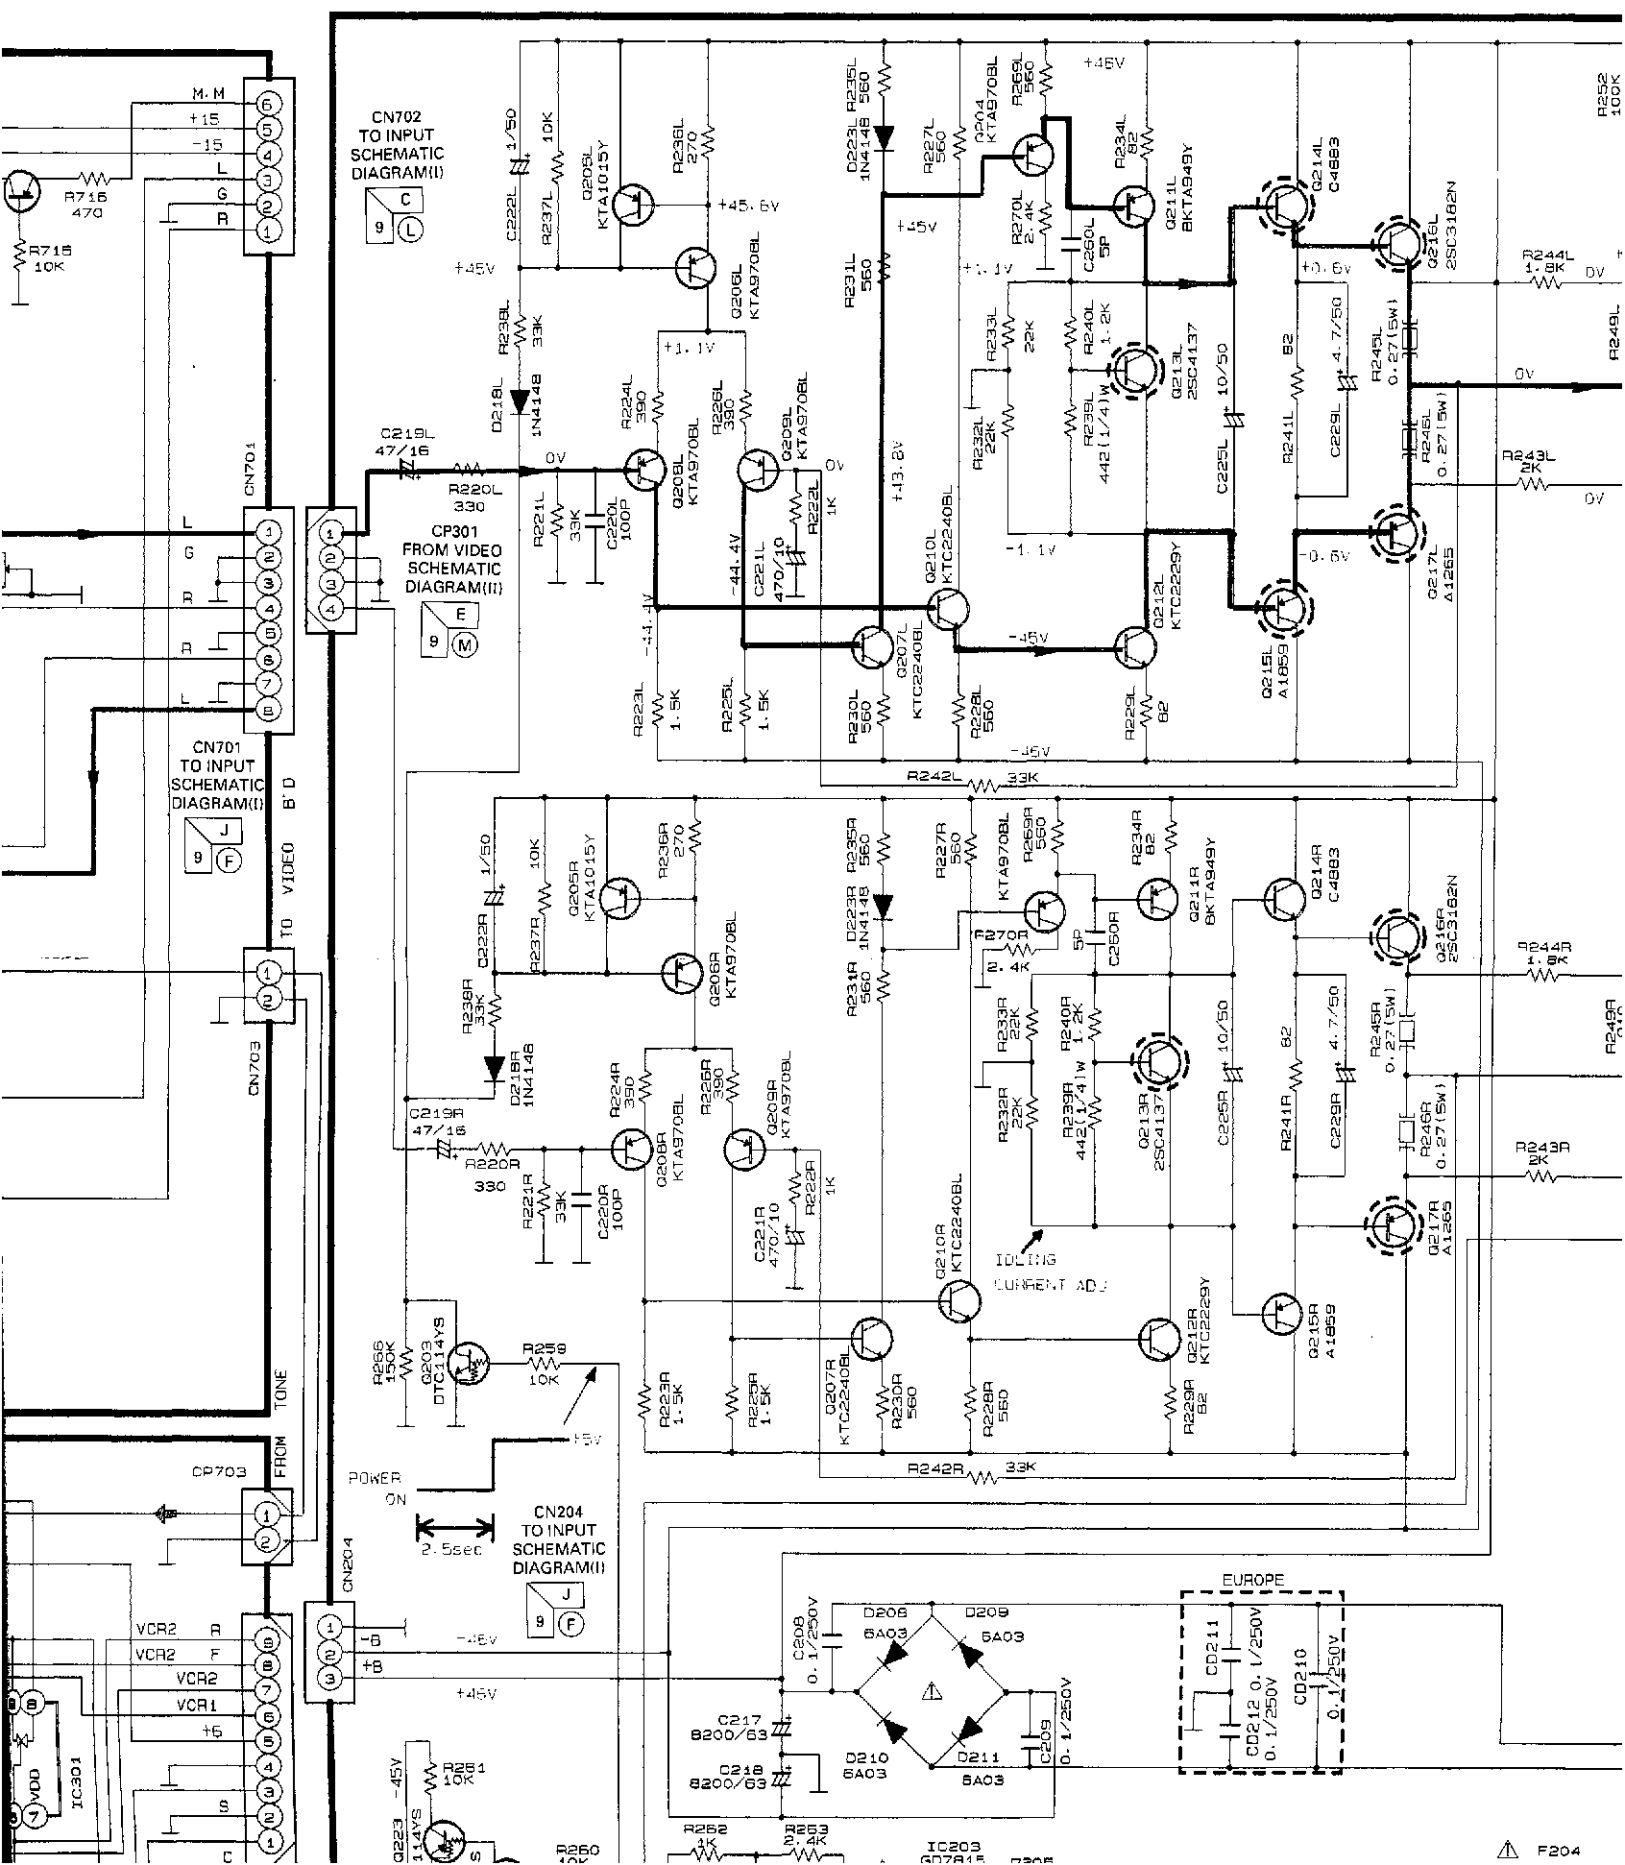


FIG. 1

USA/CANADA

EUROPE

	USA/CANADA	EUROPE
F201	NB5A125V	TL3-15A250V
F203	NB250mA125V	TL150mA250V
F204/ F205	SB750mA125V	TL800mA250V

CP203

THER. FUSE (150°C)

CP206

CP207

CP208

CP209

CP210

CP211

CP212

CP213

CP214

CP215

CP216

CP217

CP218

CP219

CP220

CP221

CP222

CP223

CP224

CP225

CP226

CP227

CP228

CP229

CP230

CP231

CP232

CP233

CP234

CP235

CP236

CP237

CP238

CP239

CP240

CP241

CP242

CP243

CP244

CP245

CP246

CP247

CP248

CP249

CP250

CP251

CP252

CP253

CP254

CP255

CP256

CP257

CP258

CP259

CP260

CP261

CP262

CP263

CP264

CP265

CP266

CP267

CP268

CP269

CP270

CP271

CP272

CP273

CP274

CP275

CP276

CP277

CP278

CP279

CP280

CP281

CP282

CP283

CP284

CP285

CP286

CP287

CP288

CP289

CP290

CP291

CP292

CP293

CP294

CP295

CP296

CP297

CP298

CP299

CP300

CP301

CP302

CP303

CP304

CP305

CP306

CP307

CP308

CP309

CP310

CP311

CP312

CP313

CP314

CP315

CP316

CP317

CP318

CP319

CP320

CP321

CP322

CP323

CP324

CP325

CP326

CP327

CP328

CP329

CP330

CP331

CP332

CP333

CP334

CP335

CP336

CP337

CP338

CP339

CP340

CP341

CP342

CP343

CP344

CP345

CP346

CP347

CP348

CP349

CP350

CP351

CP352

CP353

CP354

CP355

CP356

CP357

CP358

CP359

CP360

CP361

CP362

CP363

CP364

CP365

CP366

CP367

CP368

CP369

CP370

CP371

CP372

CP373

CP374

CP375

CP376

CP377

CP378

CP379

CP380

CP381

CP382

CP383

CP384

CP385

CP386

CP387

CP388

CP389

CP390

CP391

CP392

CP393

CP394

CP395

CP396

CP397

CP398

CP399

CP400

CP401

CP402

CP403

CP404

CP405

CP406

CP407

CP408

CP409

CP410

CP411

CP412

CP413

CP414

CP415

CP416

CP417

CP418

CP419

CP420

CP421

CP422

CP423

CP424

CP425

CP426

CP427

CP428

CP429

CP430

CP431

CP432

CP433

CP434

CP435

CP436

CP437

CP438

CP439

CP440

CP441

CP442

CP443

CP444

CP445

CP446

CP447

CP448

CP449

CP450

CP451

CP452

CP453

CP454

CP455

CP456

CP457

CP458

CP459

CP460

CP461

CP462

CP463

CP464

CP465

CP466

CP467

CP468

CP469

CP470

CP471

CP472

CP473

CP474

3

4


5


6


7

8

9

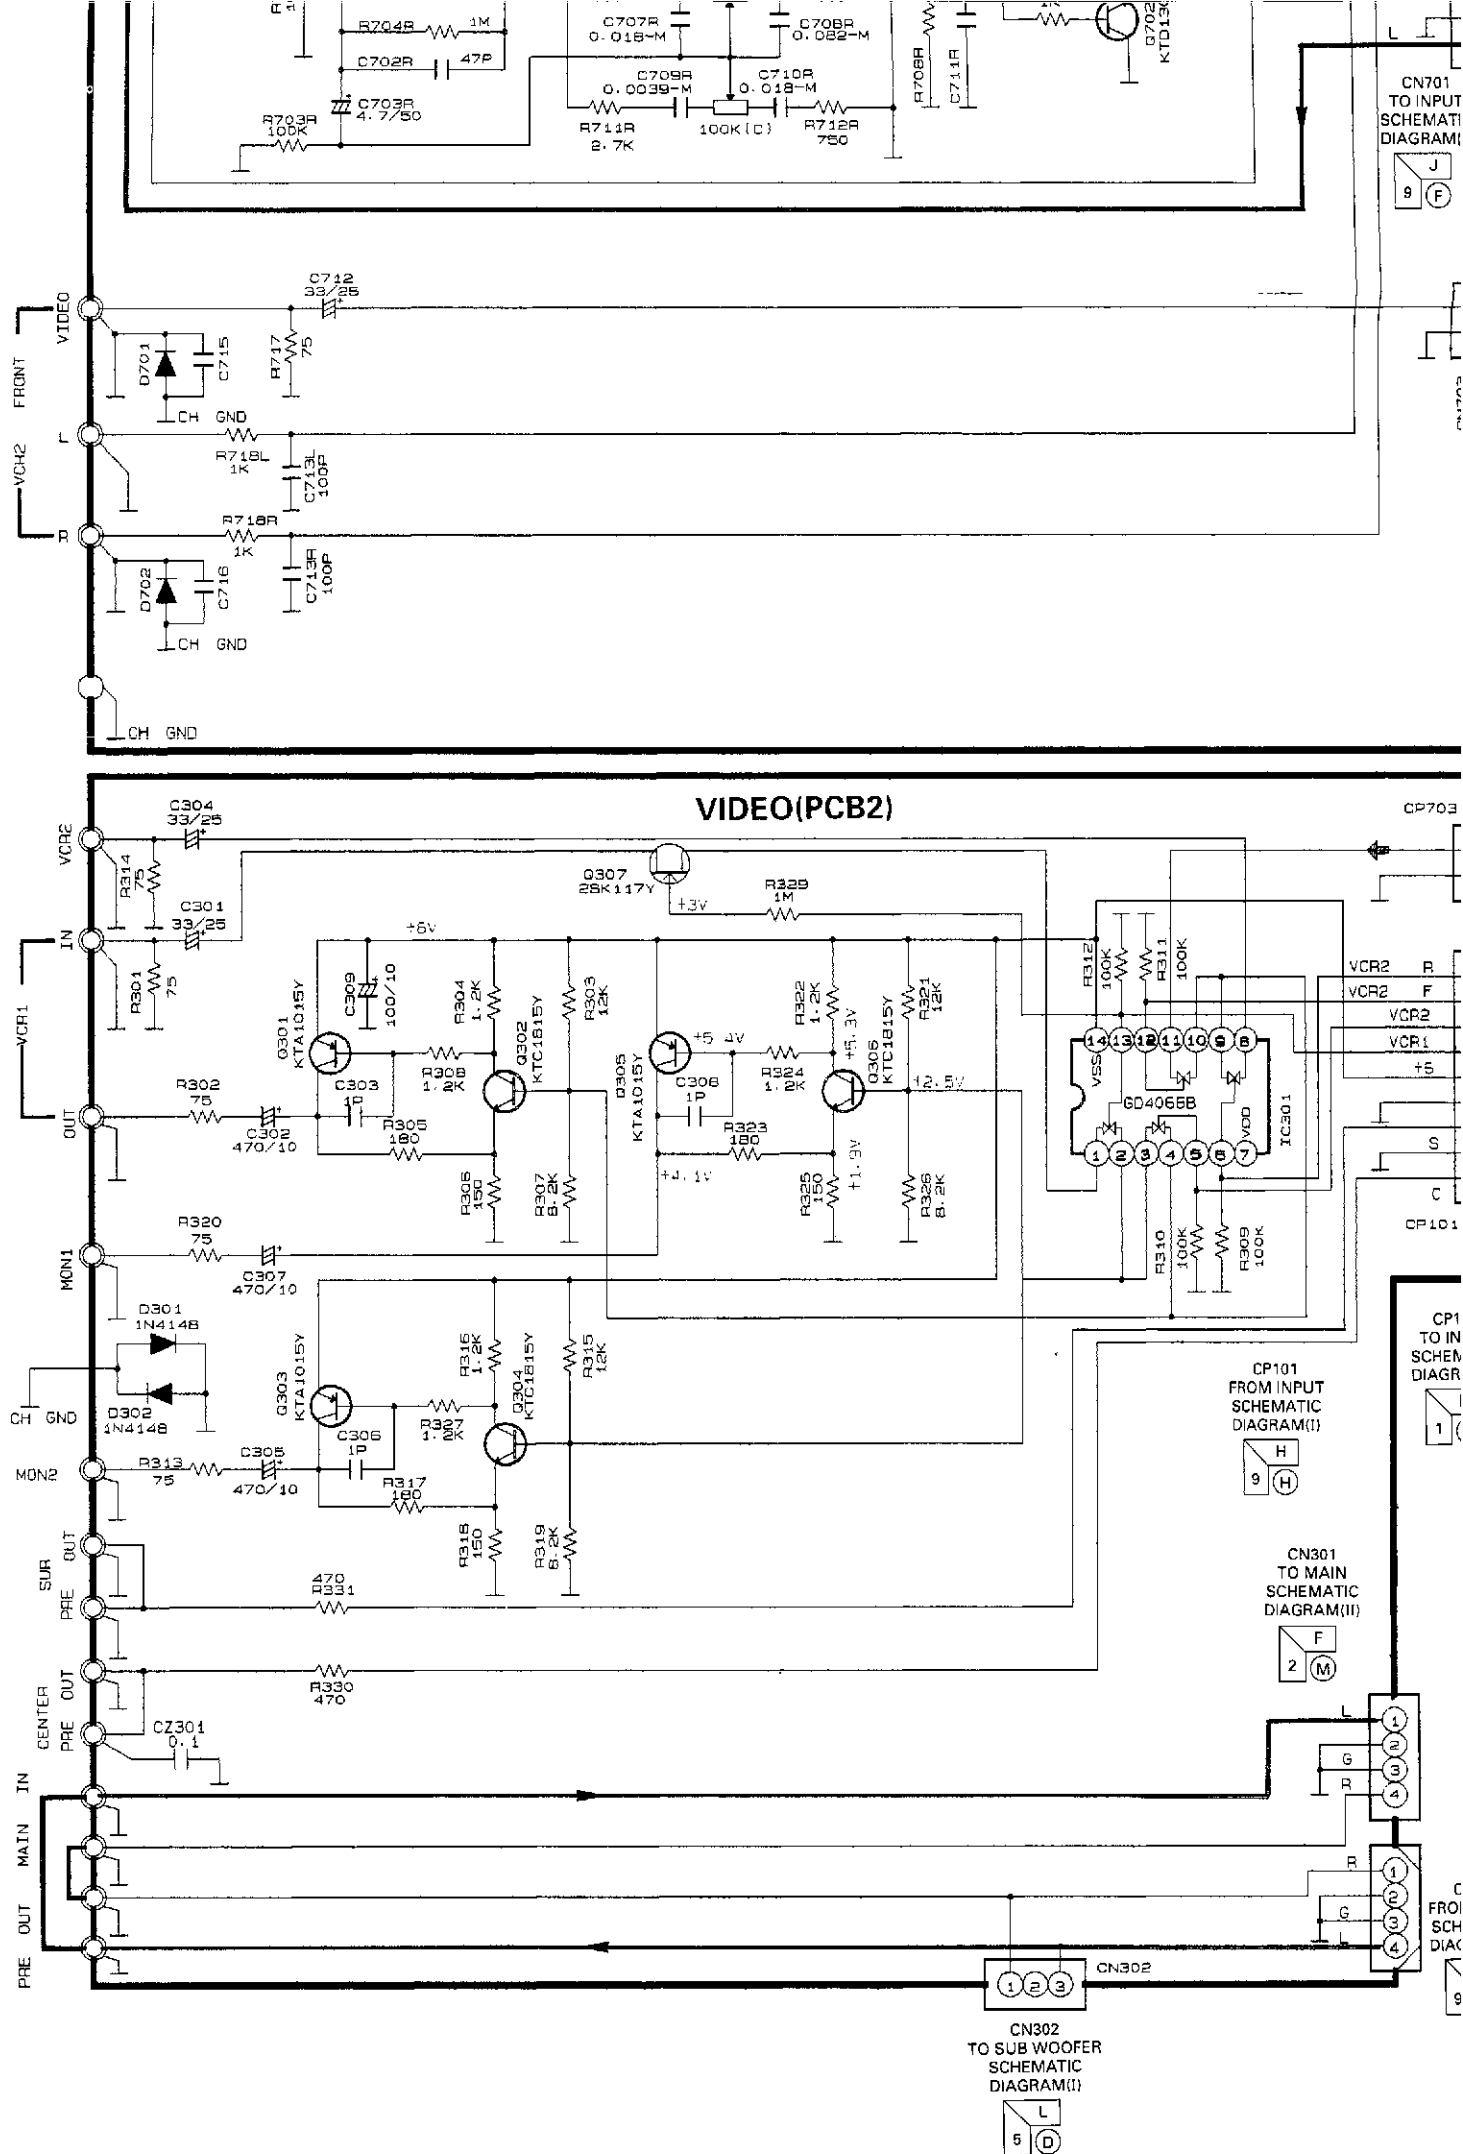

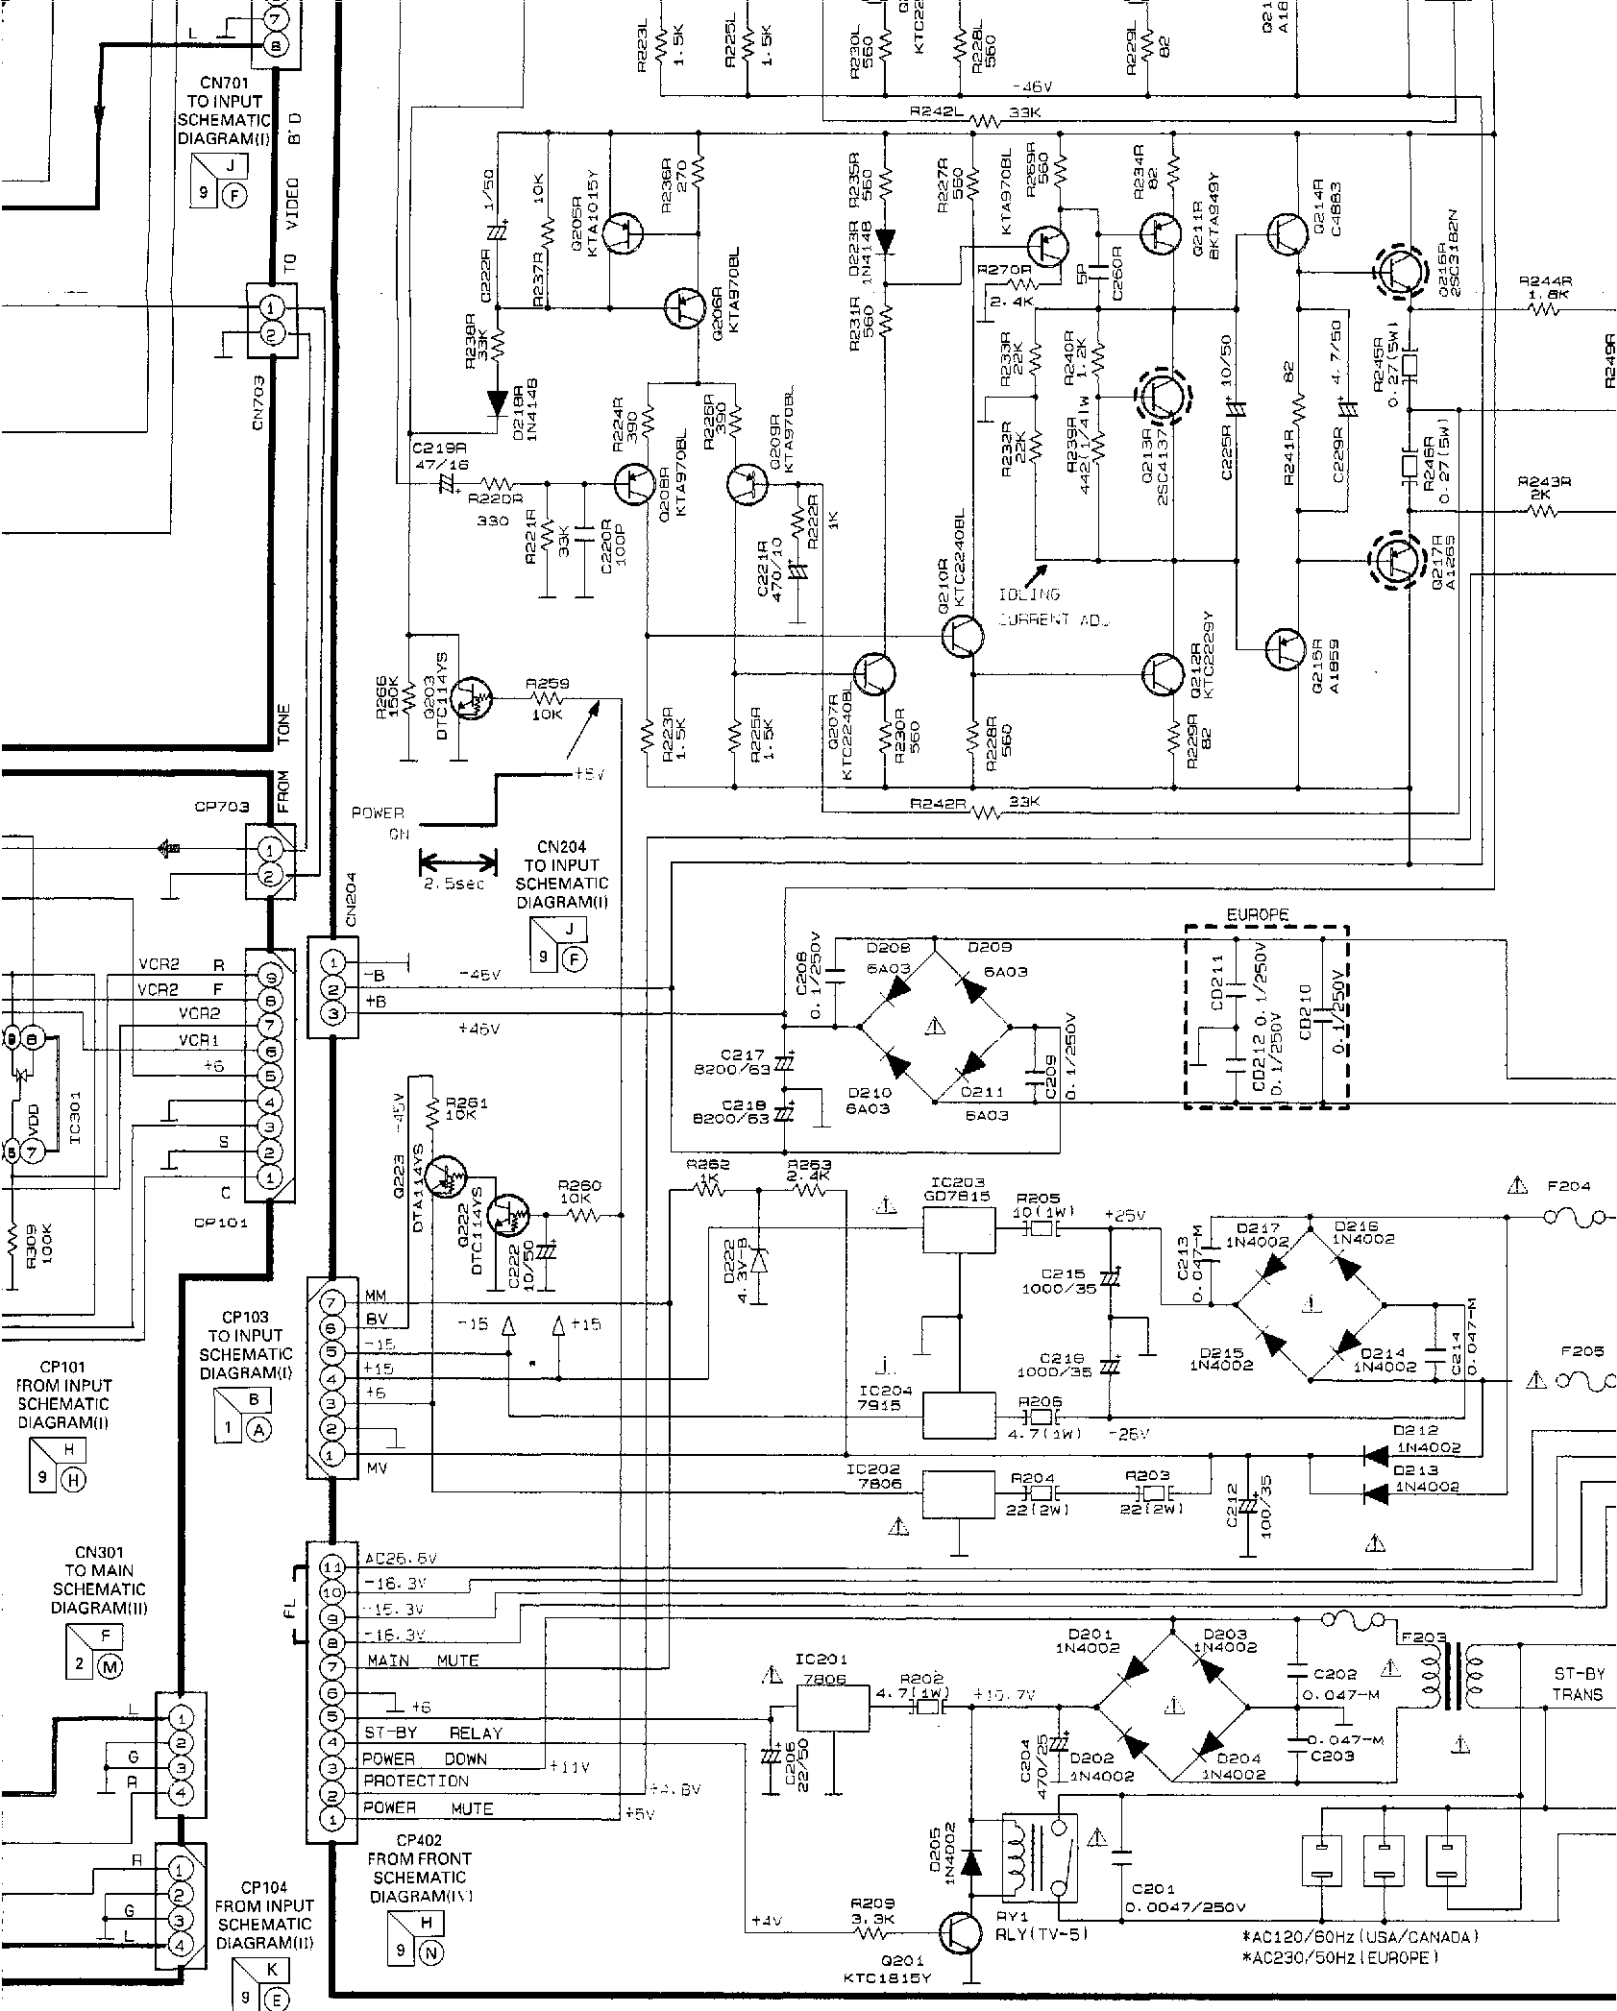

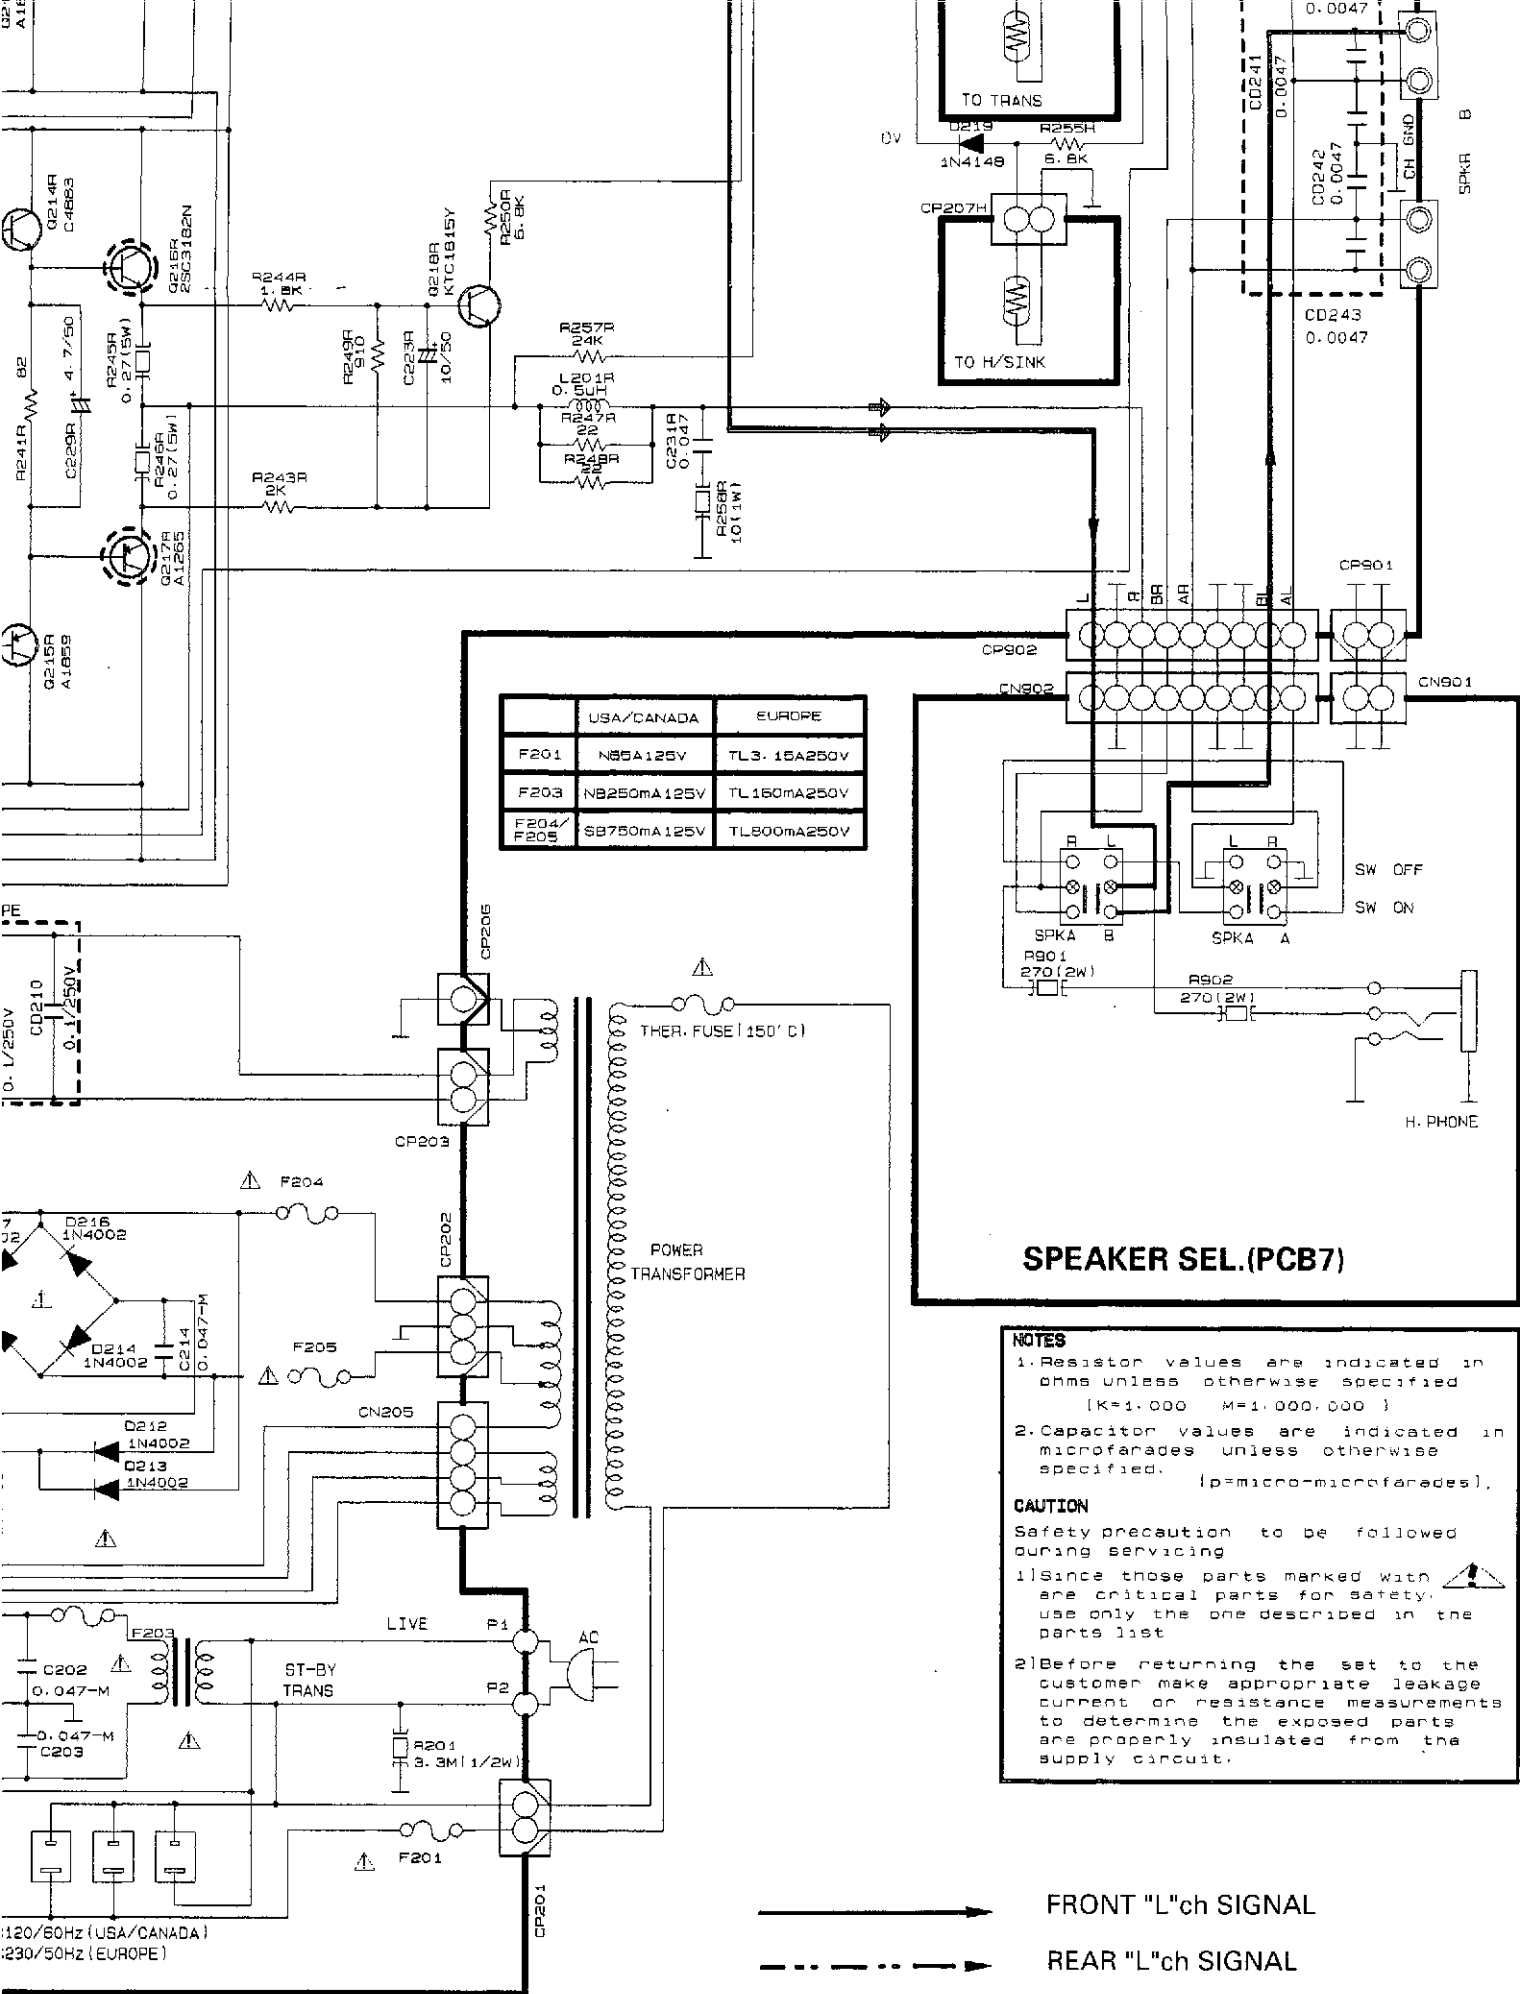

:120/60Hz (USA/CANADA)
:230/50Hz (EUROPE)

SURRO

E

F

G

H

I

J

SURROUND(PCB11)

CP102
OM INPUT
SCHEMATIC
AGRAM(I)

9 G

CN602
TO VOLUME
SCHEMATIC
DIAGRAM(III)A
7 0

	High	Mode	+4.8V
A	FRONT	L.R.	HALL
B	Pro	Logic	3 Stereo


TO DELAY (IC508)

REAR "L" SIGNAL


FRONT "L" CH SIGNAL

CN107
FROM INPUT
SCHEMATIC
DIAGRAM(I)


9 J

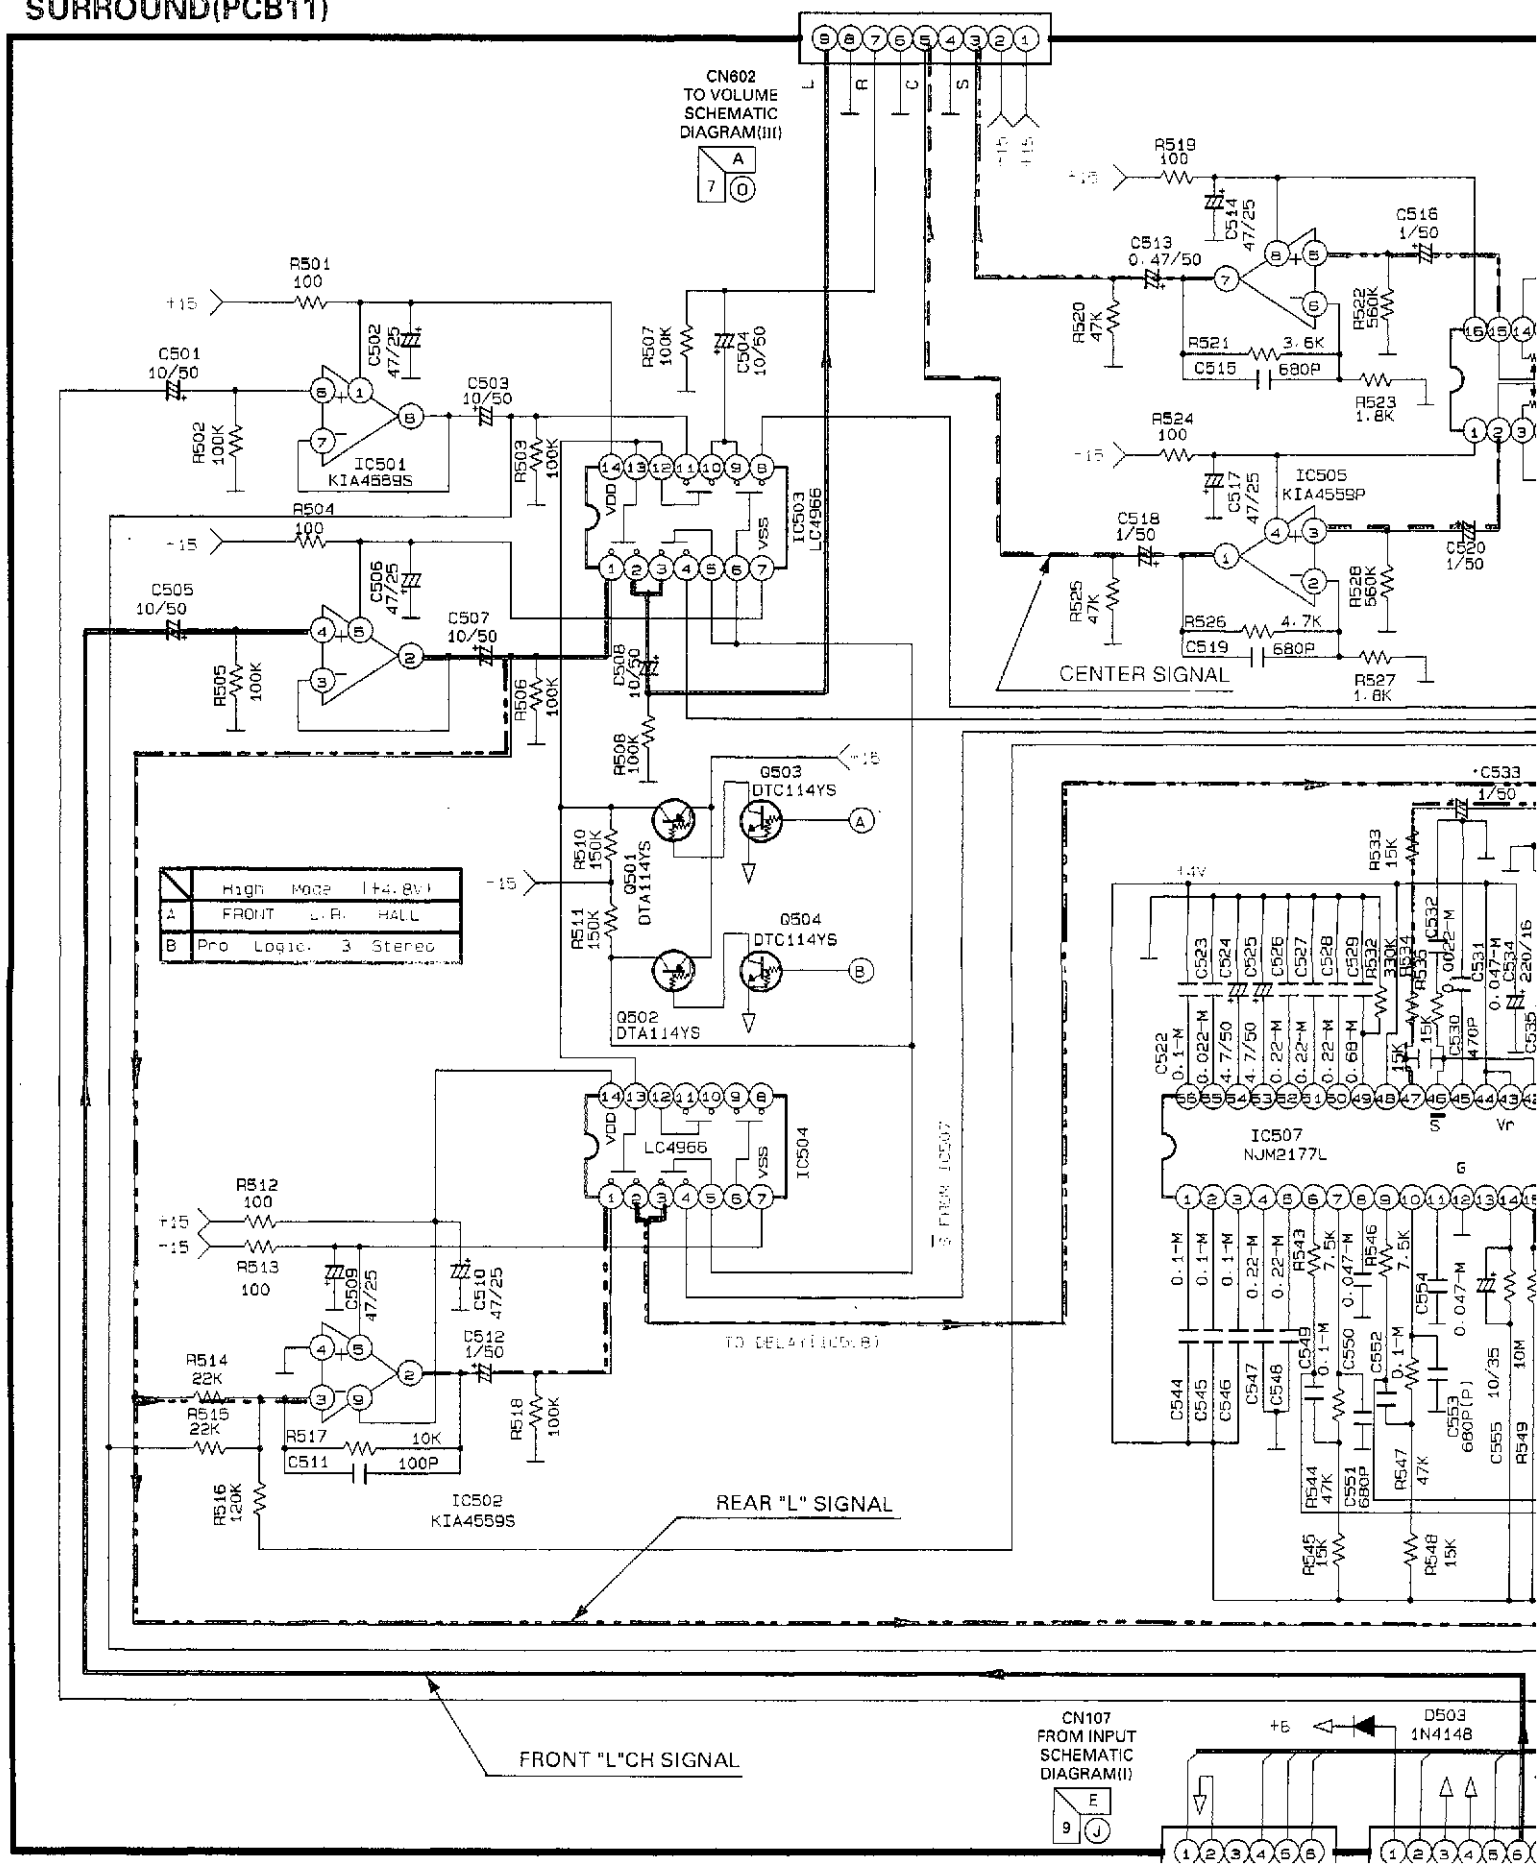

I	J	K	L	M
---	---	---	---	---



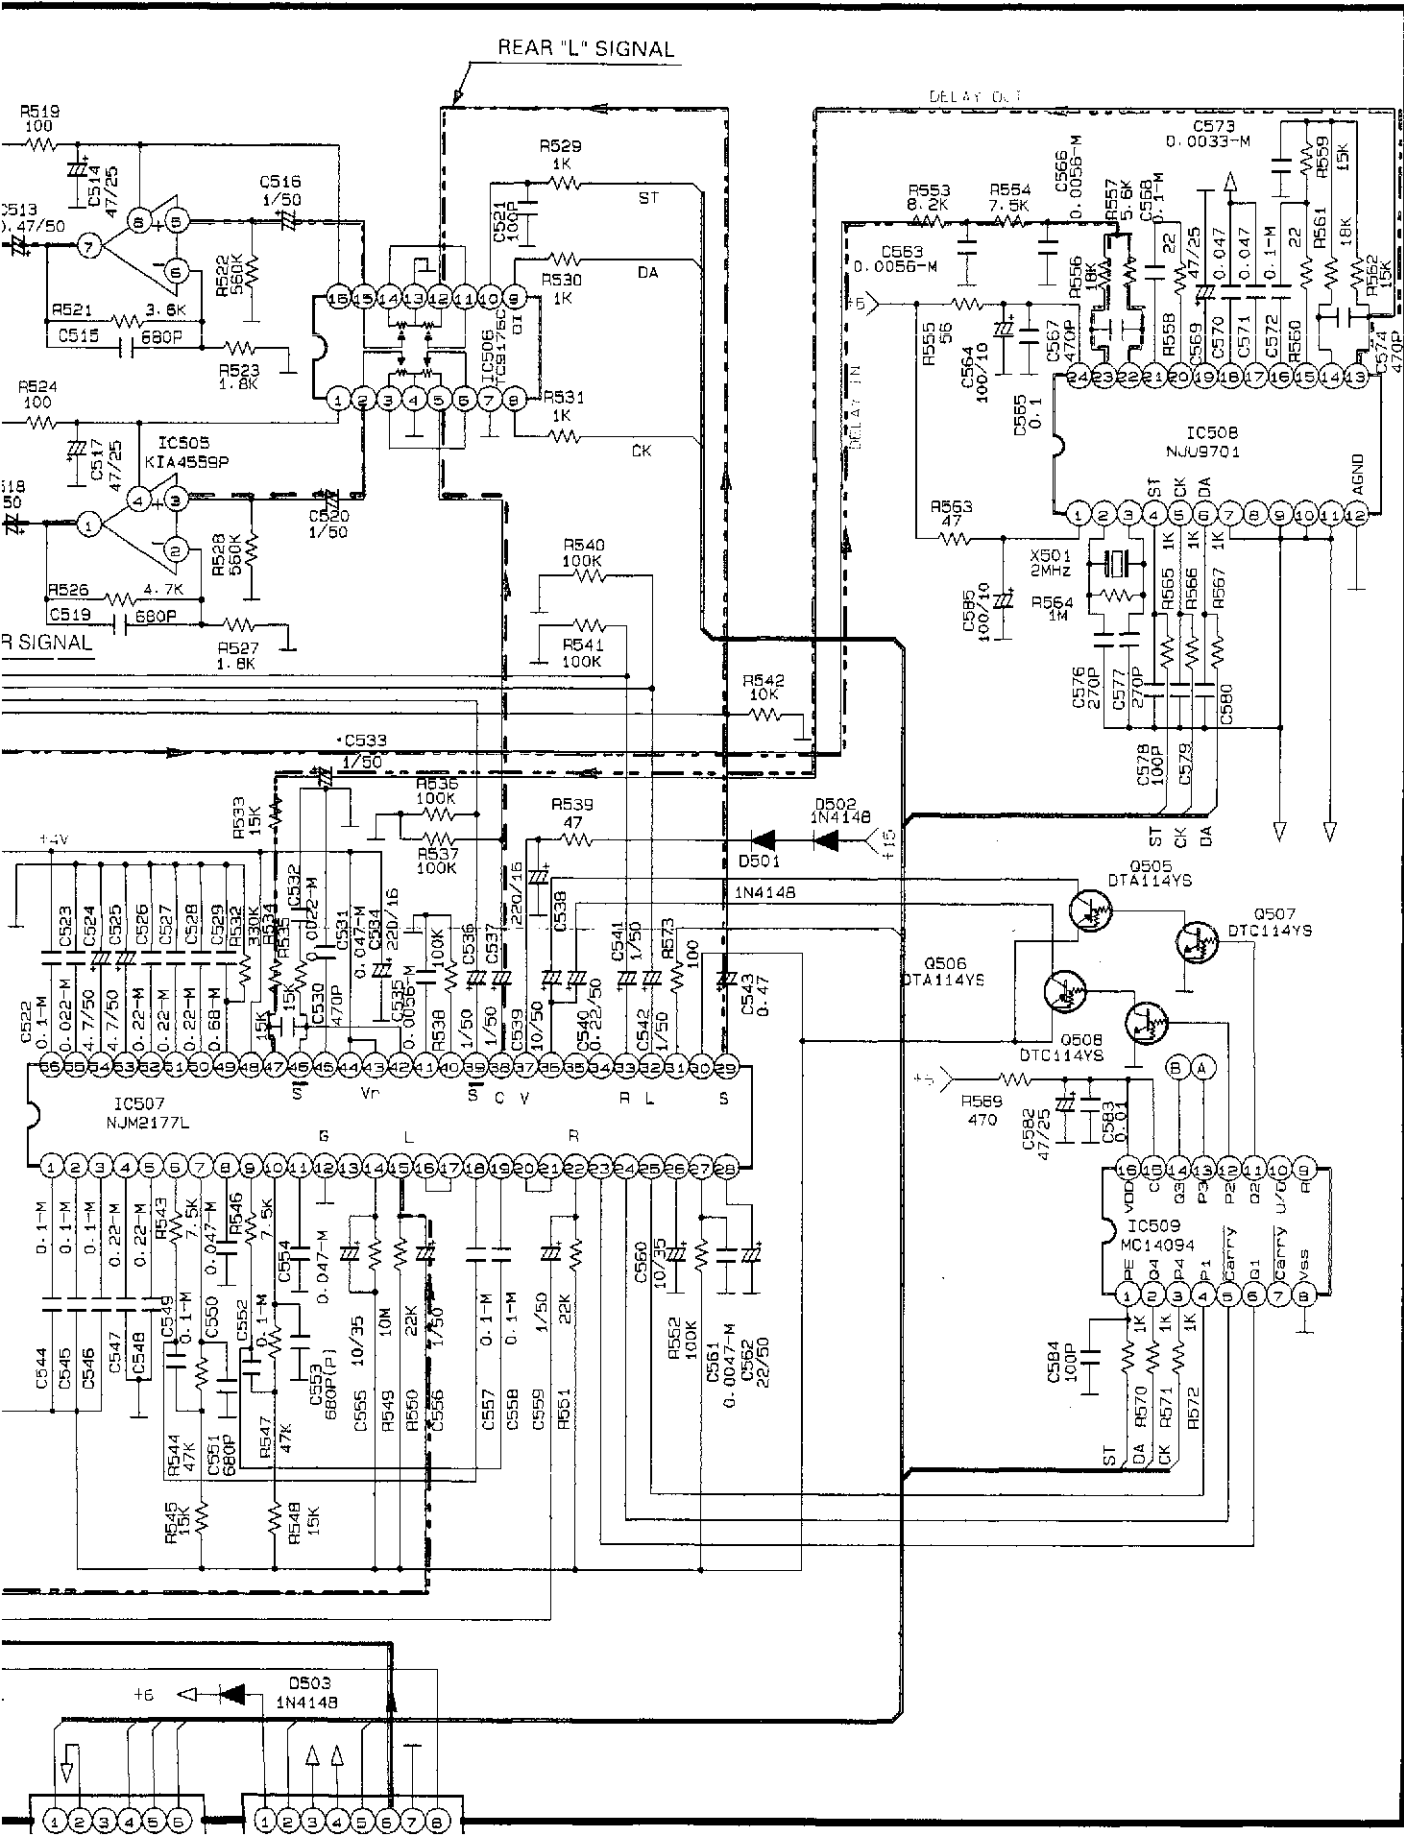


CN602
FROM SURROUND
SCHEMATIC
DIAGRAM(III)

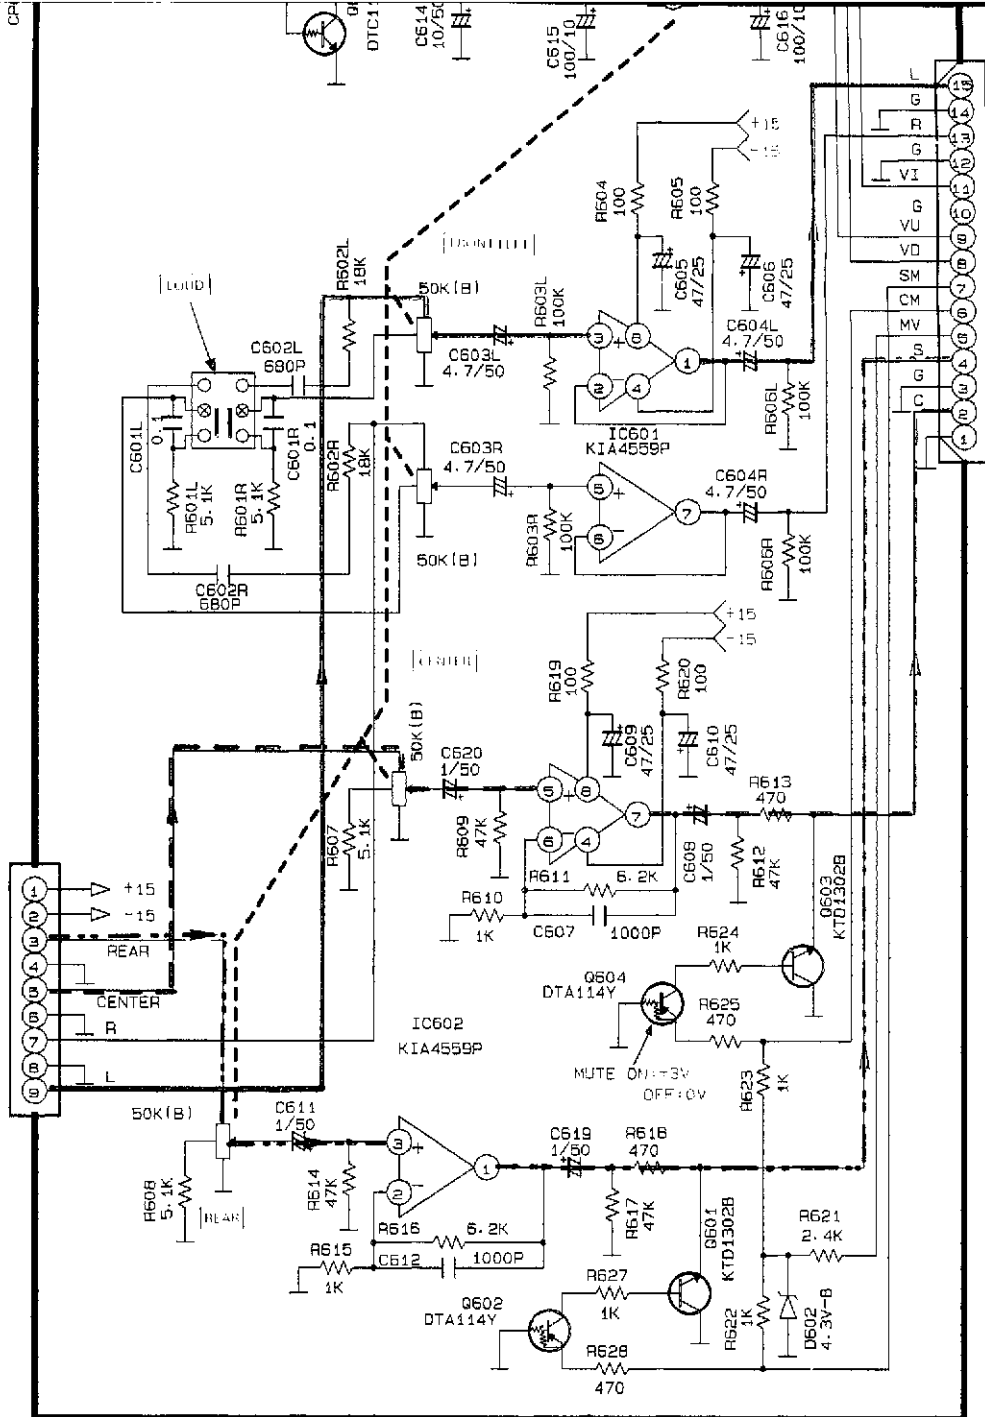

PIN CONNECTION OF TRANSISTORS, DIODES AND ICS.

<p>KTA949 KTA965 KTC2229 KTC2235</p>	<p>KTA970 KTA1015 KTD1302 KTC1815Y</p>	<p>DTA114YS DTC114YS DTC114TS</p>	<p>2SK168 2SK117</p>	<p>2SC4137</p>	<p>PX6A03 IN4002 ZENER IN4148</p>
<p>GL7806 GL7815</p>	<p>GL7915</p>	<p>LC4966</p>	<p>KIA4559P KIA6259P</p>	<p>TC9176 MC14094</p>	<p>LM701 HA120</p>

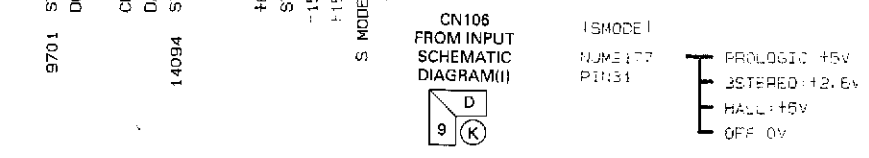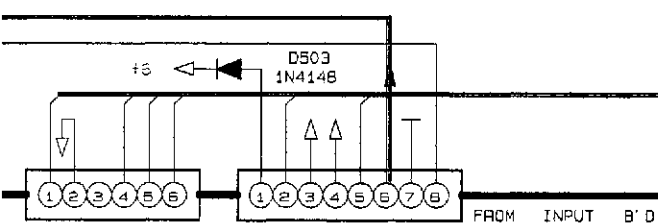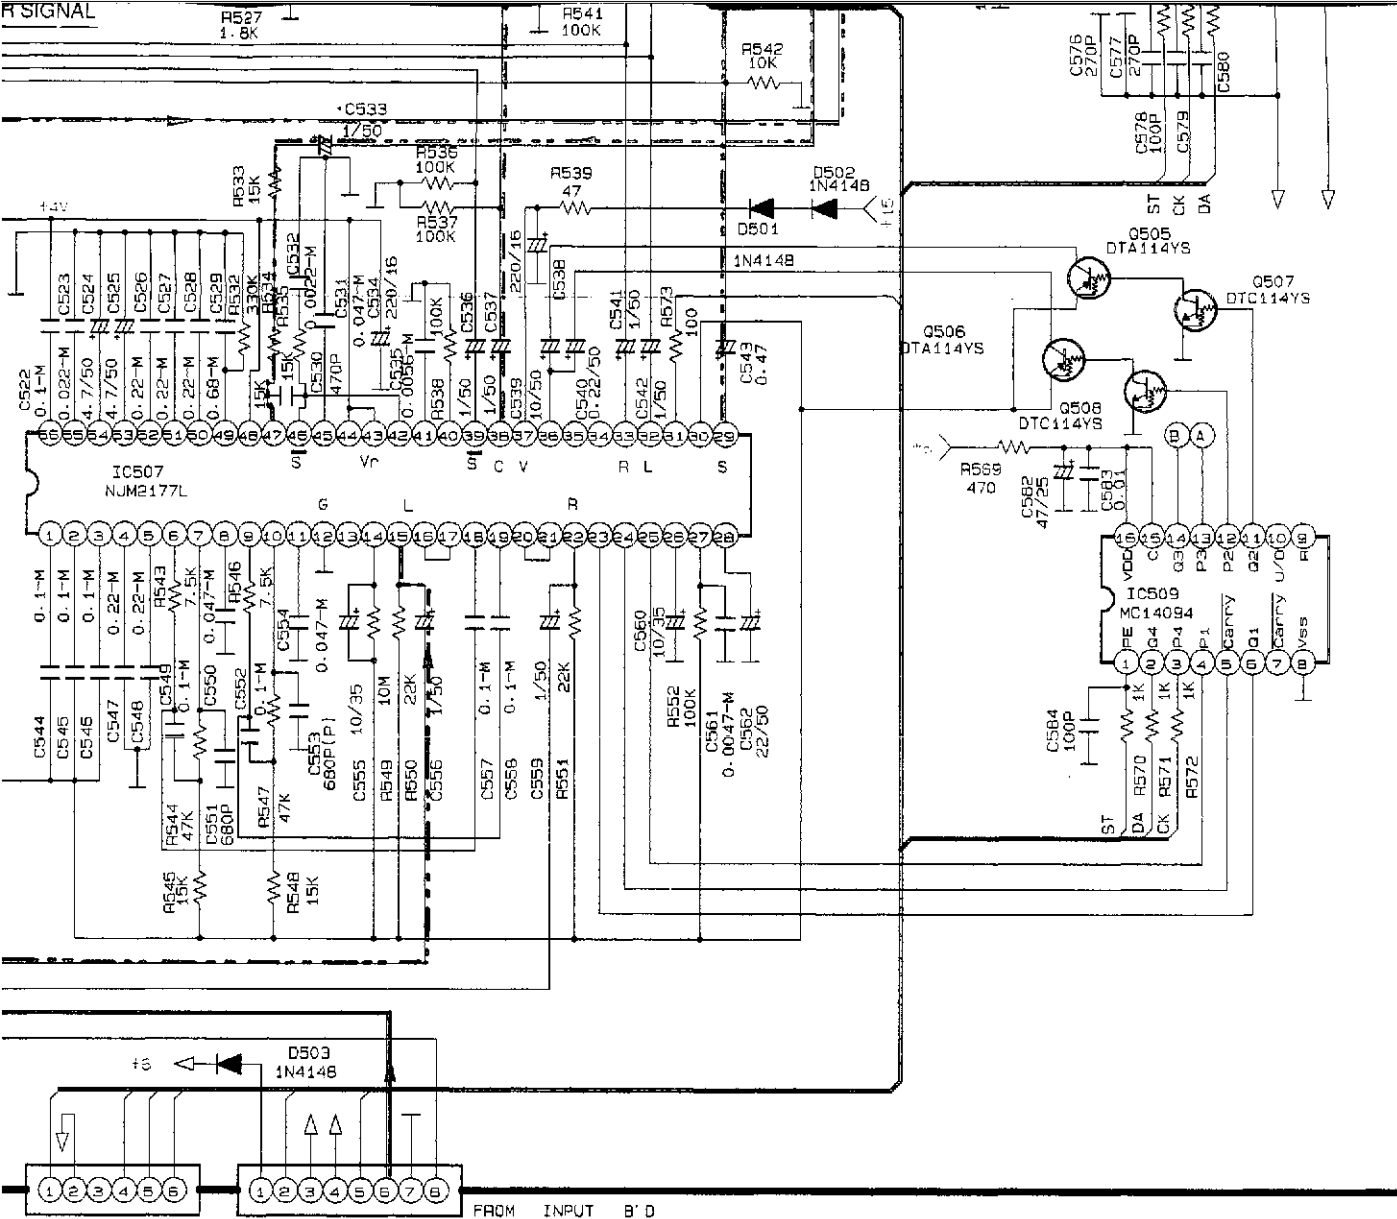




NOTES

1. Resistor values are indicated in ohms unless otherwise specified
[K=1,000 M=1,000,000]
2. Capacitor values are indicated in microfarads unless otherwise specified.
[p=micro-microfarads]

CAUTION

Safety precaution to be followed during servicing


- 1) Since those parts marked with  are critical parts for safety, use only the one described in the parts list
- 2) Before returning the set to the customer make appropriate leakage current or resistance measurements to determine the exposed parts are properly insulated from the supply circuit.

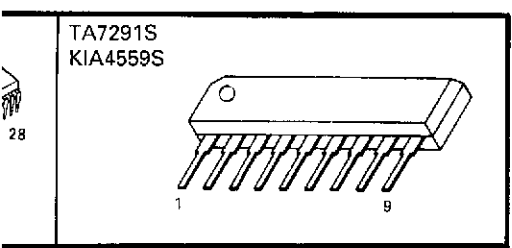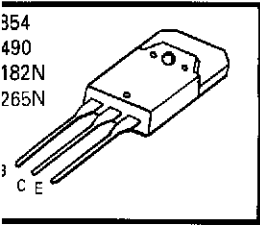

—→ FRONT "L"ch SIGNAL
 - - - - -→ REAR "L"ch SIGNAL
 - - - - -→ CENTER SIGNAL

SCHEMATIC DIAGRAM IV

FRONT(PCB4)

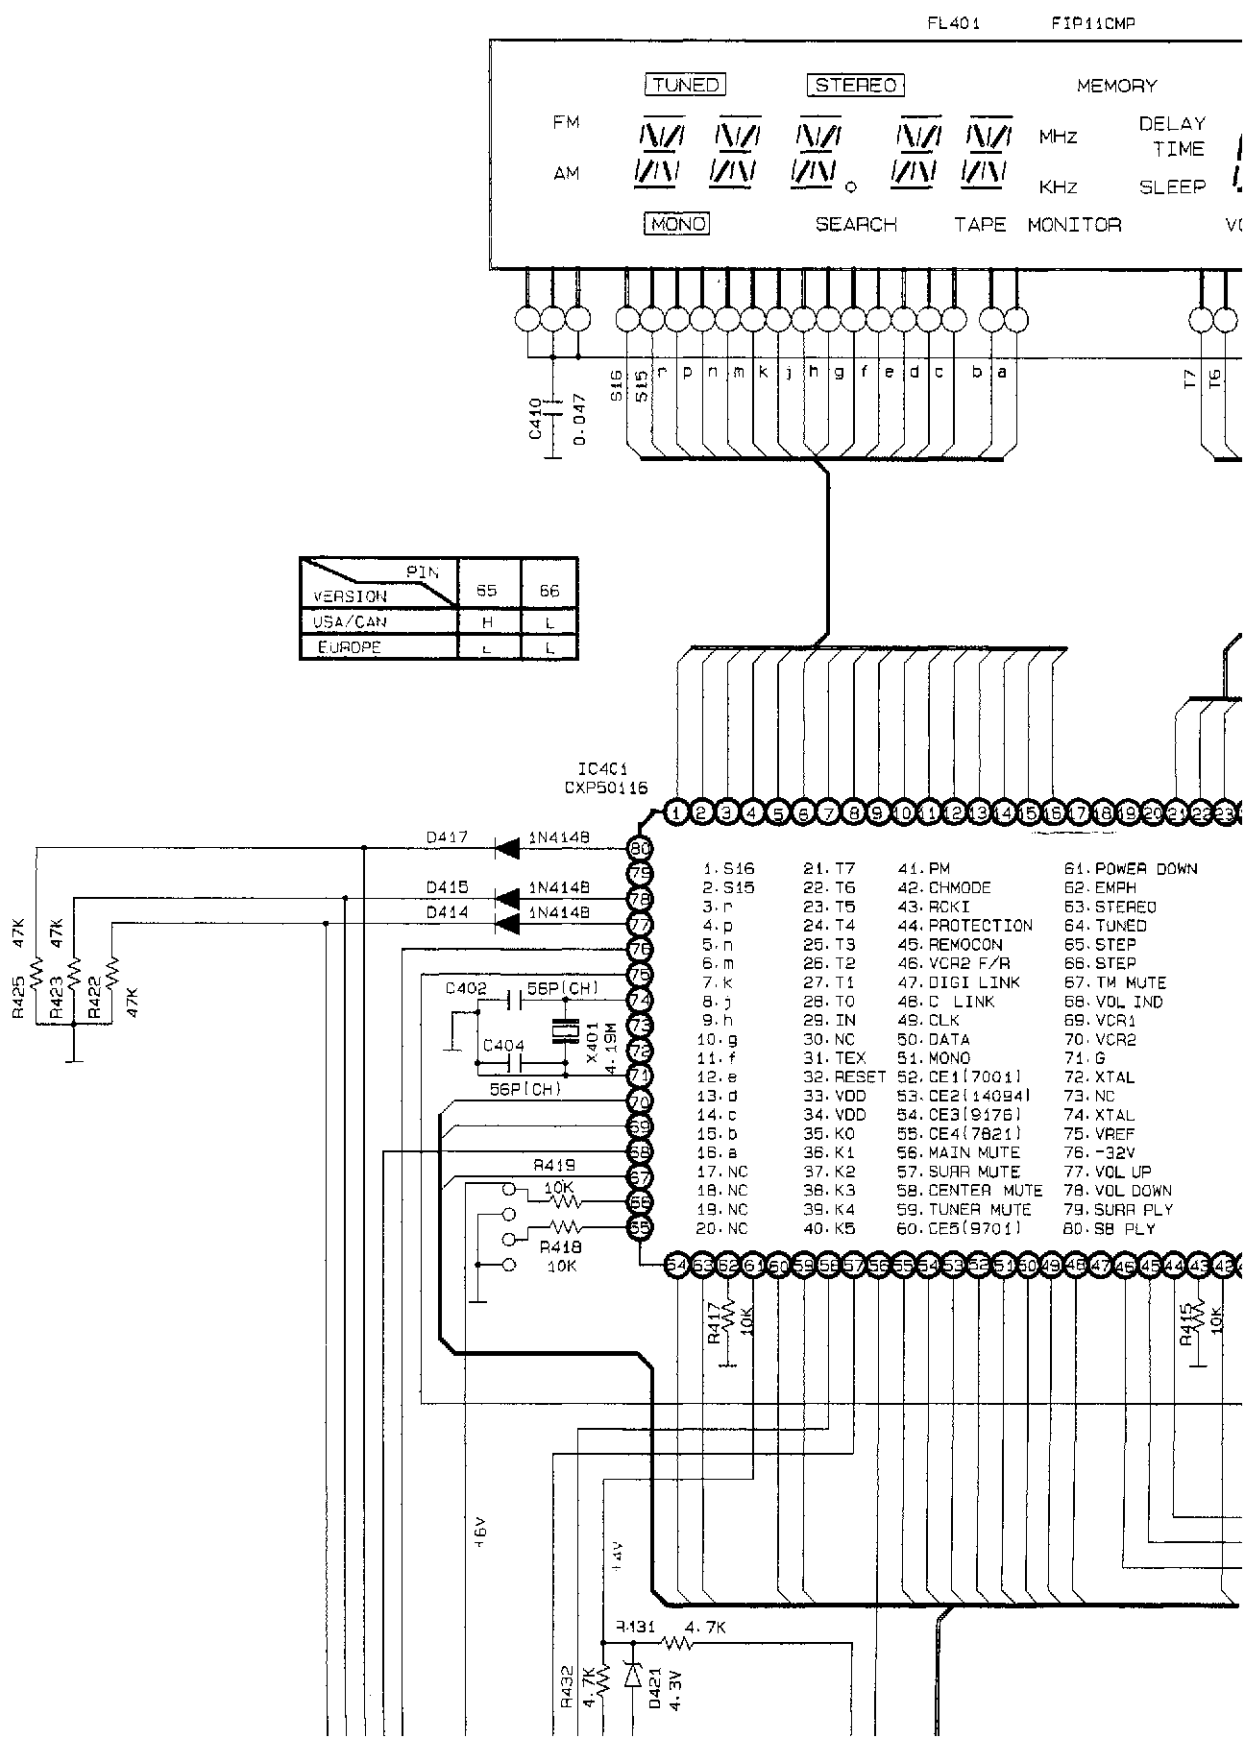


E

F

G



H


I

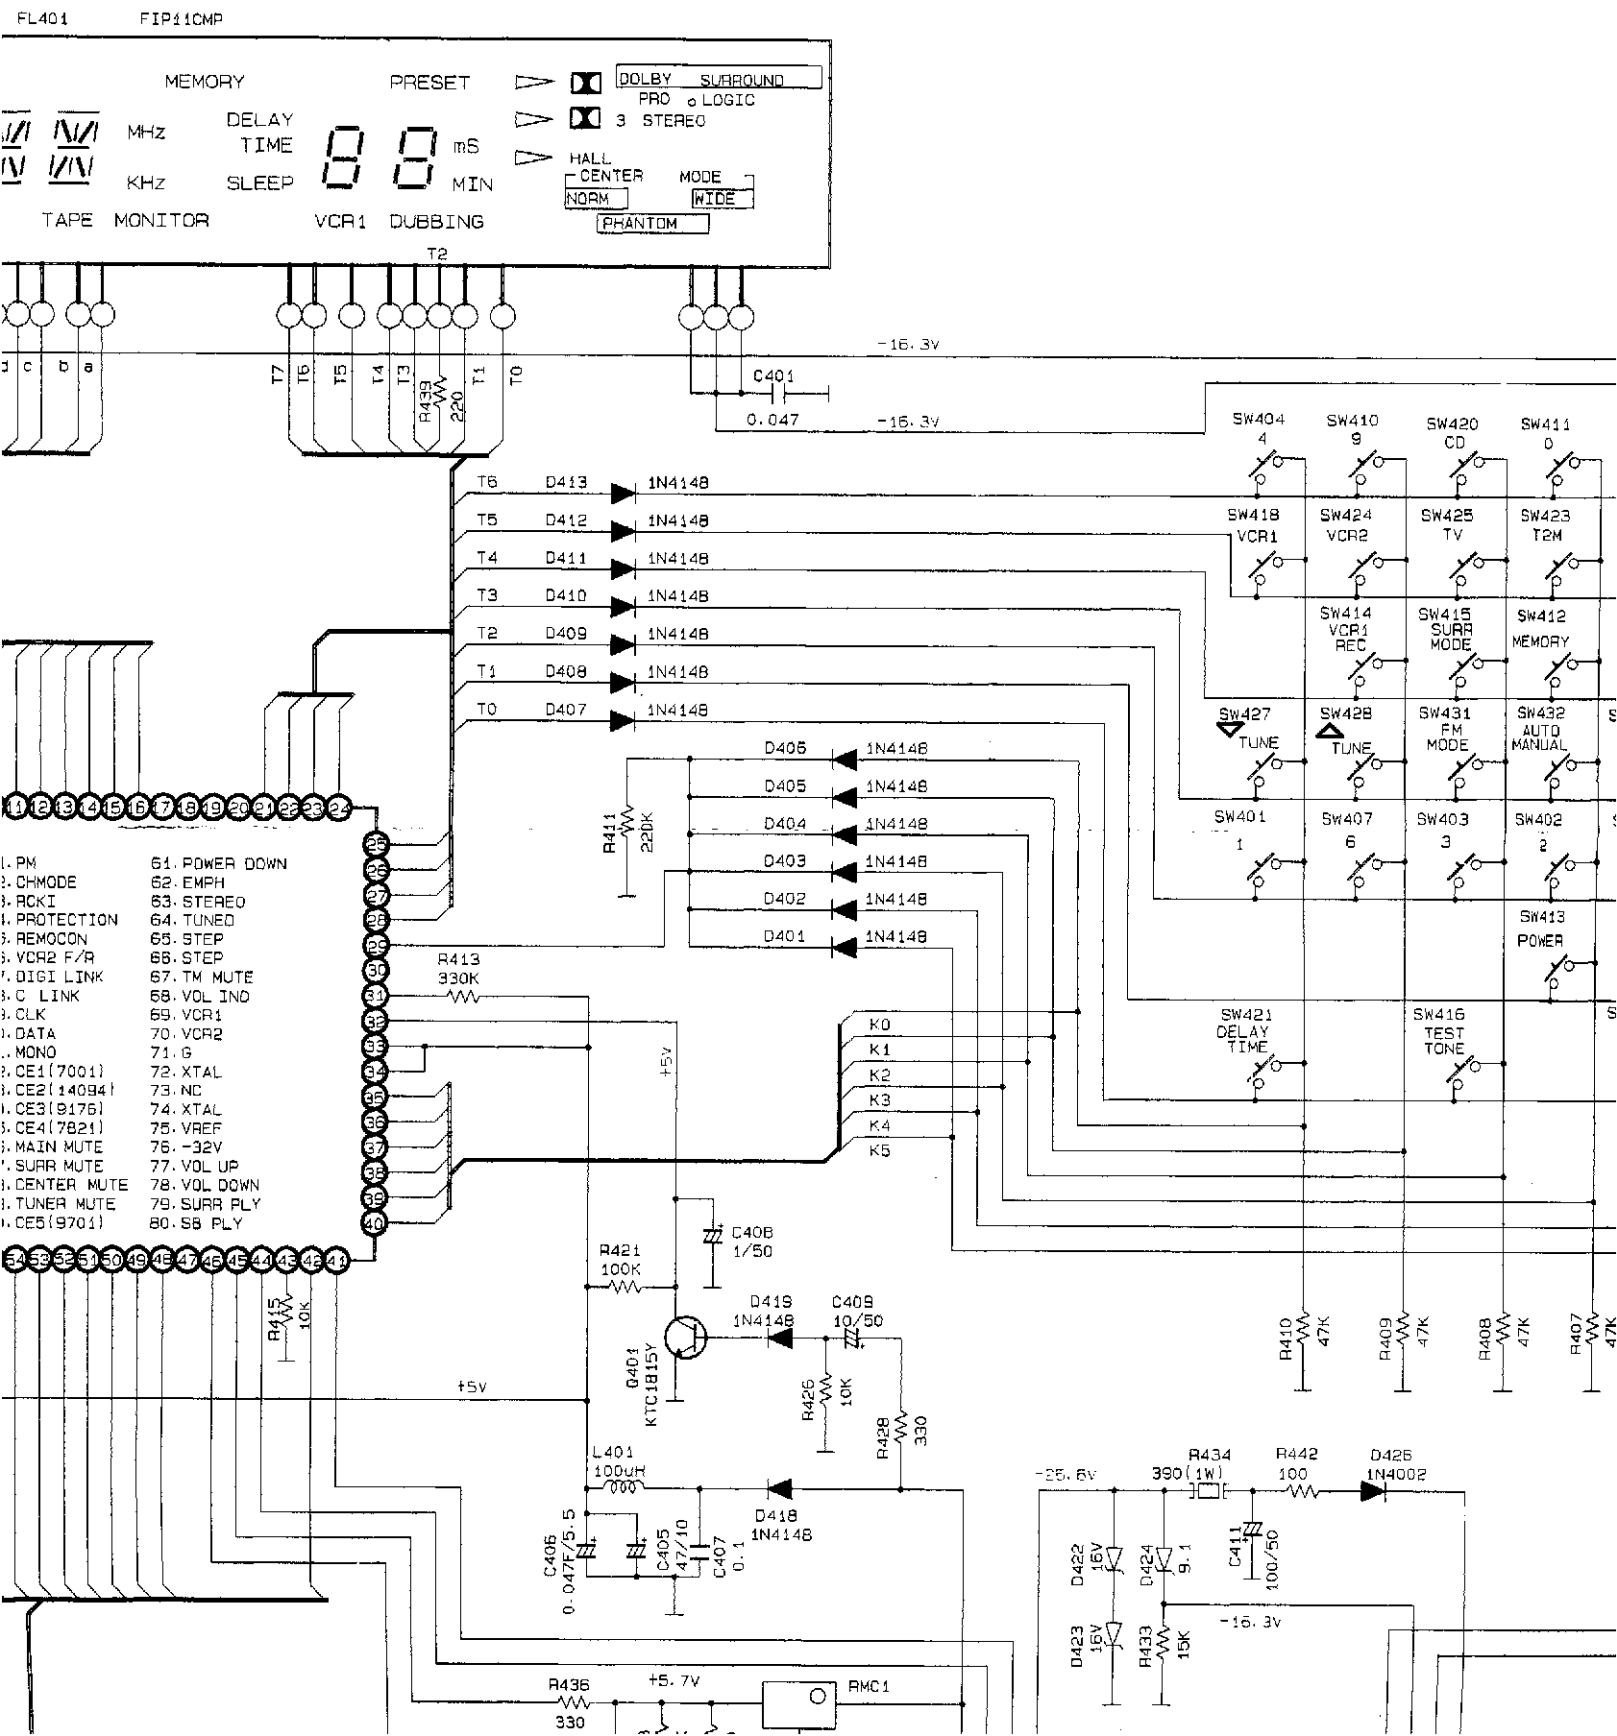


I	J	K	L	M
---	---	---	---	---



COMMANDER

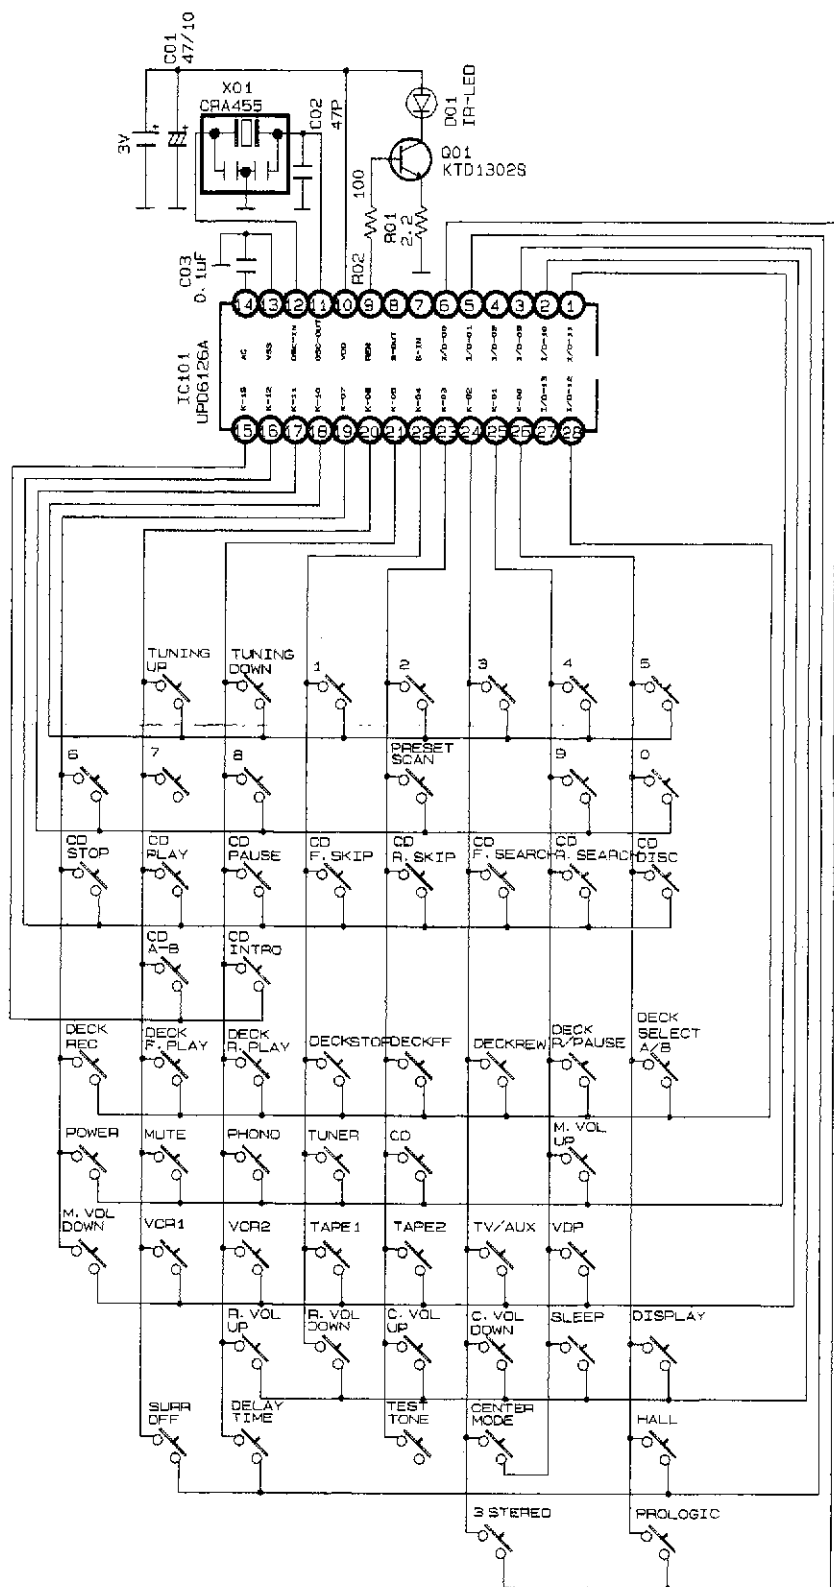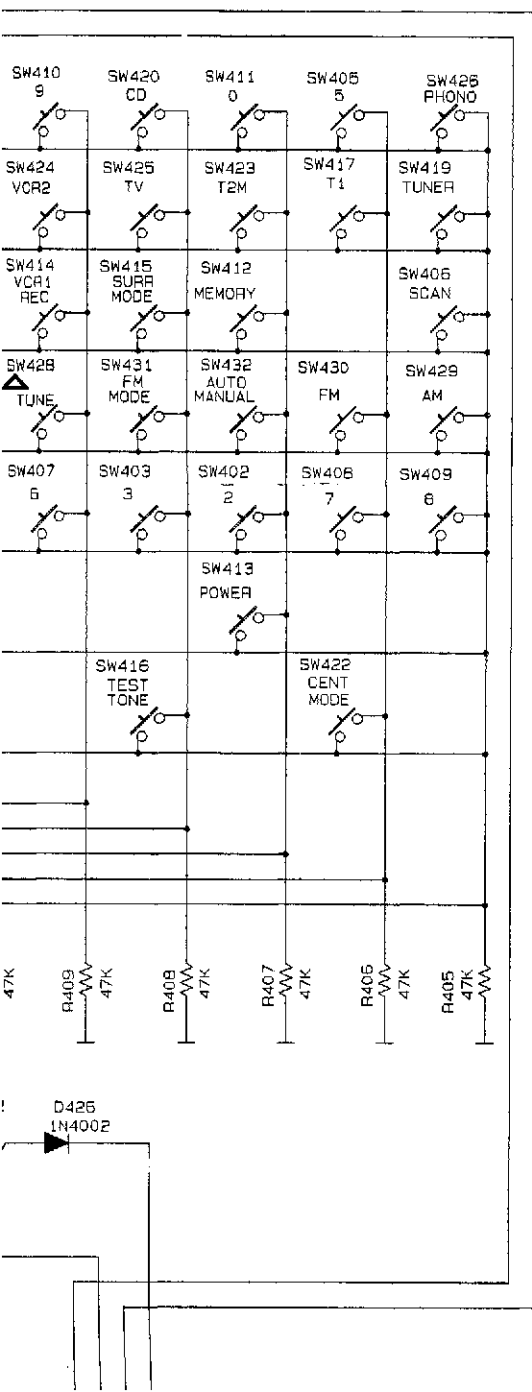

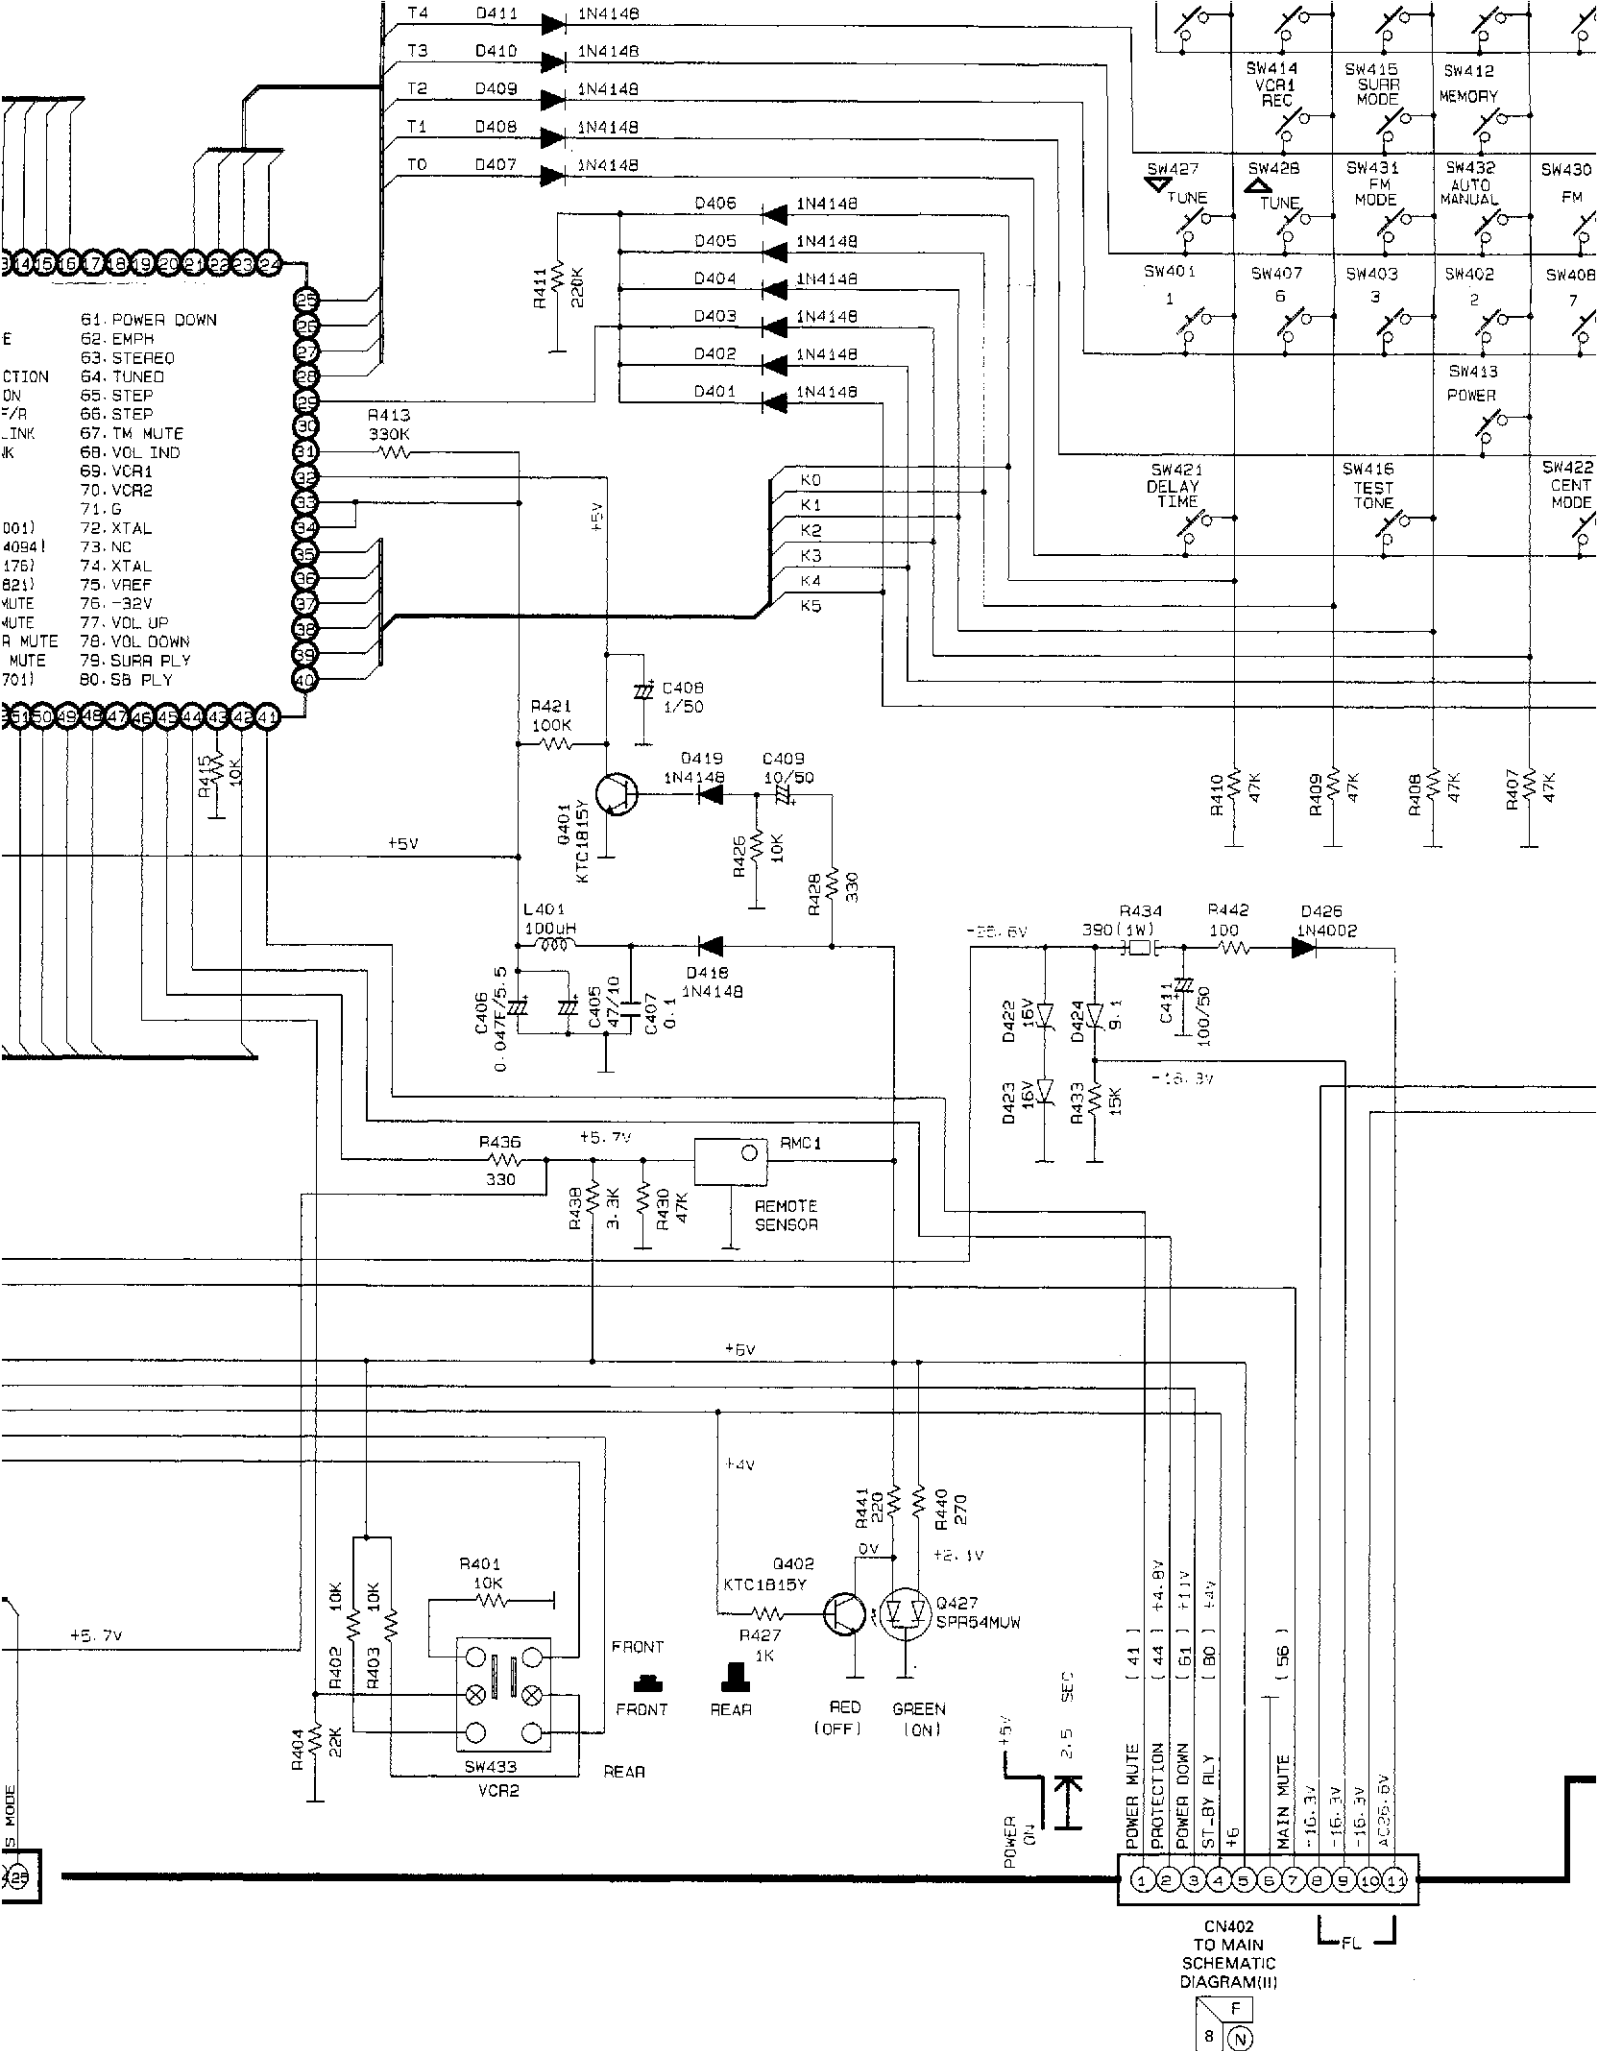

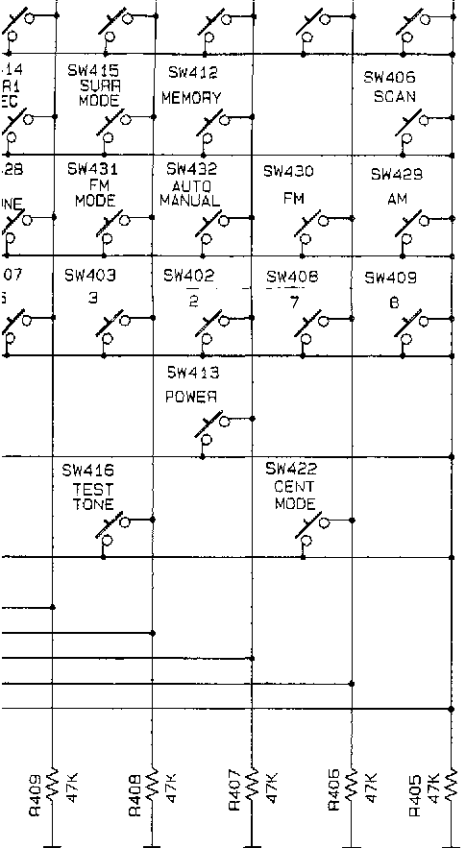

D426
1N4002

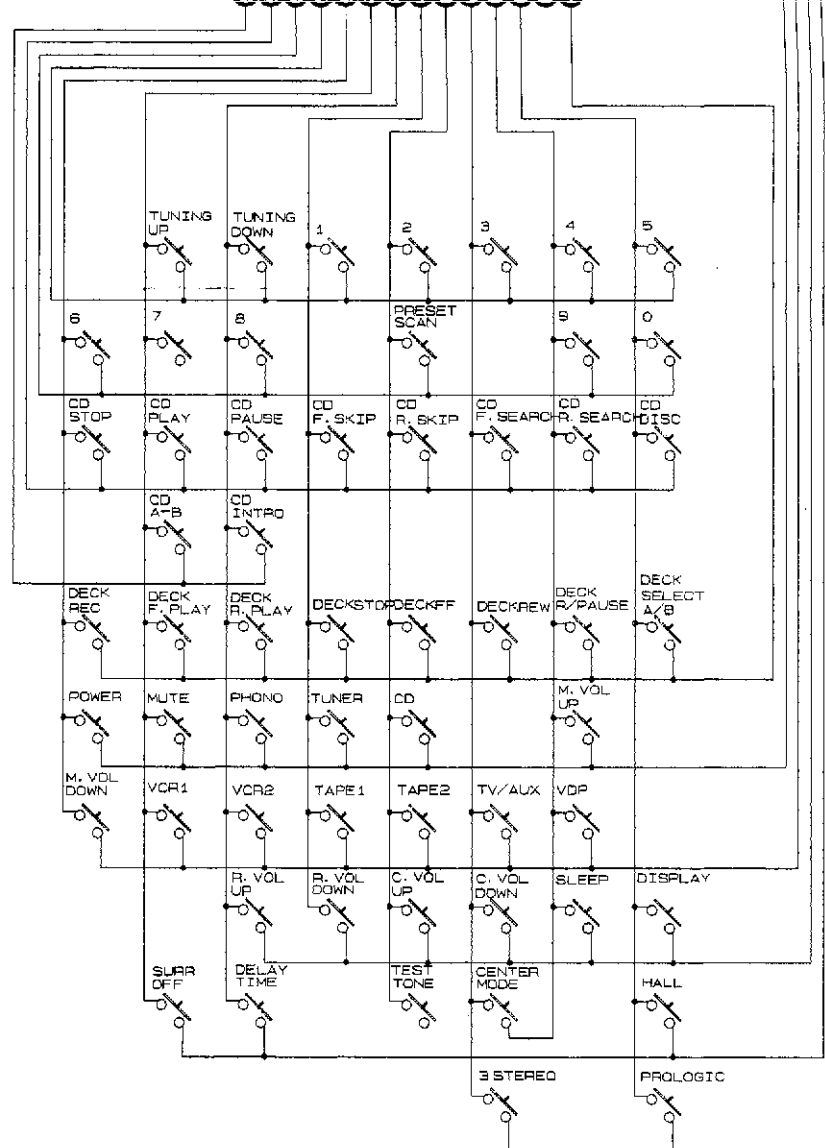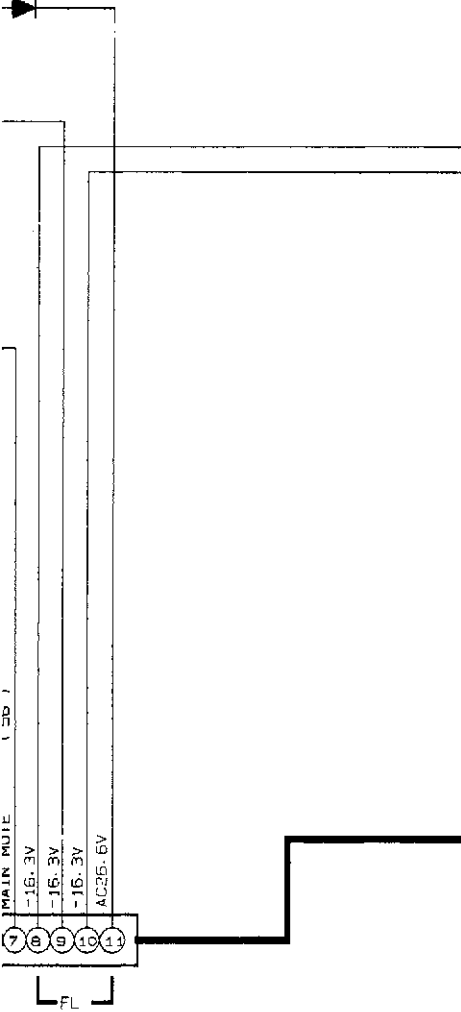


NOTES

1. Resistor values are indicated in ohms unless otherwise specified.
(K=1,000 M=1,000,000)
2. Capacitor values are indicated in microfarads unless otherwise specified.
(p=micro-microfarads)

CAUTION

Safety precaution to be followed during servicing

- 1) Since those parts marked with  are critical parts for safety, use only the one described in the parts list.
- 2) Before returning the set to the customer make appropriate leakage current or resistance measurements to determine the exposed parts are properly insulated from the supply circuit.

E

F

G

H

PCB7

4002033030C

SPEAKER B'D

PCB3

SUB-WOOFER B'D
4001002430C

RJ JR 179X ▲



PCB9

INPUT B'D
4001002700B


RJ JR 179X ▲



BAR CODE

4001002700B
RJ JR 179X ▲

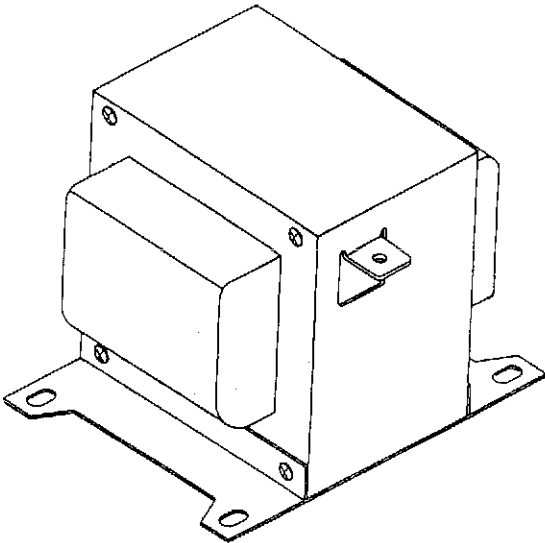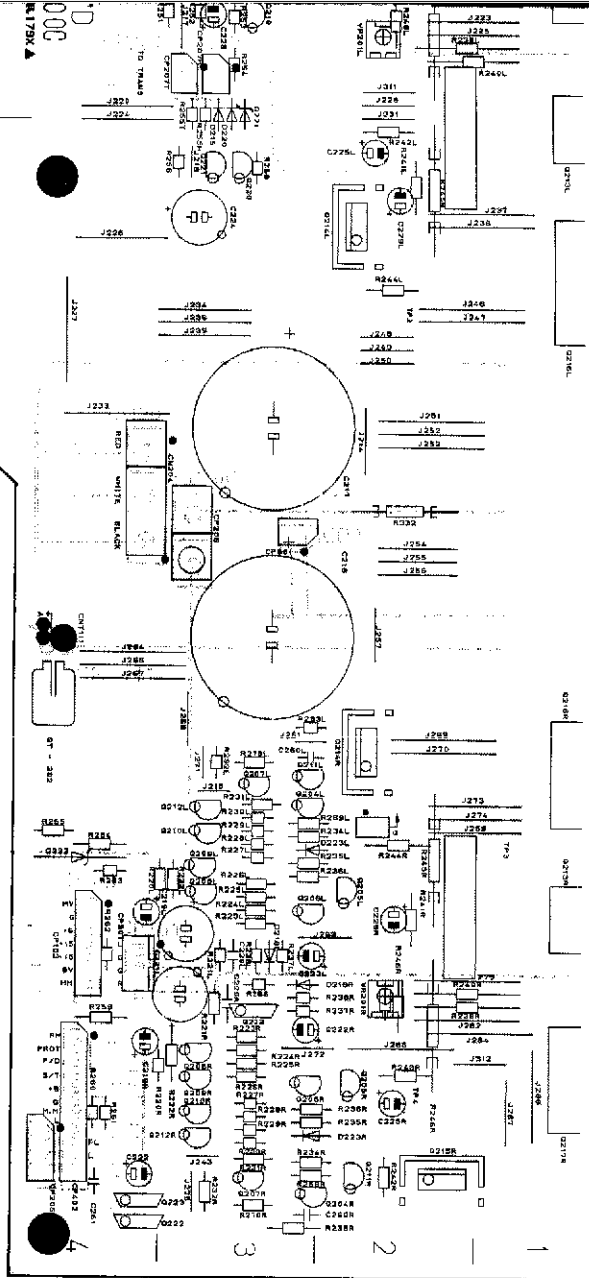

FRONT B'D
4002033000C

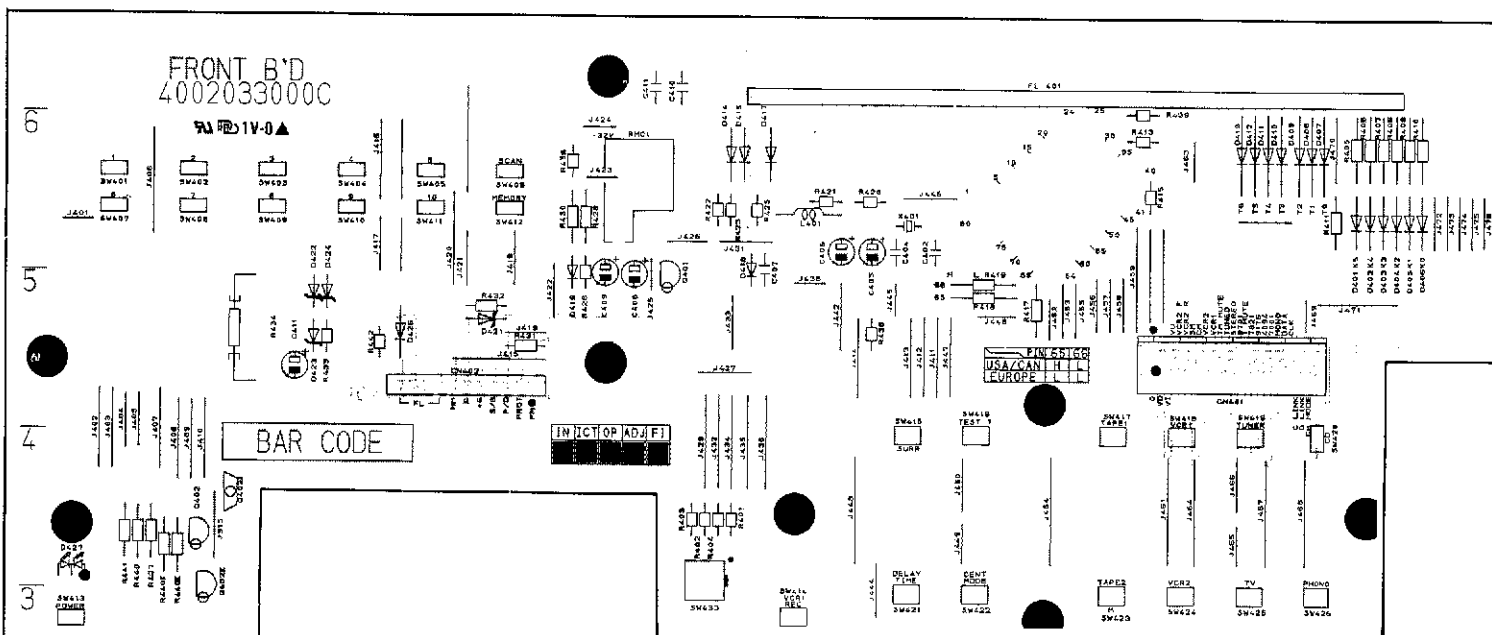

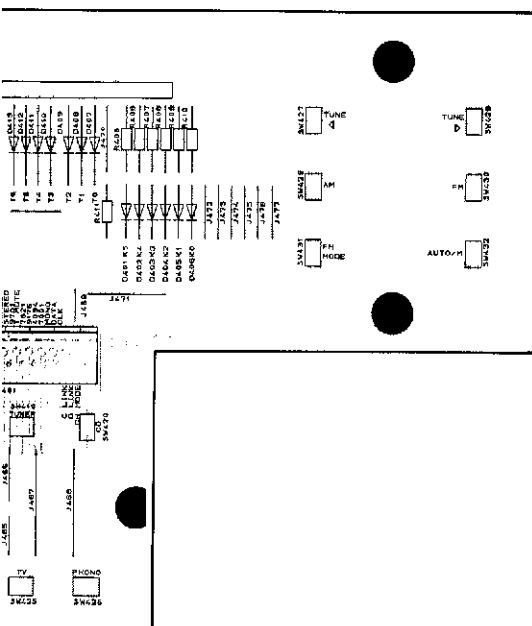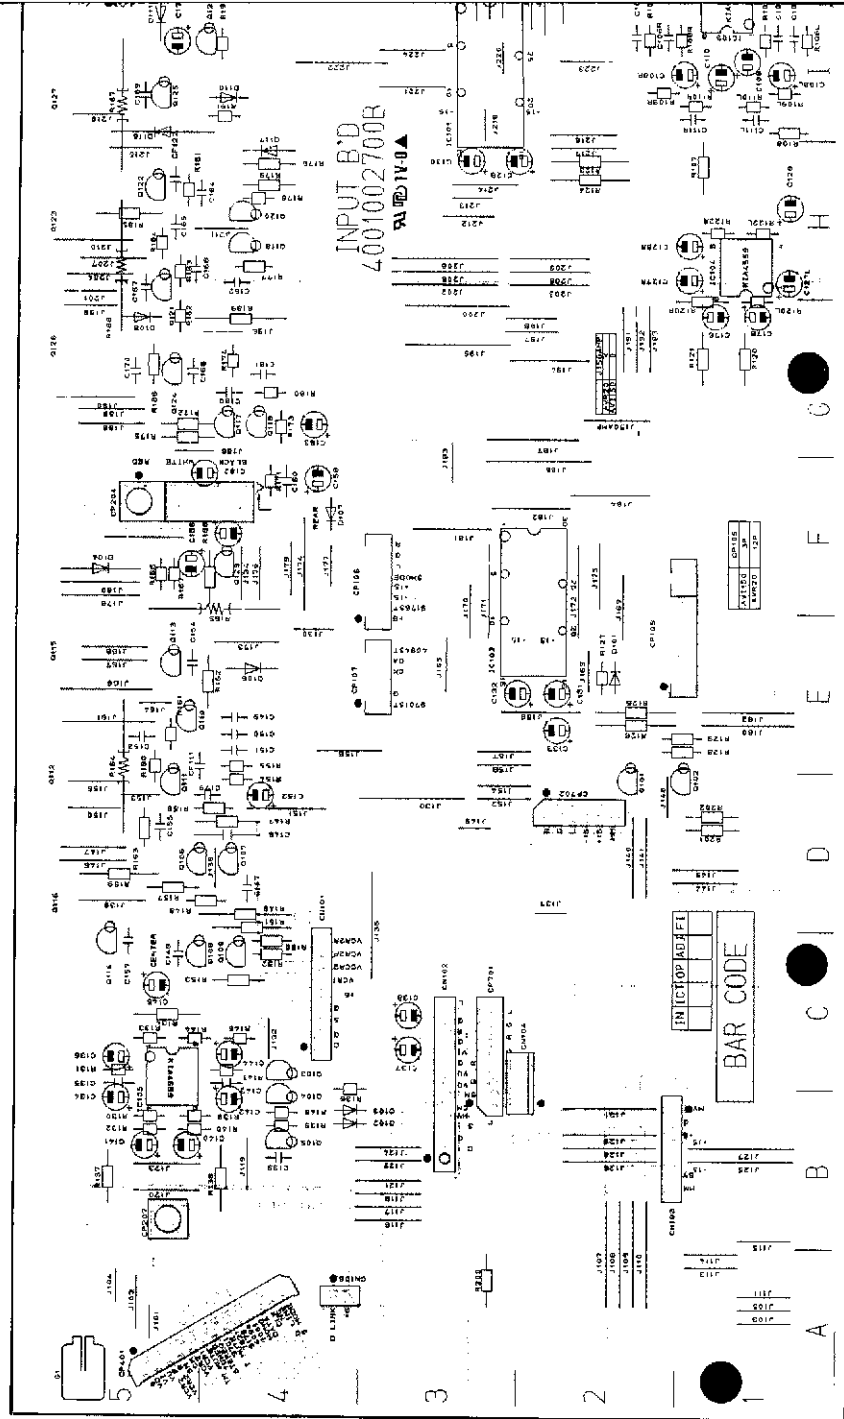

PCB5

